

This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

#### **Usage guidelines**

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

#### **About Google Book Search**

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at http://books.google.com/

# y 101.11: 11-6625-595-34

# \*TM 11-6625-595-34

Paragraph

Page



DEPARTMENT OF TECHNICAL MANUAL THE ARMY

# DS AND GS MAINTENANCE MANUAL

WATTMETER ME-82/U

UNIVERSITY OF VIRGINIA UNIVERSITY OF VIRGINIA

ALDERMAN LIBRARY

# MAY 13 1992

GOVERNMENT DOCUMENTS

# WARNING

Conform to all safety requirements applicable to the radio frequency (rf) transmitting equipment being measured or terminated when connecting or disconnecting the ME-82/U. Injury or DEATH could result from failure to comply with safe practices.

-	

CHAPTER	1.	INTRODUCTION		
Section	I.	General		
		Scope	1-1	3
		Index of publications	1-2	3
		Forms and records	1-3	3
	II.	Discription and data		
		Purpose and use	1-4	3
		Technical characteristics	1-5	8
		Description	1-6	4
CHAPTER	2.	UNPACKING AND CHECKING		
		Unpacking	2-1	5
		Checking unpacked equipment	2-2	5
CHAPTER	3.	FUNCTIONING OF ME-82/U		
		General	3-1	7
		Functioning	3-2	7
CHAPTER	4.	MAINTENANCE		
		Test equipment required	4-1	10
		Tests	4-2	10
		Replacement of parts	4-3	10
CHAPTER	5.	GENERAL SUPPORT TESTING PROCEDURES		
Section	I.	Introduction		
		General	5-1	11
		Tools, test equipment, and additional equipment	5-2	11
		Modification work orders	5-3	11
	II.	Tests		
		Physical tests and inspections	5-4	13
		Crystal diode, resistance, and meter sensitivity tests	5-5	15
		Summary of test data	5-6	18
APPENDIX.		REFERENCES		19

\* This manual supersedes TB SIG 299, 4 October 1956. Ľ



Digitized by Google

· • ....



Figure 1-1. Wattmeter ME-82/U.



# INTRODUCTION

## Section I. GENERAL

# 1-1. Scope

This manual covers direct and general support maintenance for Wattmeter ME-82/U (fig. 1-1). It includes instructions for troubleshooting, testing, and repairing of the ME-82/U, and replacing maintenance parts. It also lists equipment, tools, and materials required in performing direct and general support maintenance. The maintenance allocation chart is in TM 11-5820-303-12P and the authorized repair parts lists are in TM 11-5820-303-12P and TM 11-5820-303-35P. Functioning of the ME-82/U is covered in chapter 3.

#### 1-2. Index of Publications

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to the equipment. Department of the Army Pamphlet 310-4 is a current index of technical manuals, technical bulletins, supply manuals (type 4, 6, 7, 8, and 9), supply bulletins, supply catalogs (type CL), lubrication orders, and modification work orders available through publications supply channels. The index lists the individual parts (-10, -20, -35, etc) and the latest changes to and revisions of each equipment publication.

#### 1-3. Forms and Records

a. Reports of Maintenance and Unsatisfactory Equipment. Use equipment forms and records in accordance with the instructions in TM 38-750.

b. Report of Damaged or Improper Shipment. Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), NAVSANDA Publication 378 (Navy), and AFR 71-4 (Air Force).

c. Reporting of Equipment Manual Improvements. The direct reporting, by the individual user, of errors, omissions, and recommendations for improving this equipment manual is authorized and encouraged. DA Form 2028 will be used for reporting these improvements. This form may be completed by the use of pencil, pen, or typewriter. DA Form 2028 will be completed in triplicate and forwarded by the individual using the manual. The original and one copy will be forwarded direct to: Commanding General, U. S. Army Electronics Command, ATTN: AMSEL-MR-MA, Fort Monmouth, New Jersey, 07703. One information copy will be furnished to the individual's immediate supervisor (officer, noncommissioned officer, supervisor, etc).

# Section II. DESCRIPTION AND DATA

## 1-4. Purpose and Use

The ME-82/U provides power output indications of radio transmitters while acting as a dummy load. It is used when tuning and testing radio transmitters, and its operating instructions are provided in the applicable radio transmitter technical manuals.

#### **1-5. Technical Characteristics**

Frequency range 50 to 600 mc.

Power range.	0 to 120 watts.
Input impe-	
dance	.52 ohms.
Type of meter	200 microamperes dc, cali- brated in watts, 120 watts full scale.
Accuracy	$\pm$ 5 percent.
Type of meas-	-
urement	Am, fm, or cw.
Voltage stand- ing-wave	
<b>ratio</b>	1.2 : 1 (maximum) when terminating 52-ohm coaxial cable.
Temperature	
range	Up to 150° F.
Heat dissipating	-
facility	52-ohm resistor in an air- cooled oil bath.

#### 1-6. Description

The ME-82/U (fig. 1-1) is 6 inches wide, 7½ inches high, and  $13\%_{16}$  inches long. The heat dissipating assembly consists of an oil bath and fins surrounding the dummy load resistor. A correction chart is provided on the top of the unit (fig. 1-2) for use when measuring frequencies between 50 and 200 megacycles (mc). The main components, including the two spare crystals can be reached from the bottom of the unit (fig. 3-1).



Figure 1-2. Wattmeter ME-82/U, top view.

# **UNPACKING AND CHECKING**

#### 2-1. Unpacking

(fig. 2–1)

The ME-82/U is shipped fully assembled and ready for use. An exploded view of the packing materials is shown in figure 2-1. The packaged box is 9% inches high, 8 inches wide, 14½ inches long, and weighs 17 pounds. When unpacking the ME-82/U, perform the procedures listed (a through d) below.

*Caution:* To avoid damage to the unit, do not thrust tools into the interior of the shipping container. Do not place the container where it is likely to fall.

a. Remove the gummed paper tape that seals the top of the corrugated carton.

b. Remove the corrugated protector and cushioning material.

c. Remove the moisture-vaporproof barrier package from the shipping container.

d. Remove the moisture-vaporproof barrier from the ME-82/U.

# 2-2. Checking Unpacked Equipment

a. Check the equipment for damage incurred during shipment. Inspect the ends of the unit for coolant leakage. If the equipment has been damaged, report the damage on DD Form 6 (para 1-3).

b. Check the equipment for completeness as listed on the packing list. Report all discrepancies (para 1-3).

c. If the equipment has been used or reconditioned, see whether it has been changed by a modification work order (MWO). If the equipment has been modified, the MWO number will appear near the designation plate.

Note: Current MWO's applicable to the equipment are listed in DA Pam 810-4.





Figure 2-1. Wattmeter ME-82/U, packaging diagram.

۲

Digitized by Google 7

# **CHAPTER 3**

# FUNCTIONING OF ME-82/U

#### 3-1. General

(fig. 3-1)

The ME-82/U consists of two assemblies: the dummy load assembly, and the measuring circuit assembly. The dummy load assembly consists of a coupler and a dummy load. The measuring circuit utilizes a portion of the coupler and conventional circuits for measuring direct current (dc).

# **3-2. Functioning**

Radiofrequency (rf) input is applied through the input connector, which is physically mounted on the coupler. The rf input is applied through the transmission line of the coupler to the dummy load for dissipation. A piece of wire (Ll) is positioned adjacent to the transmission line. Coupling between the wire and the transmission line is represented by capacitor C1. Crystal diode CR1 rectifies the rf signal and causes direct current flow through resistor R2, the meter, resistor R1, and inductor L1. Capacitor C2 represents coupling from the wire to the shield of the coupler. The direct current flow through the meter is proportional to the amount of rf signal and indicated as the amount of power dissipated in the dummy load.



Figure 3-1. Wattmeter ME-82/U, bottom view.





.

Figure 3-2. Wattmeter ME-82/U, schematic diagram.



# MAINTENANCE

#### 4-1. Test Equipment Required

a. Multimeter TS-352/U, TS-352A/U, or TS-352B/U.

b. Crystal Rectifier Test Set TS-268/U, TS-268B/U, TS-268C/U, TS-268D/U, or TS-268E/U.

## 4-2. Tests

a. Crystal Diode Tests. The crystal diode is tested by use of TS-268(\*)/U or an equivalent substitute. Instructions for using the TS-268(\*)/U are contained inside the cover of the test set.

b. Dummy Load Resistance Measurement. Prepare the TS-352(\*)/U to measure resistance with the range switch operated to RX1. Connect one test lead to the center connector of the input connector of the ME-82/U and the other test lead to chassis ground. The TS-352(\*)/U shall indicate approximately 52 ohms.

#### 4-3. Replacement of Parts

a. Replacement of Crystal Diode. Replacement of the crystal diode is performed as indicated in (1) through (5) below.

- (1) Unscrew the cap connected to the coupler connector (fig. S-1).
- (2) Lift the crystal diode from the socket in the coupler.

- (3) Remove a spare crystal diode from the spare crystal diode holder.
- (4) Hold the spare crystal diode by its body and touch one finger of the hand holding the crystal diode to ground of the coupler to discharge any electrostatic charge that may be present.
- (5) Insert the crystal diode into the socket of the coupler and replace the cap on the coupler connector.

b. Replacement of Meter Assembly. Replacement of the meter assembly is performed as indicated in (1) through (7) below.

- (1) Remove the cap from the coupler connector.
- (2) Remove the plastic clamp that secures the wire to the rear of the front panel.
- (3) Remove the four screws that secure the cover plate to the top of the cabinet.
- (4) Remove the cover plate with the meter assembly attached
- (5) Remove the conductors connected to the meter terminals.
- (6) Remove the three screws that secure the meter assembly to the cover plate and remove the meter.
- (7) Replace the meter by reassembling the parts in reverse sequence to the order of disassembly.

# **GENERAL SUPPORT TESTING PROCEDURES**

## Section I. INTRODUCTION

#### 5-1. General

a. Testing procedures are prepared for use by Signal Field Maintenance Shops and Service Organizations responsible for general support maintenance of electronic equipment to determine the acceptability of repaired equipment. These procedures set forth specific requirements that repaired electronic equipment must *meet* before it is returned to the using organization. Perform the physical tests and inspections as outlined in paragraph 5-4 before proceeding to the test in paragraph 5-5. A summary of the performance standards is given in paragraph 5-6.

b. Each test depends on the preceding one for certain operating procedures and, where applicable, for test set calibrations. Comply with the instructions preceding each chart before proceeding to the chart. Perform each test in sequence. Do not vary the sequence. For each step, perform all the actions required in the *Control settings* column, and then perform each specific test procedure and verify it against its performance standard.

# 5-2. Tools, Test Equipment, and Additional Equipment

All tools (a below), test equipment (b below), and additional equipment (c below) required to perform the testing procedures in this chapter are authorized under TA 11-17, Signal Field Maintenance Shops; TA 11-100 (11-17), Allowance of Signal Corps Expendable Supplies for Signal Field Maintenance Shops, TOE 11-158D, Signal Depot Company; and TA 11-101 (11-158), Allowance of Signal Corps Expendable Supplies for Signal Depot Company, or are repair part items of the subject equipment authorized for stockage at general support maintenance level. If these procedures are performed with other types of test equipment, an allowance must be made for any test connection or test result that may differ from those given in these procedures.

a. Tools. Tools required are contained in Tool Kit, Radar and Radio Repairman TK-87/U.

b. Test Equipment.

Nomenclature	Federal stock No.	Reference
Crystal Rectifier Test Set TS-268(*)/U *	6625-188-5851	TM 11-1242
Meter Test Equipment AN/GSM-1(*) *	6625-669-0747	TM 11-2585A
Meter Test Set TS-682(*)/GSM-1 °		1 
Test Set I-49(*) *	6625-570-57 <b>22</b>	TM 11-2019
Light Assembly, Electric MX-1292/PAQ	6695-537-4470	TM 11-5540

• Crystal Rectifier Test Set TS-268/U, TS-268B/U, TS-268C/U, TS-268D/U, or TS-268E/U.

<sup>b</sup> Meter Test Equipment AN/GSM-1B or AN/GSM-1C.

Meter Test Set TS-682/GSM-1 and TS-682A/GSM-1.

<sup>4</sup> Test Set I-49, I-49A, or I-49B.

c. Additional Equipment.

Nomenclature	Federal stock No.	Reference
Power Supply PP-1097(*)/G *	6130-669-6640	TM 11-5111
Battery BA-30/U, 3 each	6135–120–10 <b>20</b>	

• Power Supply PP-1097A/G or PP-1097B/G.

# 5-3. Modification Work Orders

The tests listed in paragraph 5-5 assume that no modification work orders (MWO's) have been performed. If an MWO has been performed, allowances must be made for any change in test connections and performance standards. A current listing of MWO's will be found in DA Pamphlet 310-4.

Digitized by Google



# Section II. TESTS

# 5-4. Physical Tests and Inspections

- a. Test Equipment and Materials. Light Assembly, Electric MX-1292/PAQ.
- b. Test Connections and Conditions.
  - (1) Do not make any connections to the equipment.
  - (2) Perform the following checks after repairs are completed, prior to reassembly of the equipment.
  - (3) Connect the MX-1292/PAQ to a 115-volt, 60-cycle source and install the wide band transmission filter.
- c. Test Procedure.

ļ

ļ

	Control settings				
Step No.	Test equipment	Equipment under test	Test procedure	Control settings Performance standard	
1	N/A	N/A	a. Inspect case, cooling fins, and connectors for looseness, miss- ing parts, and damage.	a. There should be no evidence of damage, or loose or missing parts. All connectors should be securely mounted.	
			b. Inspect meter for legibility and evidence of damage.	b. Meter scale should be legible. Glass should be intact and meter should show no evi- dence of damage.	
			Caution: Before inserting the crystal diode into the socket, hold the crystal diode by its body and touch one finger of the hand holding the crystal diode to the ground section of the socket to discharge any electrostatic charge that may be present.		
			c. Remove crystal CR1 from re- sistor-coupler assembly and spare crystals from holder. Inspect for damage and cor- rect number and type.	c. Crystals should show no evi- dence of damage. Crystal type should be 1N21B. There should be 2 spare crystals.	
			d. Inspect the cable for condition of insulation.	d. Insulation should be free from cracks and fraying.	
			e. Inspect metal surfaces for con- dition of finish.	e. All metal surfaces intended to be painted should not show bare metal.	
			Note: Touchup painting is recommended in lieu of refinishing whenever practicable.		
			f. Check equipment for applicable MWO's and note any MWO's not performed. (See DA Pam 810-4 for a list of MWO's.)	f. If MWO is performed, MWO number appears on equip- ment.	
2	<i>MX-1392/PAQ</i> 245V FOR M. V. Lamp: ON	N/A	<ol> <li>Expose chassis to direct rays of MX-1292/PAQ and inspect condition of moisture and fungiproofing (MFP) varn- ish.</li> <li>Note: MFP varnish appears blue-green when exposed to rays of the MX-1292/PAQ.</li> </ol>	a. Meter terminal connections and all bare metal (except con- nector contacts and spare crystals) should be completely covered with MFP varnish. Note: Do not apply varnish to parts that were not originally finished with MFP varnish.	
			b. Turn off the MX-1292/PAQ.	b. None.	

Digitized by Google



Digitized by Google

# 5-5. Crystal Diode, Resistance, and Meter Sensitivity Tests

- a. Test Equipment and Materials.
  - (1) Crystal Rectifier Test Set TS-268(\*)/U.
  - (2) Meter Test Set TS-682/GSM-1 or TS-682A/GSM-1 (p/o AN/GSM-1B or AN/GSM-1C).
  - (3) Test Set I-49(\*) (p/o AN/GSM-1B).
  - (4) Power Supply PP-1097(\*)/G.
  - (5) Test cord terminated with spade lug on each end (p/o AN/GSM-1B).
  - (6) Test cord terminated with spade lug and PL-68 (p/o AN/GSM-1B).
  - (7) Alligator clip, screw terminal, 2 each (p/o AN/GSM-1B).
  - (8) Cord CX-25A/GSM-1 (p/o AN/GSM-1B).
  - (9) Cord CX-25B/GSM-1B (p/o AN/GSM-1B).
  - (10) Test Lead Set CX-1331(\*)/U (p/o TS-352/U).
  - (11) Batteries BA-30/U, 3 each.
- b. Test Connections and Conditions. None.
- c. Test Procedure.

Ca		ings		
Step No.	Test equipment	Equipment under test	Test procedure	Performance standard
1	TS-\$68(*)/U	N/A	CRYSTAL DIODE TESTS a. Operate ADJUST METER con- trol for full scale deflection on meter (0 ohm) of TS- 268(*)/U. Note: On TS-268D/U, the PUSH TO OPERATE switch must be depressed to obtain meter indication.	a. None.
			<ul> <li>b. Operate meter selector switch to ADJ. METER (right posi- tion) and vary ADJ. METER control until meter pointer indicates full scale (0 ohm) position.</li> <li>Caut'. n: Before inserting crystal into crystal holder, hold crystal by its body, and touch one finger of hand (which is holding crystal) to ground section of crystal holder to discharge any electrostatic charge that may be present.</li> </ul>	b. None.
			c. Insert crystal diode into crystal holder of TS-268(*)/U.	c. None.
			d. Repeat the procedure given in a above.	d. None.
			e. Operate selector switch to FWD RES (TS-268/U) or FRONT RES (TS-268B/U, TS-268C/ U, and TS-268D/U) and read forward resistance of crystal in kilohms on upper scale of meter.	e. Forward resistance should not be greater than 0.5 kilohm (500 ohms).



	Control settings		
Step No.	Test equipment	Equipment under test	Test procedure Performance standard
			<ul> <li>f. Operate selector switch to BACK RES and read reverse resistance to forward resistance (s above) should be greater than 10 to 1.</li> <li>g. Repeat procedures in b above.</li> <li>h. Operate selector switch to BACK CURRENT and read current indication on MA scale of meter.</li> <li>i. Remove crystal diode and re- place it in ME-82/U.</li> <li>j. Repeat the procedures in a through i above for both spare crystal diodes in the ME- 82/U.</li> <li>k. Turn off the TS-268(*)/U in the following manner: TS-268/U: Operate se- lector switch to OFF. TS-268B/U and TS-268 C/U: Operate AD- JUST METER con- trol completely counterclockwise. TS-268D/U: Release PUSH TO OPER- ATE switch.</li> <li>f. Ratio of reverse resistance to forward resistance (s above) should be greater than 10 to 1.</li> <li>g. None.</li> <li>h. Meter pointer should indicate out of the POOR (green) area of the colored scale.</li> <li>i. None.</li> </ul>
2	I-49(*) Pointer lock: operated toward	N/A	DUMMY LOAD RESISTANCE TEST a. Install three batteries BA-30/U a. None. in the I-49(*).
	BA switch: INT GA switch: RVM RES-VAR-MUR dial: RES MULTIPLY BY dial: 1/1 Units decade dial: 0 Tens decade dial: 5 Hundreds decade dial: 0 Thousands decade dial: 0		<ul> <li>b. Position galvanometer pointer by loosening galvanometer screw and adjusting the zero- ing knob.</li> <li>Nots: The I-49(*) must be placed on a level surface to obtain accurate readings.</li> <li>c. Connect a jumper between line binding posts X1 and X2. Depress GA SENS .01 switch momentarily. If pointer de- flects to the left (-) and returns to center, the I-49(*) is ready for use. If pointer deflects to right (+), reverse polarity of batteries. If pointer does not deflect, test set is faulty and should be replaced.</li> <li>d. Remove jumper from binding posts X1 and X2 and connect equipment as shown in A, figure 5-1.</li> <li>b. None.</li> </ul>

Test equipment PP-1097(*)/G POWER: OFF	Equipment under test	Text procedurePerformance standarde. Operate MULTIPLY BY dial to 1/100 and thousands decade dial to 5, hundreds decade dial to 2, and tens decade dial to 0.e. None.f. Depress GA SENS .01 switch and note direction of move- ment of pointer. If movement was to right, increase resis- tance of decade dials until pointer does not move from 0 with GA SENS .01 switch 
<i>PP-1097(*)/G</i> POWER: OFF	N/A	<ul> <li>e. Operate MULTIPLY BY dial to 1/100 and thousands decade dial to 5, hundreds decade dial to 2, and tens decade dial to 2, and tens decade dial to 2, and tens decade dial to 0.</li> <li>f. Depress GA SENS .01 switch and note direction of move- ment of pointer. If movement was to right, increase resis- tance of decade dials until pointer does not move from 0 with GA SENS .01 switch depressed. If pointer moves to left, decrease resistance total on decade dials. Repeat above procedure, using GA SENS .1 and the GA SENS 1 switches.</li> <li>g. Operate INT-EXT-BA switch to EXT and pointer lock to locked position. Disconnect test setup and remove bat- teries from I-49(*).</li> <li>METER SENSITIVITY TESTS a. Remove crystal diode and meter from ME-82/U and mount</li> <li>e. None.</li> </ul>
<i>PP-1097(*)/G</i> POWER: OFF	N/A	<ul> <li>f. Depress GA SENS .01 switch and note direction of move- ment of pointer. If movement was to right, increase resis- tance of decade dials until pointer does not move from 0 with GA SENS .01 switch depressed. If pointer moves to left, decrease resistance total on decade dials. Repeat above procedure, using GA SENS .1 and the GA SENS 1 switches.</li> <li>g. Operate INT-EXT-BA switch to EXT and pointer lock to locked position. Disconnect test setup and remove bat- teries from I-49(*).</li> <li>METER SENSITIVITY TESTS a. Remove crystal diode and meter from ME-82/U and mount</li> <li>f. I-49(*) galvanometer is b anced at 52 ohms ± 2.</li> <li>a. None.</li> </ul>
<i>PP-1097(*)/G</i> POWER: OFF	N/A	<ul> <li>g. Operate INTERTER switch g. None.</li> <li>to EXT and pointer lock to locked position. Disconnect test setup and remove bat- teries from I-49(*).</li> <li>METER SENSITIVITY TESTS         <ul> <li>a. Remove crystal diode and meter from ME-82/U and mount</li> <li>a. None.</li> </ul> </li> </ul>
<i>PP-1097(*)/G</i> POWER: OFF	N/A	METER SENSITIVITY TESTS a. Remove crystal diode and meter a. None. from ME-82/U and mount
		meter on mounting MT-185 A/GSM-1.
OUTPUT VOLTAGE		<ul> <li>b. Connect equipment as shown in b. None.</li> <li>B and C of figure 5-1.</li> </ul>
ADJUST: completely counterclock- wise		c. Operate POWER switch on PP- 1097(*)/G to ON and allow a 5-minute warmup period.
TS-68 <b>8(*</b> )/ GSM-1		
AC LINE ON- OFF: OFF BATTERY: OFF		d. Slowly operate OUTPUT d. None. VOLTAGE ADJUST control for 12 volts indication of DC VOLTS meter of PP-1097 (*)/G.
ALT CURRENT AC VOLTS DC VOLTS FINE CONTROL: completely counterclock- wise		e. Adjust DC METER (TS-682/ GSM-1) or DC MICRO- AMPERES (TS-682A/GSM- 1) meter to zero by means of zero adjusting control located below the meter.
ALT CURRENT AC VOLTS DC VOLTS COURSE CONTROL:		Note: To overcome internal friction of meter, tap meter face (TS-682/GSM-1) lightly with fingers or operate BUZZER switch (TS-682A/GSM-1) while zeroing meter.
	GSM-1 AC LINE ON- OFF: OFF BATTERY: OFF ALT CURRENT AC VOLTS DC VOLTS FINE CONTROL: completely counterclock- wise ALT CURRENT AC VOLTS DC VOLTS COURSE COURSE CONTROL: completely	GSM-1 AC LINE ON- OFF: OFF BATTERY: OFF ALT CURRENT AC VOLTS DC VOLTS FINE CONTROL: completely counterclock- wise ALT CURRENT AC VOLTS DC VOLTS COURSE CONTROL: completely counter-

Digitized by Google<sup>17</sup>

	Control settings		-		
Step No.	Test equipment	Equipment under test	Test procedure	Performance standard	
	DIRECT CUR- RENT FINE CONTROL: completely counter- clockwise DIRECT CUR-		<ul> <li>f. Operate BATTERY switch on TS-682(*)/GSM-1 to ON.</li> <li>g. Slowly operate TS-682(*)/ GSM-1 DIRECT CURRENT COARSE CONTROL clock- wise until ME-82/U WATTS meter indicates 100.</li> </ul>	f. None. g. None.	
	RENT COARSE CONTROL: completely counter- clockwise		A. Slowly operate TS-682(*)/ GSM-1 DIRECT CURRENT FINE CONTROL clockwise until ME-82/U indicates ex- actly 120.	h. None.	
	Right-hand selec- tor switch (DIRECT CURRENT		i. Note indication on DC METER (TS-682/GSM-1) or DC MICROAMPERES (TS-682 A/GSM-1) meter.	i. WATTS meter on ME-82/U indicates 120 and TS-682(*)/ GSM-1 meter should indicate 200 microamperes ± 4.	
	SELECTOR on TS-682A/ GSM-1): 100 UA to 400 UA		j. Operate TS-682(*)/GSM-1 DI- RECT CURRENT COARSE CONTROL and DIRECT CURRENT FINE CONTROL complitely counterclockwise.	j. None.	
	witch: AC		k. Operate TS-682(*)/GSM-1 BATTERY switch and AC LINE switch to OFF.	k. None.	
	1) or DC MA & UA (TS-		L Operate PP-1097(*)/G POWER switch to OFF.	l. None.	
	682A/GSM-1) Left-hand selec- tor switch: any position (TS- 682/GMS-1) or ALL OTHER AC & DC SCALES (TS-682A/ GSM-1)		m. Disconnect test setup and re- place crystal diode CR1 in ME-82/U.	m. None.	

# 5-6. Summary of Test Data

Personnel may find it convenient to arrange a checklist in a manner similar to that shown below.

Test No.	Description	Performance standard	Test data
	Crystal Diode Tests		
1•	Forward resistance	Forward resistance should not be greater than 0.5 kilohm (500 ohms).	
1 <i>f</i>	Ratio of reverse to forward resistance.	Ratio of reverse to forward resistance should be greater than 10 to 1.	
14	Reverse current	Meter pointer should indicate out of POOR (green) area of colored scale.	
1 <i>j</i>	Spare crystal diodes forward and re- verse resistance, and reverse current tests.	Same as 1e, 1f, and 1Å above.	
<b>2</b> <i>†</i>	Dummy load resistance test	I-49(*) galvanometer is balanced at 52 ohms $\pm 2$ .	
8h	WATTS meter sensitivity test	WATTS meter on ME-82/U indicates 120 and TS-682(*)/GSM-1 meter in- dicates 200 microamperes $\pm 4$ .	

# APPENDIX

## REFERENCES

Following is a list of references available to the repairman of the ME-82/U.

- DA Pam 310-4 Index of Technical Manuals, Technical Bulletins, Supply Manuals (Types 4, 6, 7, 8, and 9), Supply Catalogs (type CL), Supply Bulletins, Lubrication Orders, and Modification Work Orders.
- DA Pam 310-<br/>21Military Publications: Index<br/>of Supply Manuals; Signal<br/>Corps.
- SB 11-526 Conversion of Tool Equipment TE-113 to Tool Kits TK-87()/U and TK-88 ()/U.
- TM 11-1242 Crystal Rectifier Test Sets TS-268/U, TS-268A/U, TS-268B/U, TS-268C/U, TS-268D/U, and TS-268E/U.
- TM 11-2019 Test Set I-49, I-49A, and I-

- 49B and Resistance Bridges ZM-4A/U and ZM-4B/U.
- TM 11-2535A Meter Test Equipments AN/ GSM-1B and AN/GSM-1C.
- TM 11-5111 Power Supplies PP-1097A/G and PP-1097B/G.
- TM 11-5500 Multimeter TS-297/U.
- TM 11-5540 Electric Light Assembly MX-1292/PAQ.
- TM 11-5820-<br/>303-12POperator's and Organiza-<br/>tional Maintenance Repair<br/>Parts and Special Tools<br/>List and Maintenance Allo-<br/>cation Chart Power Acces-<br/>sories Group OA-1676/<br/>GRC.
- TM 11-5820-<br/>303-35PField and Depot Maintenance<br/>Repair Parts and Special<br/>Tools List Power Accessories<br/>GRC.
- TM 38-750 Army Equipment Record Procedures.

By Order of the Secretary of the Army:

Official:

J. C. LAMBERT, Major General, United States Army, The Adjutant General.

**Distribution:** 

Active Army: USASA (2) CNGB (1) OCC-E (7) CofT (1) CofEngrs (1) **TSG** (1) CofSptS (1) USAMC (5) USCONARC (5) ARADCOM (2) ARADCOM Rgn (2) OS Maj Comd (8) LOGCOMD (2) **USAECOM (7) USAMICOM (4)** USASMC (2) **USASCC (4) USACDCCEA** (1) **USACDCCEA**, Ft Monmouth (1) **USAAVCOM** (1) **MDW** (1) Armies (2) Corps (2) **USAC (8)** 11th Air Assault Div (8) USATC AD (2) USATC Inf (2) **USATC Armor (2) USATC Engr** (2) USASTC (8) Svc Colleges (2) Br Svc Sch (2) except **USASESCS (40)** Army Dep (2) except SAAD (30) LXAD, TOAD (14) FTWOAD (10) LEAD, NAAD, SVAD (5) SHAD, CHAD (8)

HAROLD K. JOHNSON, General, United States Army, Chief of Staff.

ATAD (4) **GENDEP (OS) (2)** Sig Sec, GENDEP(OS) (5) Sig Dep (12) Instl (2) except Ft Monmouth (63) Ft Hancock (4) Ft Gordon (5) Ft Huachuca (10) Army Tml (1) except Oakland (5) **POE** (1) Sig Fld Maint Shops (2) WRAMC (1) US Army Pictorial Cen (2) Chicago Proc Dist (1) AMS (1) **USAERDAA (2)** USAERDAW (18) **USACDCOA** (1) USACDCQMA (1) **USACDCTA (1) USACDCADA (1) USACDCARMA** (1) **USACDCAVNA (2) USACDCARTYA** (1) USACDCSWA (1) **USACDCEC** (5) Natick Army Lab (5) Units org under fol TOE: (2 en UNOINDC) 1-17 11-16 11-57 11-97 11-98 11-117 11-155 11-157 11-500 AA-AE (4) 11-557 11-587 11-592 11-597

NG: State AG (3) Units same as active Army except allowance is one copy each unit.

USAR: None.

For explanation of abbreviations used, see AR 820-50.

\* U.S. GOVERNMENT PRINTING OFFICE : 1987 0 - 201-421 (71237)

ł









Ì

ł

Digitized by Google

