

Chadler

FIELD MANUAL

*Must be used in Ed Center
MOS LIBRARY*

POLE AND FRAME SUPPORTED TENTS

HEADQUARTERS, DEPARTMENT OF THE ARMY

FIELD MANUAL

No. 20-15

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 8 September 1970

POLE AND FRAME SUPPORTED TENTS

		Paragraph	Page
CHAPTER 1.	INTRODUCTION		
	Purpose and scope	1	3
	Basis for tent issue.....	2	3
	Modification	3	3
2.	Pole supported tents		
Section I.	General Purpose Tents		
	Tent, arctic, 10-man	4	4
	Tent, assembly, M-1942	5	8
	Tent, command post, M-1945	6	14
	Tent, general purpose, large	7	16
	Tent, general Purpose, medium.....	8	24
	Tent, general purpose, small	9	29
II.	Special Purpose Tents		
	Tent, Hexagonal, lightweight,M-1950.....	10	33
	Tent, kitchen, flyproof, M-1948	11	39
	Tent, mountain, 2-man	12	46
CHAPTER 3.	FRAME SUPPORTED TENTS		
Section I.	General Purpose Tents		
	Tent, frame-type, maintenance,medium light metal	13	52
	Tent, frame-type, insulated,sectional	14	61
II.	Special Purpose Tents		
	Tent, maintenance, shelter	15	71
	Tent, frame-type expandable,16 ft. by 16 ft.	16	73
	Tent, vehicle Maintenance	17	79
	Tent, maintenance, missile test Shop, hawk missile system	18	85
	Tent, pulse acquisition radar, front, Hawk missile system	19	88
	Tent,pulse acquisition radar, aft, hawk missile system	20	91
	Console tent, Hawk missile system, range only radar, CW acquisition and CW illuminator	21	95
CHAPTER 4.	MARKERS AND SCREENS		
	Large Red Cross marker	22	101
	Small Red Cross marker	23	101
	Screen, latrine	24	102
5.	TENT OF SUPPORT		
	Types of tent frames	25	106
	Tentpoles.....	26	106
	Tent Lines	27	106
	Anchoring systems	28	107
6.	Site selection, heating, and ventilation		
	Choosing tent site	29	110
	Pitching tent in show.....	30	110
	Trenching tent	31	111
	Heating	32	111
	Ventilation	33	112

*This manual supersedes FM 20-15, 11 September 1964, including all changes.

	7.	INSPECTION, CLEANING AND CARE		
Section	I.	Tentage		
		General.....	34	113
		Protection against rain	35	113
		Protection against wind	36	113
		Protection against fire	37	113
		Protection against mildew	38	113
	II.	Frames		
		Wood frames	39	114
		Metal frames	40	114
	III.	Pins, poles, and Lines		
		Pins	41	115
		Poles	42	115
		Lines	43	115
APPENDIX A.		REFERENCES		116
	B.	SHORT FEDERAL STOCK NUMBER NOMENCLATURE		118

CHAPTER 1

INTRODUCTION

1. Purpose and Scope

a. This manual provides general information and guidance on the care and handling of commonly used frame and pole supported tents issued by the Army. Detailed information on certain tents may be found in applicable technical manuals.

b. The manual serves as an aid for training personnel in the use of tents, selection and preparation of erection sites, assembly and disassembly of tents, and as a handy reference and guide in the field. It also contains data for planning purposes.

2. Basis for Tent Issue

The basis for issue of pole or frame supported tents may be found in—

a. *TA 50-915—Quartermaster Equipment*. Allowances for flags, tentage, sewing machines, and equipment for civilian guards.

b. *CTA 50-901—Clothing and Equipment*. Tentage authorized for individuals.

c. *Unit TOE*.

3. Modification

Users of this publication are encouraged to report errors and omissions and to offer recommendations for improvement. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to the Commandant, U.S. Army Quartermaster School, ATTN: ATSQM-AR-T, Fort Lee, Va. 23801.

CHAPTER 2

POLE SUPPORTED TENTS

Section I. GENERAL PURPOSE TENTS

4. Tent, Arctic, 10-Man

a. *Use.* The tent, arctic, 10-man, FMWWR, OD, complete with pins and pole (fig 1), is used to provide shelter for 10 men with equipment under arctic conditions. It also may be used as a command post tent or as a small storage tent.

b. *Description.* The tent is a six-sided pyramidal tent supported by a telescopic center pole.

(1) *Tabulated data.*

Height: peak height, 8 feet 6 inches; eave height, 3 feet.

Length: each side of tent is 8 feet 9 inches long.

Width: the hexagonal floor of the tent is 17 feet 6 inches in diameter.

Weight: tent and liner, 68 pounds; pins and pole, 8 pounds.

Cube: tent and tent liner, 7.1 cubic feet; pins and pole, 0.2 cubic feet.

Floorspace: 198.9 square feet.

(2) *Material.* The tent is made of 8.5-ounce olive-drab wind-resistant sateen cotton cloth.

(3) *Doors.* The tent has two doors 5 feet high on opposite sides, permitting tents to be joined together with suitable access from one to the other. Door flaps may be securely closed either by slide fasteners or by loops over wood toggles. The doors are operated from both inside and outside.

(4) *Ventilation.* The tent is ventilated by four built-in ventilators on opposite sides and near the peak of the tent. The ventilators have inside ducts, which may be closed by tie cords. The ventilator hoods are of the fixed type, each hood being constructed with a stiffener inserted in the hem to keep it extended out from the ventilator opening.

(5) *Heating.* The tent is heated by an M-1950 Yukon stove. A stovepipe opening with a silicone rubber-molded ring is built in one side of the tent near the eave. When the stove is not in use, the stovepipe opening can be protected by a canvas flap.

(6) *Snow cloths.* There is a snow cloth

sewed to the bottom of each side of the tent. When the tent is pitched, the snow cloths are flat on the ground on the outside of the tent. Snow is deposited on the snow cloths for insulation purposes.

(7) *Screen doors.* Screen doors are attached to the tent for protection against insects.

(8) *Sock lines.* Four sock lines are provided for drying clothing and equipment.

(9) *Liner.* A fire-resistant liner, made of 5.2-ounce permeable cotton sheeting, is provided to insulate the tent to prevent frost from falling on the occupants. The liner is held in place by metal toggles.

(10) *Cover.* The tent is provided with a cover for use when it is in storage or is being transported. The tent and liner, when folded fit into the cover. Aluminum tent pins are nested and the magnesium pole telescoped to its shortest length and placed in the pocket at one side of the cover.

c. *Ground Plan.* Before pitching the tent, study the ground plan carefully (fig 2).

d. *Pitching.* The tent can be pitched by six men in approximately 27 minutes.

(1) *Preliminary procedures* (1, fig 3).

(a) Spread tent on ground. Check to see if liner is in place; usually it is not in place in a new tent. If liner is not in place, spread it out beneath the tent.

(b) Secure D-rings to snaps inside front and rear doors.

(c) Close all slide fasteners.


(d) Secure D-rings to snaps outside front and rear doors.

(e) Drive six corner pins and four door pins, and attach footstops to pins.

(2) *Attaching corner eave lines and inserting tentpole* (2, fig 3).

(a) Drive six pins about seven feet from corners of tent, and attach corner eave lines. Pins on opposite sides of tent should be in a straight line.

(b) Open front door and push pole, extended to 8 feet 6 inches, under tent.

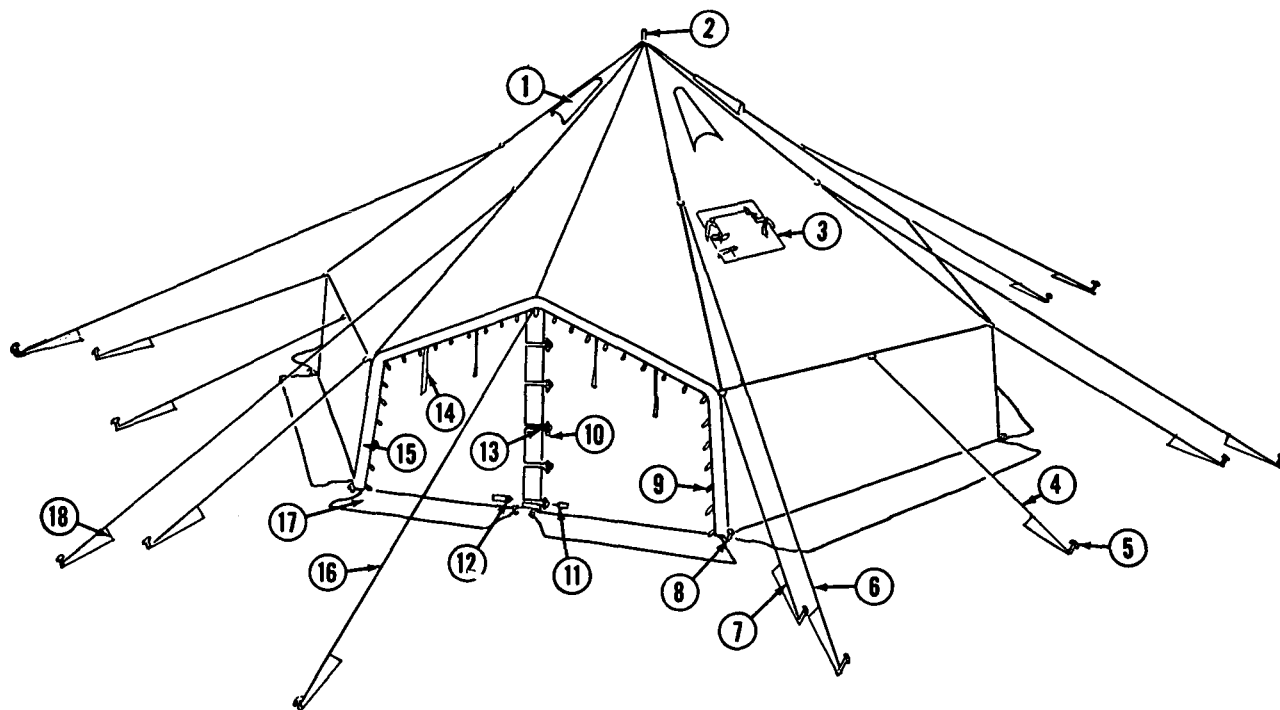

- | | | |
|-----------------------|--------------------------|-------------------------|
| 1 Ventilator | 7 Tent line, corner eave | 13 Toggle loop |
| 2 Telescopic tentpole | 8 Footstop | 14 Tie tape |
| 3 Stovepipe opening | 9 Becket | 15 Tent lug |
| 4 Tent line, eave | 10 Wood toggle | 16 Tent line, door eave |
| 5 Aluminum tent pin | 11 Chape snap | 17 Snow cloth |
| 6 Tent line, corner | 12 D-ring | 18 Tent slip |

Figure 1. Tent, arctic, 10-man.

(c) Insert spindle of pole through hole in peak of liner and through supporting ring in peak of the tent.

(3) *Raising tent* (3, fig 3).

(a) With one man inside the tent, close inside and outside D-rings and snaps on doors; close slide fasteners.

(b) Fasten loops to wood toggles on doors.

(c) Lift tentpole, and line up door openings of liner with openings in tent.

(d) Insert D-rings of liner into snaps attached to tent.

(e) Raise tentpole, placing butt of tentpole in center of tent area.

(4) *Attaching door eave lines, intermediate eave lines, and corner lines* (4, fig 3).

(a) Stake the two door eave lines far enough to hold doors vertical.

(b) Attach the four intermediate eave lines to pins.

(c) Attach the six corner lines to pins 18 inches out from corner eave-line pins.

(d) Adjust and tighten all lines.

(5) *Propping up door eave lines*. Each of the two door eave lines can be propped up by placing the line over an improvised pole (tree

branch or other object higher than the door entrance) at a distance of about 5 feet in front of the door and then staking the line out to a pin. This keeps the doors from sagging, makes the slide fastener work better, makes the tent easier to get into and out of, and gives the tent greater stability.

(6) *Fastening liner*.

(a) Insert metal toggles through grommets of liner.

(b) Tie tapes around stovepipe opening in liner to corresponding tapes around stovepipe opening in tent to keep stovepipe opening in place.

(c) Tie one end of the 18-foot 9-inch sock line to toggle in each corner of door, threading line through eye of toggles at eave line and tying to carrier toggles of the opposite door. Use same procedure for the 18-foot 9-inch sock line on opposite side of tent.

(d) Thread the 40-foot 6-inch sock line through the next line of toggles, encircling the tent, and tie.

(e) Secure the 38-foot 6-inch sock line in like manner in the next row of toggles.

(7) *Joining two tents together*. When two

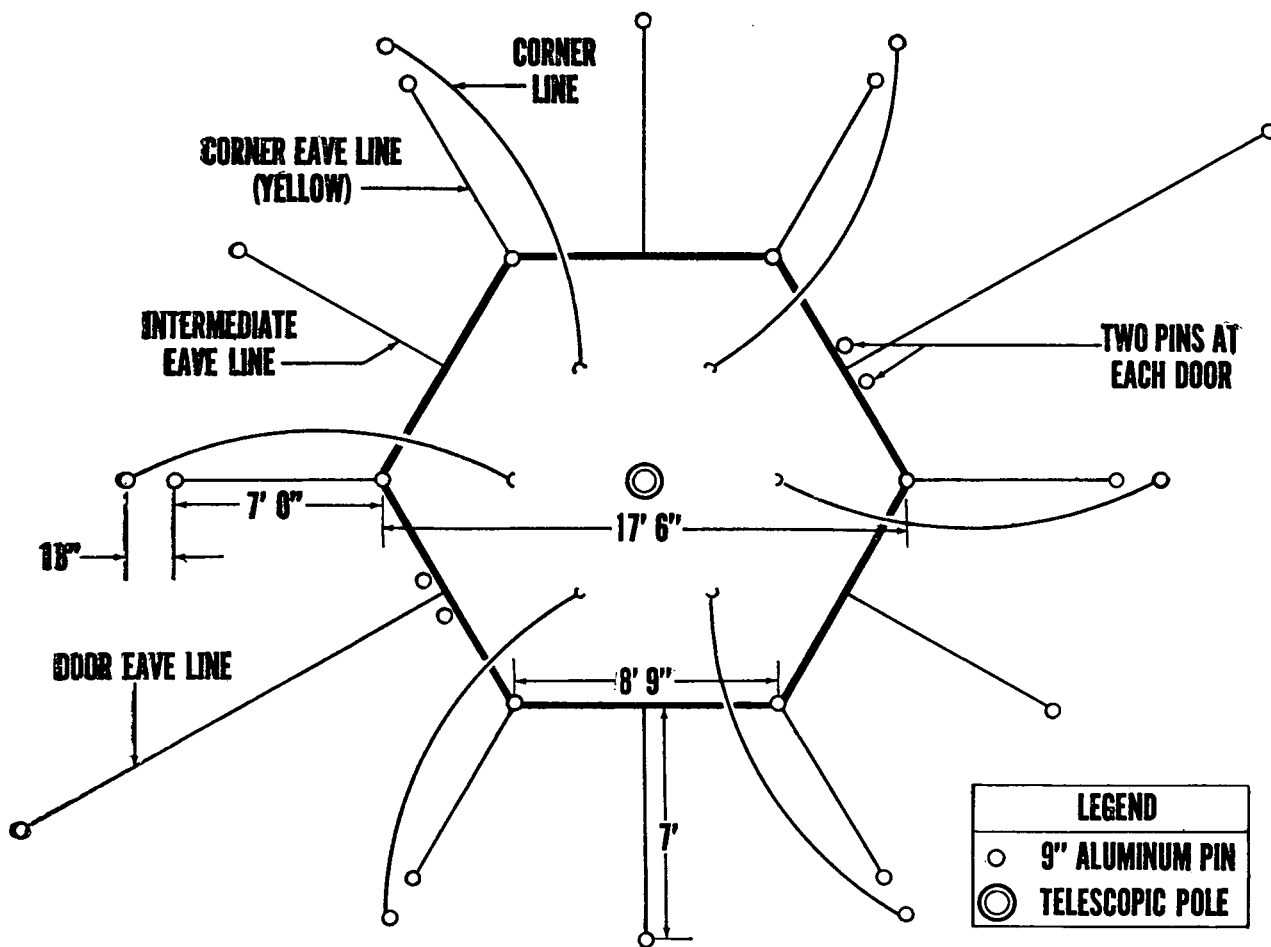


Figure 2. Ground plan of tent, arctic, 10-man.

tents are to be joined together, erect the first tent described above. Fasten lugs (4, fig 3) at front or rear of tents together by inserting grommet lug of one tent between grommet lug and becket lug of other tent, and chain-lace beckets (4, fig 3) on lug of one tent through grommets on each lug of both tents (fig 4). Begin chain-lacing at bottom (near the ground) of lugs and continue until bottom (near the ground) at the other end of the same lugs is reached, securing last becket with a knot. Then erect second tent in the same manner as first tent.

e. Striking. Make sure all slide fasteners are closed, then—

- (1) Remove door eave lines from pins.
- (2) Loosen footstops from pins and remove footstop pins.
- (3) Loosen all other lines and remove all other pins.
- (4) Remove tentpole, and telescope pole to its shortest length.
- (5) Remove liner only if repairs are needed.

f. Folding.

- (1) *Folding tent* (fig 5).

(a) Engage snap into D-ring inside doors, and close door slide fasteners.

(b) Spread tent on ground and locate stovepipe opening panel. Grasp corner eave line (to right of stovepipe opening) and pull out corner of panel. Then coil intermediate eave line neatly on extended panel (1).

(c) Reaching to the left, grasp corner eave line (to left of stovepipe opening) and pull second panel to the right, making an accordion fold (2).

(d) Fold remaining panels in the same manner, having six folds in all. As each fold is completed, coil intermediate eave lines or door eave lines neatly between folds (3).


(e) Coil on top of folded tent panels the six corner lines, the six corner eave lines that have been drawn to the right, and the last remaining intermediate eave line (4).

(f) Grasp peak of tent and fold so that peak extends down tent deck approximately 4 feet. Fold snow cloth up over sidewalls of tent (5).


(g) Fold tent approximately in half along its long dimension (6).

(h) Fold edges of tent toward center so that no portion of liner is exposed. Place folded tent on cover, place folded screen doors on


1. PRELIMINARY PROCEDURES

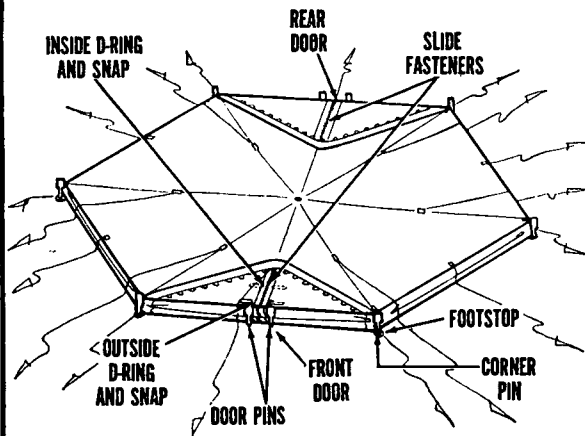

2. ATTACHING CORNER EAVE LINES AND INSERTING TENT POLE

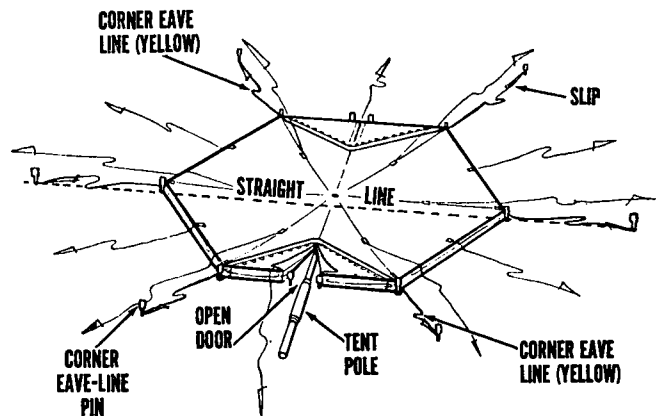

3. RAISING TENT

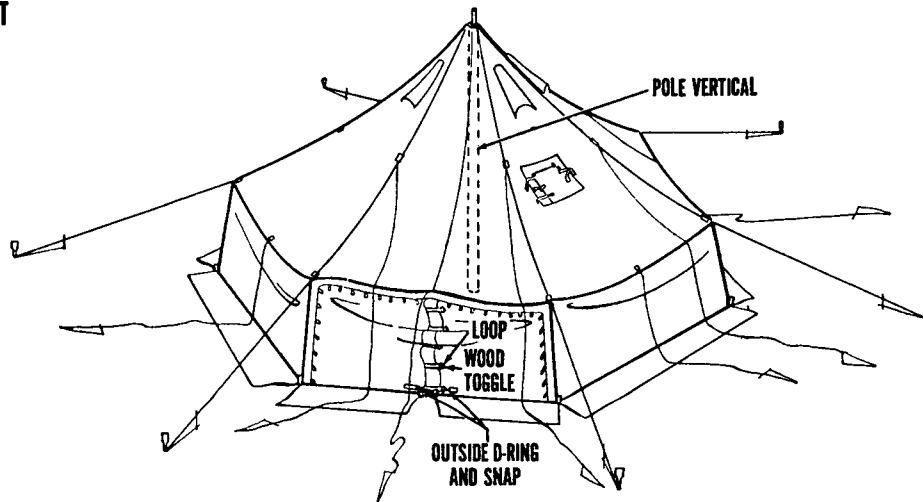

4. ATTACHING DOOR EAVE LINES, INTERMEDIATE EAVE LINES, AND CORNER LINES

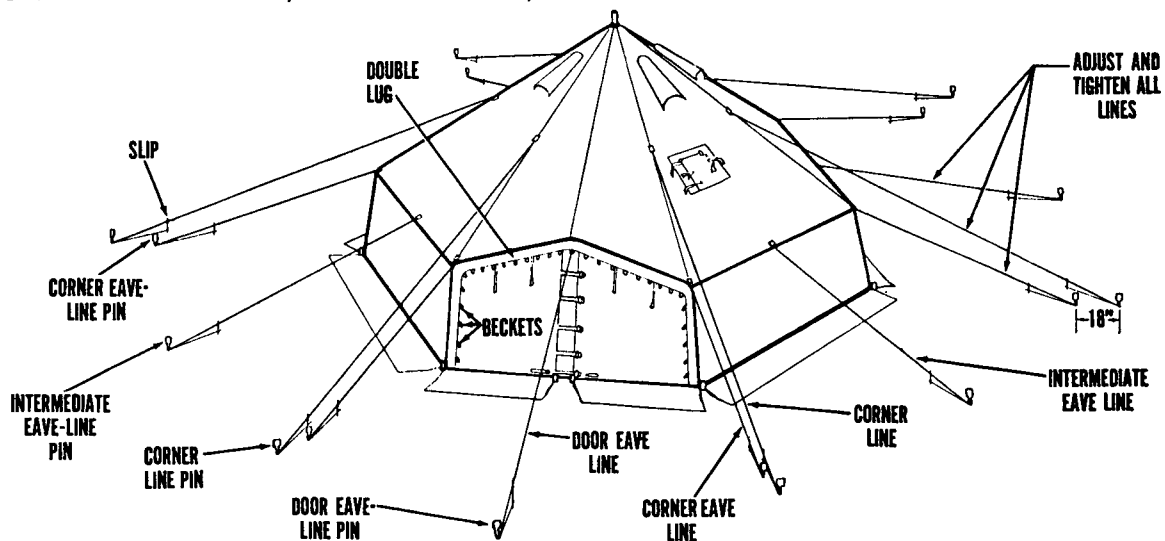


Figure 3. Steps in pitching tent, arctic, 10-man.

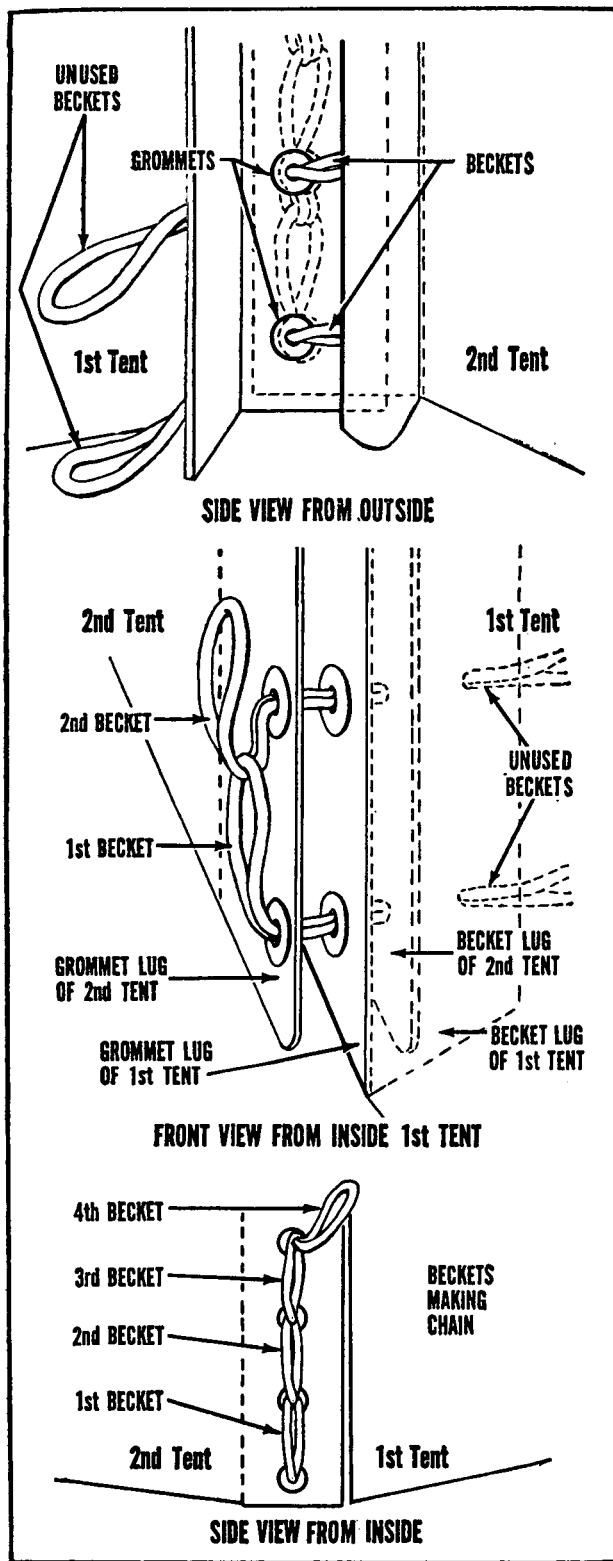


Figure 4. Joining two tents together by chain-lacing becketts through grommets.

top of folded tent, and place nested pins and telescoped pole into pocket of cover (7).

(i) Close cover, securing it with straps and loops. Care should be taken that no portion of the tent is exposed and that the flaps are tucked neatly within the cover.

(2) **Folding liner.** Ordinarily, the liner is not removed from the tent. When necessary, the liner may be folded separately in the same manner as the tent and placed inside the cover with the tent, screen doors, pins, and pole.

5. Tent, Assembly, M-1942

a. **Use.** The tent, assembly, M-1942, FMWWR, OD, complete with pins and poles (fig 6), is used for church services in the field, for lectures, and for the showing of movies. It may also be used for storage, for quartering personnel, or for any other authorized purpose. It has a seating capacity of approximately 500 men. When used for quartering personnel, it has a capacity of approximately 80 men.

b. **Description.** The tent is a large general purpose tent, with a rectangular middle section and rounded hiproofed ends. The tip is made in four sections which lace together: two middle sections and two rounded end sections. The sidewall is in four sections. There are three chains and supporting rings and three sets of block and tackle with lines. Since the tent is sectional in construction, it may be extended to any desired length by means of additional middle and wall sections. Two end sections can be joined and used with two wall sections to form a circular tent.

(1) *Tabulated data.*

Height: peak height, 18 feet; eave height, 8 feet.

Length: 80 feet.

Width: 40 feet.

Weight: tent, 1,100 pounds; pins and poles, 655 pounds.

Cube: 100 cubic feet.

Floorspace: 2,856.6 square feet.

(2) **Material.** The tent is made of 9.85-ounce duck, FMWWR.

(3) **Door openings.** The tent has four door openings, each of which is made by the overlapping of a panel and a half of sidewall where two sections of the sidewall meet. The sidewalls may be shifted so that the openings come anywhere as long as the same proportionate distance between the openings is maintained.

(4) **Ventilation.** There are four built-in ventilators, one to each sidewall section. The tent can also be ventilated by rolling up the sidewalls and tying them with the attached tie tapes; or, if it is raining, by extending the sidewall and tying it to the lines running from the eaves. The doors can also be tied back and the openings used for ventilation.

(5) **Heating.** Four M-1941 tent stoves or two external 250,000-B.t.u. tent heaters, are used to heat the tent. The built-in ventilators are used as stovepipe openings when M-1941 tent stoves are used.

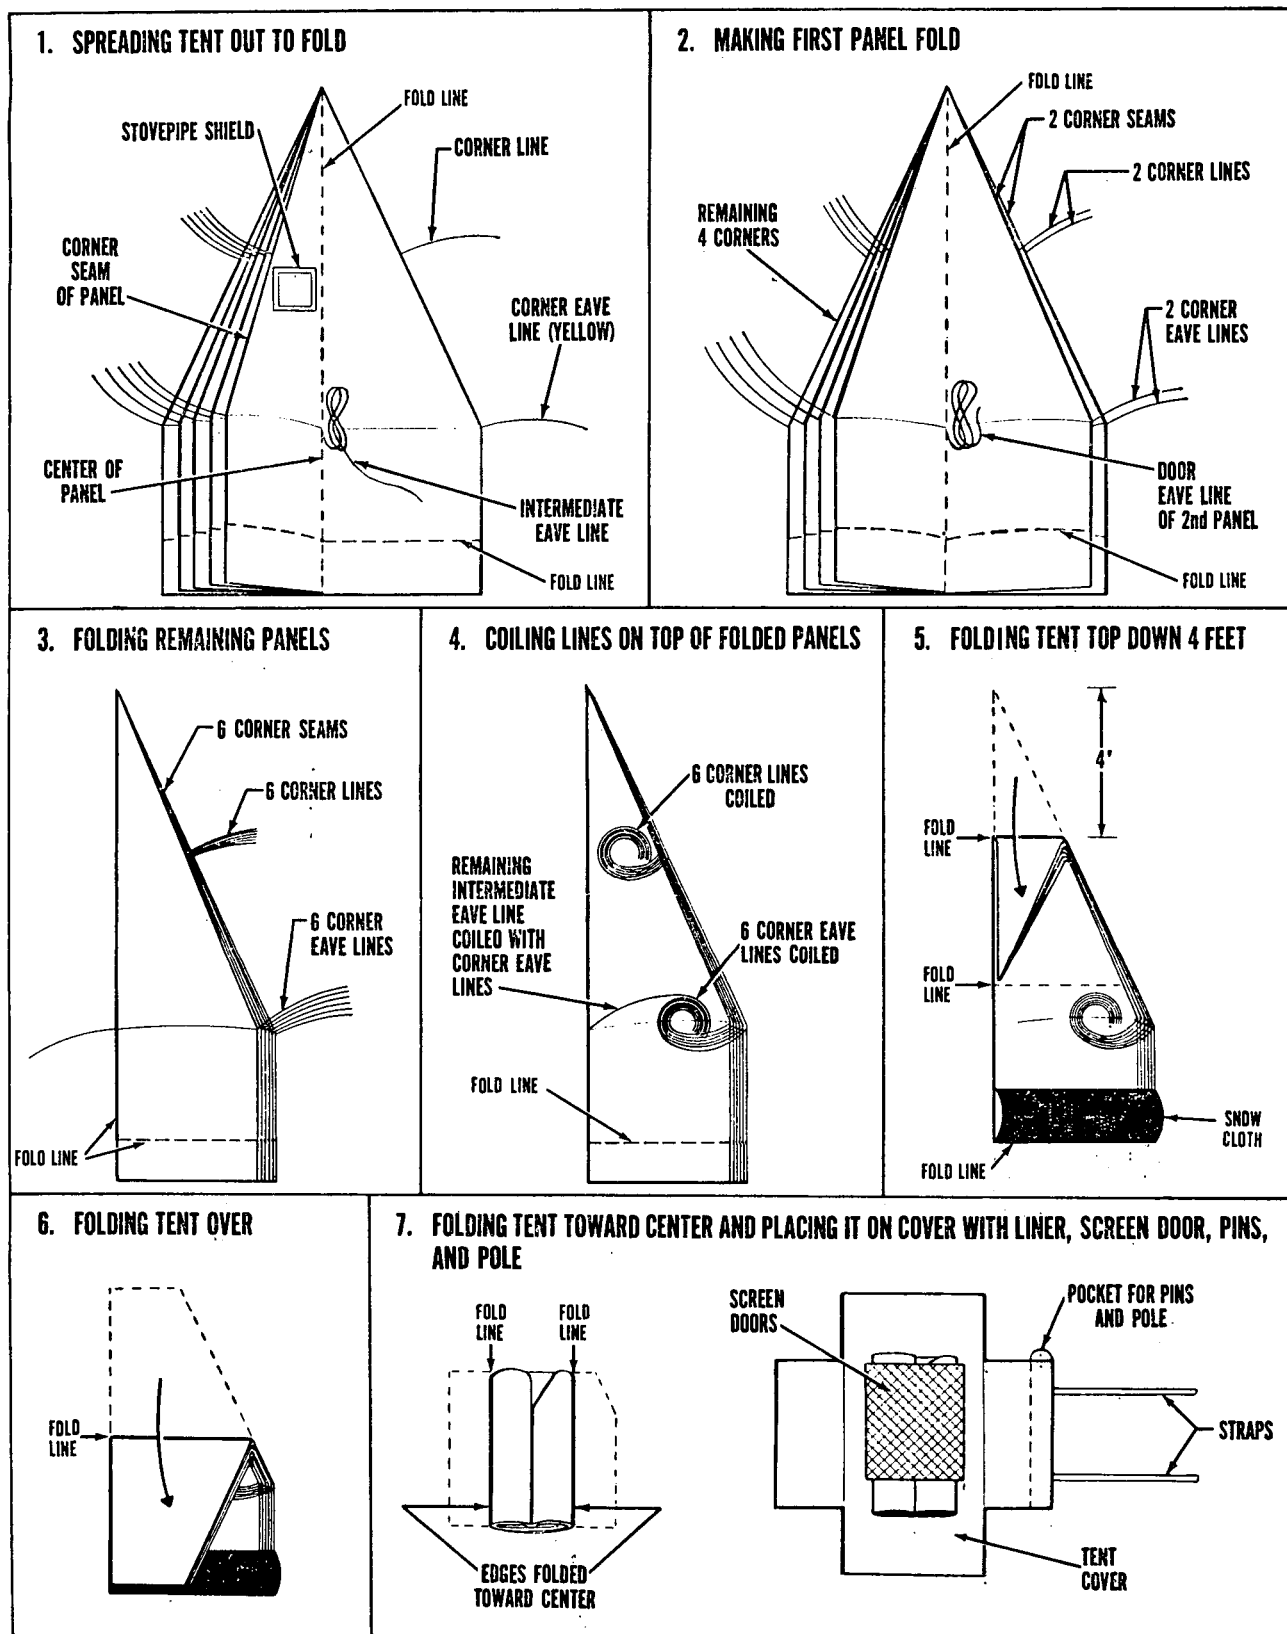



Figure 5. Steps in folding tent, arctic, 10-man.

(6) *Covers.* The tent is provided with six covers for use when in storage or when being transported.

c. Ground Plan. Before pitching the tent, study the ground plan carefully (fig 7).

d. Pitching. The tent can be pitched by nine men in approximately 90 minutes.

(1) *Spotting center poles* (1 fig 8). Spot the three center poles according to ground plan and place a marker at each location. Drive marker in about 6 inches.

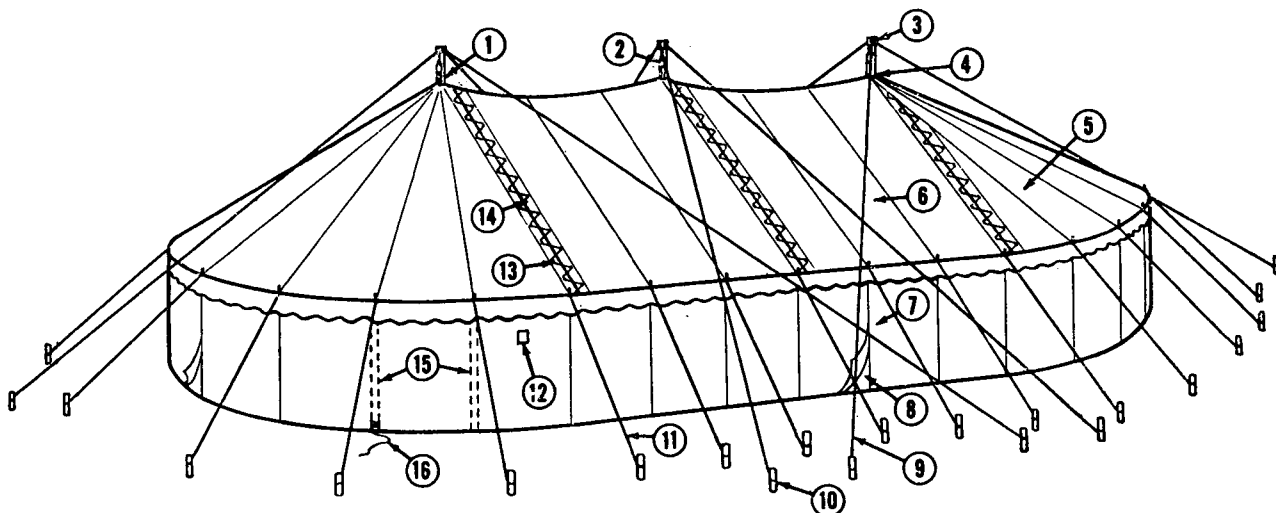

- | | | | |
|--------------------------------|------------------|--------------------------|--------------------------------|
| 1 Center pole | 5 End section | 9 Long guy line | 13 Extension cloth lacing line |
| 2 Block and tackle | 6 Middle section | 10 36-inch wood tent pin | 14 Extension cloth |
| 3 Ferrule (cap at top of pole) | 7 Wall section | 11 Eave line | 15 Eave pole |
| 4 Tent chain and ring | 8 Door opening | 12 Stovepipe opening | 16 Long wall tie line |

Figure 6. Tent, assembly, M-1942.

(2) *Laying out and driving pins (2, fig 8).*

(a) *Eave-line pins.* Lay out and drive the 30 eave-line pins according to ground plan. Make sure that they are driven vertically and that the top of each pin is no more than 10 inches from the ground. The 27-foot extension cloth lacing line can be used as an aid in laying out the eave-line pins of the end sections.

(b) *Guy-line pins.* Lay out and drive guy-line pins according to ground plan. There are nine guy-line pins, three for each center pole.

(3) *Preparing center poles for erection (3, fig 8 and fig 9).*

(a) Place the three center poles on the ground on one side of tent area. The poles should be perpendicular to the eave-line pins, and the butt end of each pole should be at a pole marker.

(b) Attach three main guy lines and one set of block and tackle to ferrule at top end of each pole. Lash drift line of block and tackle to pole, with single block 2 or 3 feet from butt end of pole. Place a bail ring assembly around butt end of each pole.

(4) *Erecting middle center pole (4, fig 8).* One man stands at the butt end of the middle center pole, one man at the top end of the pole; and one man at the end of each of the three guy lines. One of these guy lines leads to the outside pin on a line at right angles from the center point of the long dimensional line of the tent layout (fig 7). This places the man holding the line directly in line with the man at the butt end of the pole. The man at the butt end of the pole keeps the pole in posi-

tion with the marker by holding it with his foot. Be sure that the butt end of the pole is through the bail ring. The man at the top end raises the pole and walks towards the butt end. The man holding the center guy line assists by maintaining a taut line as the pole is raised. After the pole reaches such a height that it might swing off center, the men holding the other two guy lines spread out slowly to keep the pole balanced until it is in a perpendicular position. Then the guy lines are attached to the pins indicated on the ground plan.

(5) *Erecting the other two center poles (5, fig 8).* The other two center poles should be erected as described in (4) above, except that one guy line leads to the outside pin on the direct center line of the long dimension of the tent layout. After poles have been erected, straighten them, and remove marker stakes. Tighten all center pole guy lines.

(6) *Spreading canvas and lacing sections together and to bail rings (6, fig 8).*

(a) Unfold the two middle sections and the two end sections. Spread sections on ground in position on tent area around the three center poles.

(b) Join sections from ridge to eave reinforcement line by chain-lacing becketts through grommets, securing the last becket through the last grommet with a knot (1, fig 10).

(c) Secure eave corners of sections together by lashing tieline through thimble on eave corner of one section and through thim-

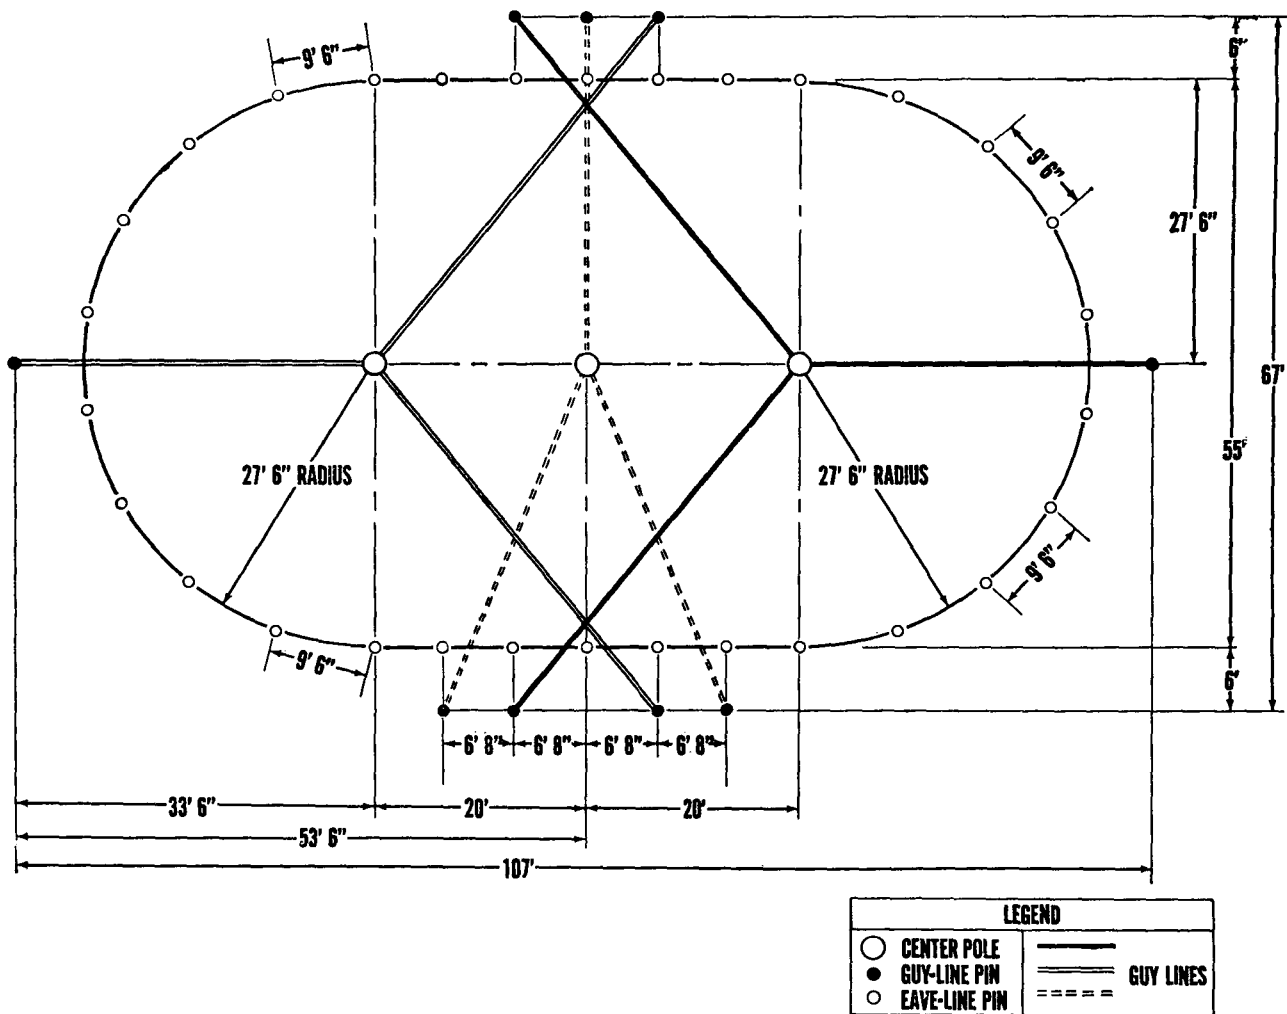


Figure 7. Ground plan of tent, assembly, M-1942.

ble on eave corner of the other section (2, fig 10).

(d) Pull extension cloth over chain-lacing, lace extension cloth lacing line diagonally through ring chapes, and tie end of line through eave corner thimbles (2, fig 10).

(e) Attach hooks on single blocks to small rings of bail ring assemblies off the ground about 1 foot (fig 11).

(f) Secure sections on tent together at neck by lashing tieline on each side of neck through thimble of one section and through thimble of the other section (fig 11).

(g) Fasten thimbles at necks of sections to bail rings by lacing neck lacing lines of two sections around bail ring and through thimbles (fig 11).

(h) Unlash drift lines and put ends of lines through bail ring assemblies close to poles (fig 11).

(7) *Attaching eave lines to pins and setting eave poles in position (7, fig 8).*

(a) Attach, with two half hitches, all

eave lines to pins approximately 2 feet in from the end of each line.

(b) Raise canvas at eave and slide butt end of eave poles toward a center pole. Insert spindle of eave poles through leather reinforcements at point where eave lines are attached to canvas.

(8) *Raising peaks 3 feet off ground and preparing to raise canvas top (8, fig 8).*

(a) Going under canvas to center poles, raise peaks of tent about 3 feet off the ground by pulling drift lines. Lash drift lines to center poles, making sure that drift line of each block and tackle assembly is inside bail ring and next to center pole (fig 11).

(b) Set eave poles to form an angle of about 60° with the ground, with butt of each pole pointing toward, and in line with, butt of nearest center pole.

(c) Fasten jumper line at eave of canvas to each eave pole with two half hitches.

(d) Partly tighten all eave lines.

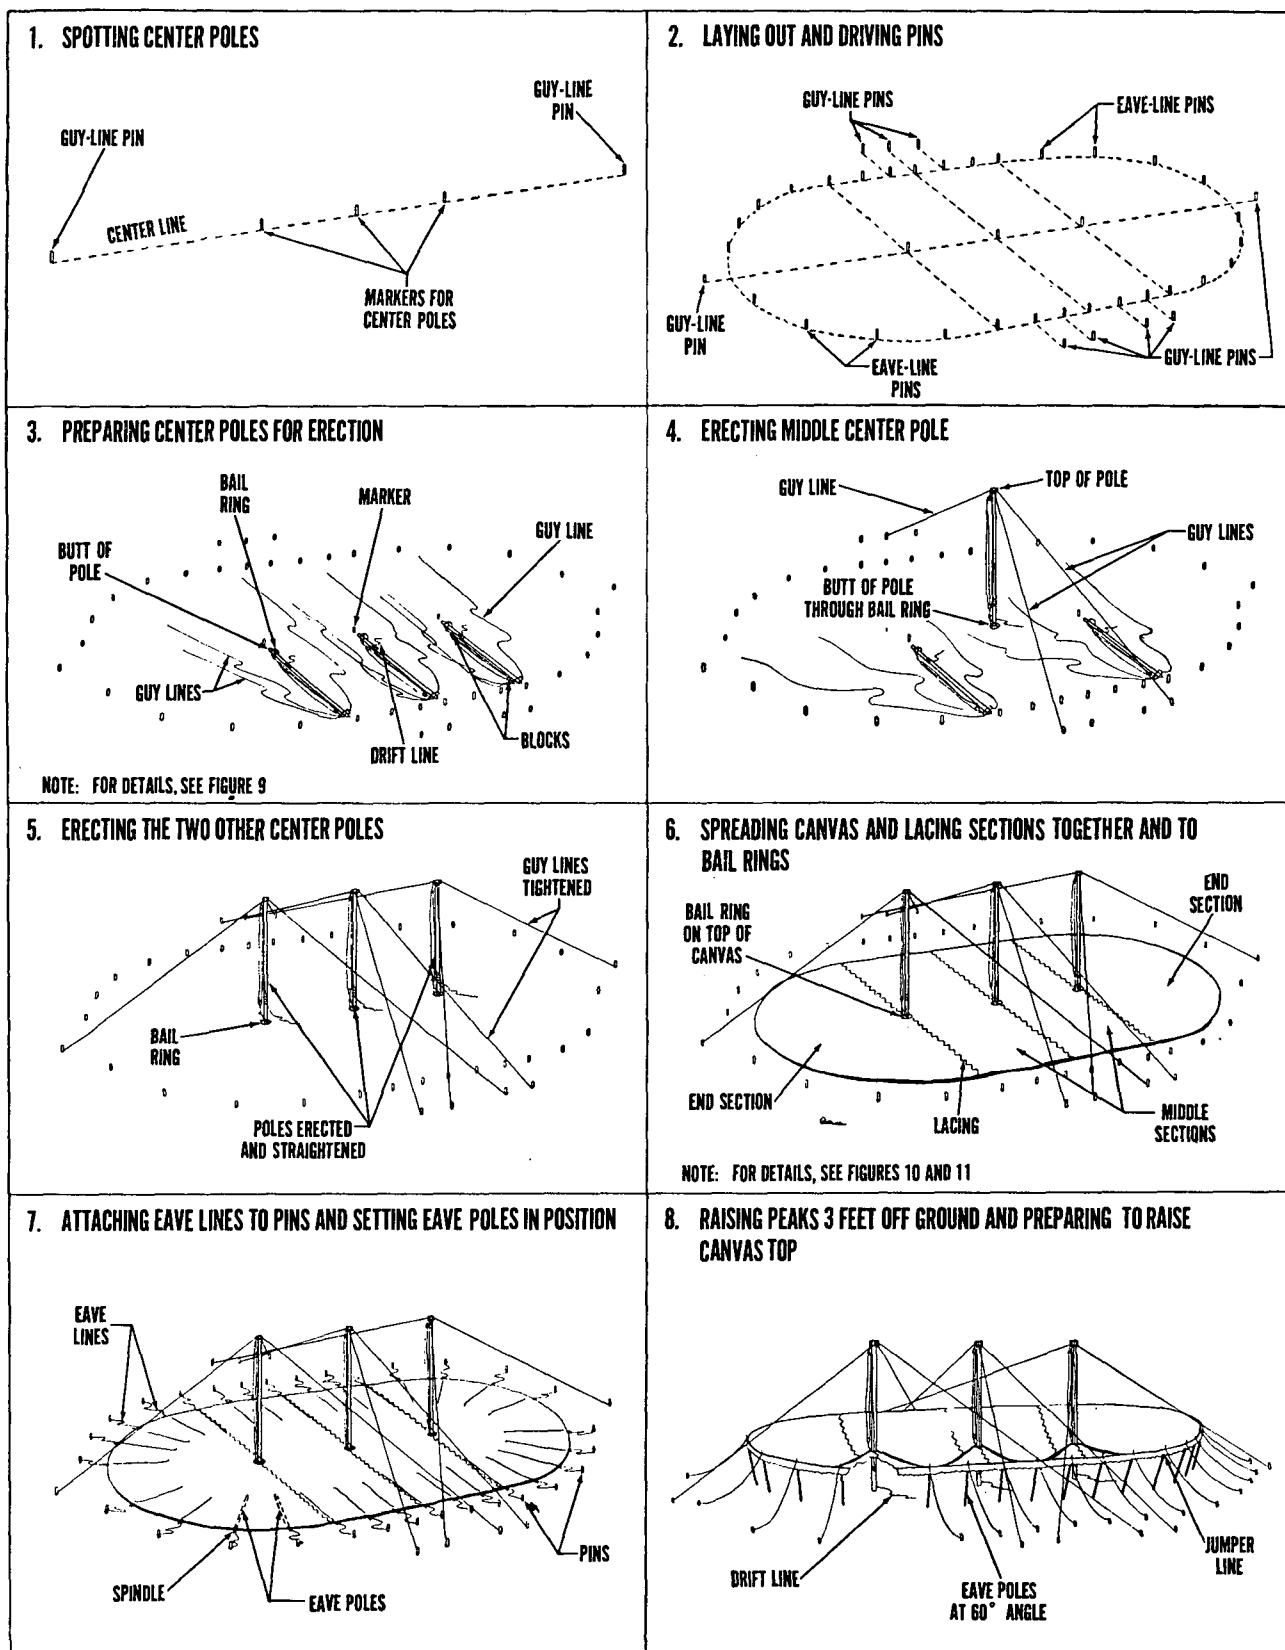


Figure 8. Steps in pitching tent, assembly, M-1942.

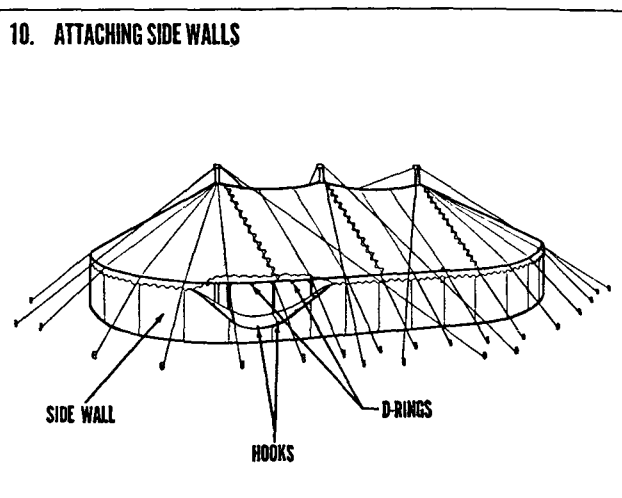
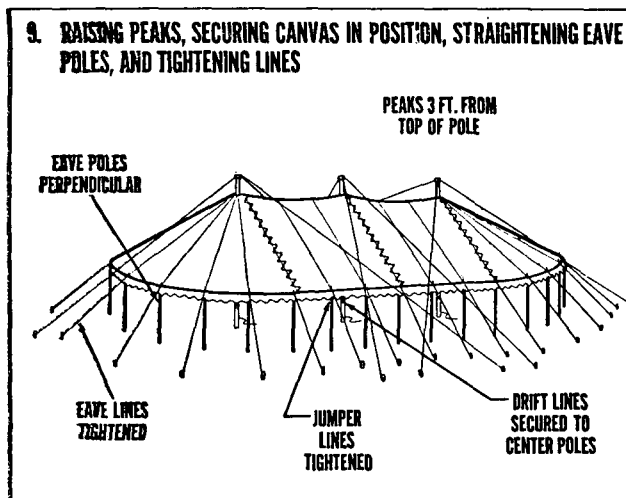


Figure 8—Continued.

(9) *Raising peaks, securing canvas in position, straightening eave poles, and tightening lines* (9, fig 8).

(a) Raise peaks with drift line of block and tackle to within 3 feet of top of each center pole. The three peaks of the tent should be raised at the same time.

(b) Straighten all eave poles to a perpendicular position and tighten all lines as much as possible to eliminate wrinkles in tent roof. Lines are tightened or loosened by readjusting the two half hitches on each guy and eave line near the pin; there are no tent slips used with the assembly tent.

(c) Secure drift lines firmly to center poles.

(10) *Attaching sidewalls* (10, fig 8). Attach sidewalls by hooking wall hooks on top of sidewalls through D-rings attached to top sections of tent.

e. Striking. The tent can be struck by nine men in approximately 60 minutes.

(1) *Checking center pole guy lines.* Check center pole guy lines, making sure that they are hooked in ferrule at top of center pole and are taut.

(2) *Detaching sidewalls.* Detach sidewalls by unhooking wall hooks from D-rings.

(3) *Adjusting eave poles.* Slant butts of eave poles toward butts of center poles at a 60° angle with the ground. If weather is calm, untie eave pole jumper lines; do not untie jumper lines in a high wind.

(4) *Letting down peaks.* Let peaks down to ground level by releasing drift lines, making sure that entire canvas area is in such a position that when sections are unlaced there will be little difficulty in folding them.

(5) *Removing eave poles.* Remove all eave poles.

(6) *Removing pins.* Remove all eave line pins.

(7) *Unlacing sections.* Unlace sections of tent, remove from beneath center poles, and separate for folding into separate bundles.

(8) *Striking center poles.* Strike center poles. To strike a center pole, two men stand at butt end of pole and one man at end of each guy line. Untie guy lines from pins. The men holding the ends of the guy lines then walk slowly toward the center of the tent area, keeping the lines taut to prevent the pole from swaying. One of the men at the butt end of the pole walks slowly forward with the pole, easing it gradually to the ground, while the other man at the butt end of the pole steadies it.

f. Folding. The tent can be folded and placed into six covers by nine men in approximately 20 minutes.

(1) *Folding middle sections* (1, fig 12). Fold each of the two middle sections in half along the long dimensions and then in half again. Then, in 2-1/2-foot folds, fold ends toward center.

(2) *Folding end sections* (2, fig 12). Fold each of the two end sections in half along the long dimensions and then in half again. Then in 2-1/2-foot folds, fold ends toward center.

(3) *Folding wall sections* (3, fig 12). Fold each of the four wall sections in half along the long dimension. Then, in 2-1/2-foot folds, fold ends toward center.

(4) *Putting folded sections into six separate covers* (4, fig 12). Put folded sections into six separate covers. Place each middle and end section in a separate cover; place two wall sections in a separate cover. Fold flaps of each cover over folded sections and tie through the grommets the two cover tielines provided.

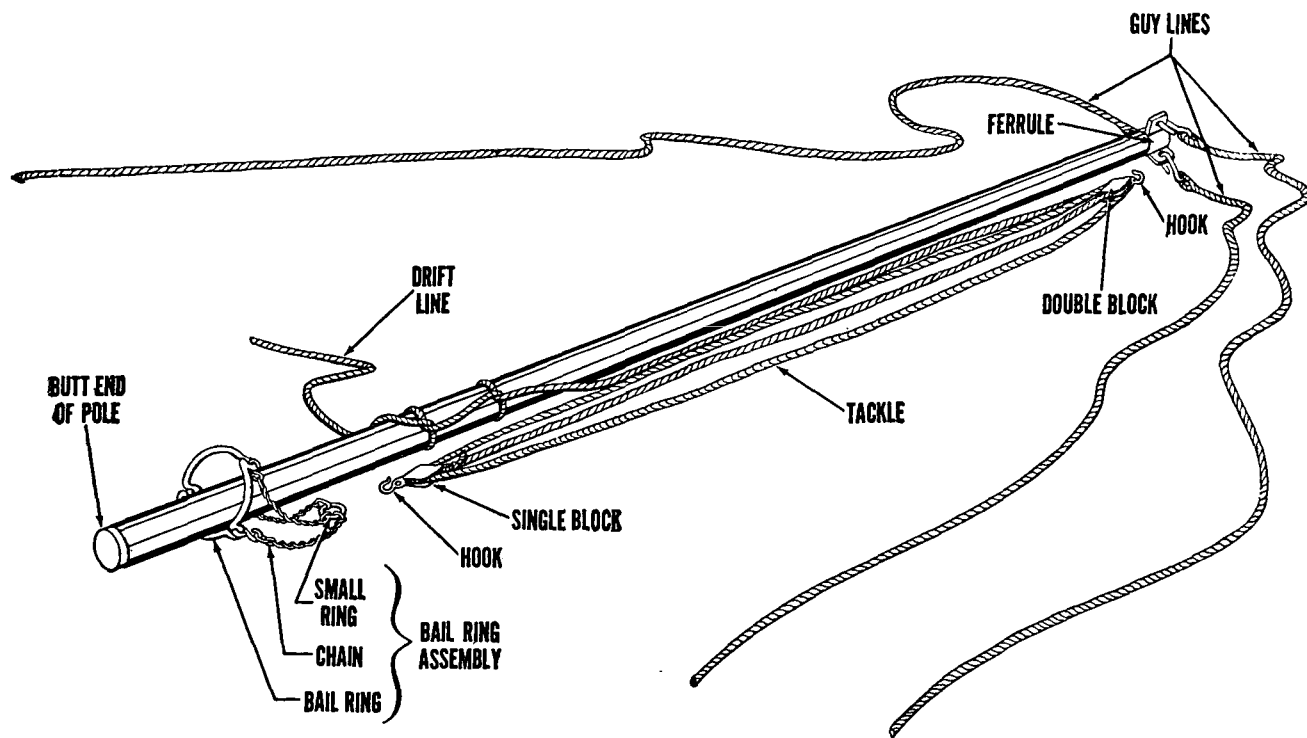


Figure 9. Preparing center pole for erection of tent, assembly, M-1942.

6. Tent, Command Post, M-1945

a. *Use.* The tent, command post, M-1945, FMWR, OD, complete with pins and poles (fig 13), is used in theaters of operations to provide office space for staff sections, accommodating three men and the necessary folding tables and office equipment. It may also be used for the quartering of three officers or as a battalion aid station, the blackout vestibule being long enough to accommodate a litter and bearers.

b. *Description.* The central part of the tent is A-shaped. The ends are hip-roofed with converging sidewalls.

(1) *Tabulated data.*

Height: peak height, 9 feet; sidewall height, 5 feet 6 inches.

Length: 20 feet 7 inches

Width: 10 feet.

Weight: tent 132 pounds; pins and poles, 92 pounds.

Cube: tent, 6.3 cubic feet; pins and poles, 3.6 cubic feet.

Floorspace: 172 square feet, of which 48 square feet is vestibule space.

(2) *Material.* The tent is made of 9.85-ounce duck, FMWR. The canvas is supported on a webbing framework, which carries the weight of the canvas. Fair-leads carry the stress between webbing and eave lines and eliminate friction between eave and eave lines. The tent walls, tent top, and sod cloth are constructed of one piece.

(3) *Door.* The tent has a door entrance at the front, 6 feet high and 4 feet wide.

(4) *Blackout curtain.* A nondetachable blackout curtain, with a slide fastener opening (5, fig 15), is sewed into the body of the tent. The curtain separates the vestibule from the main part of the tent. When the tent is used for a first-aid station, the vestibule space between the door and the blackout curtain is large enough to allow stretcher bearers passage without emitting light.

(5) *Windows.* The tent has three 24-inch square window sashes, made of flexible translucent material. The sashes are inserted in window openings and held in place by snap fasteners. Canvas flaps cover the window during blackouts.

(6) *Ventilation.* The tent is ventilated by an opening near the top of the rear end section. The ventilator has an inside duct, which may be closed by a tie cord. The ventilator hood is of the fixed type, constructed with a stiffener inserted in the hem to keep it extended out from the ventilator opening. For additional ventilation, the sidewalls can be rolled up and the sidewall screens attached.

(7) *Heating.* The tent is heated by an M-1941 tent stove. There is a stovepipe opening built in the top of the tent near the rear center upright pole. When not in use, the opening can be protected by a canvas flap.

(8) *Liner.* A liner is provided with the tent. The liner can be attached to the tent to insu-

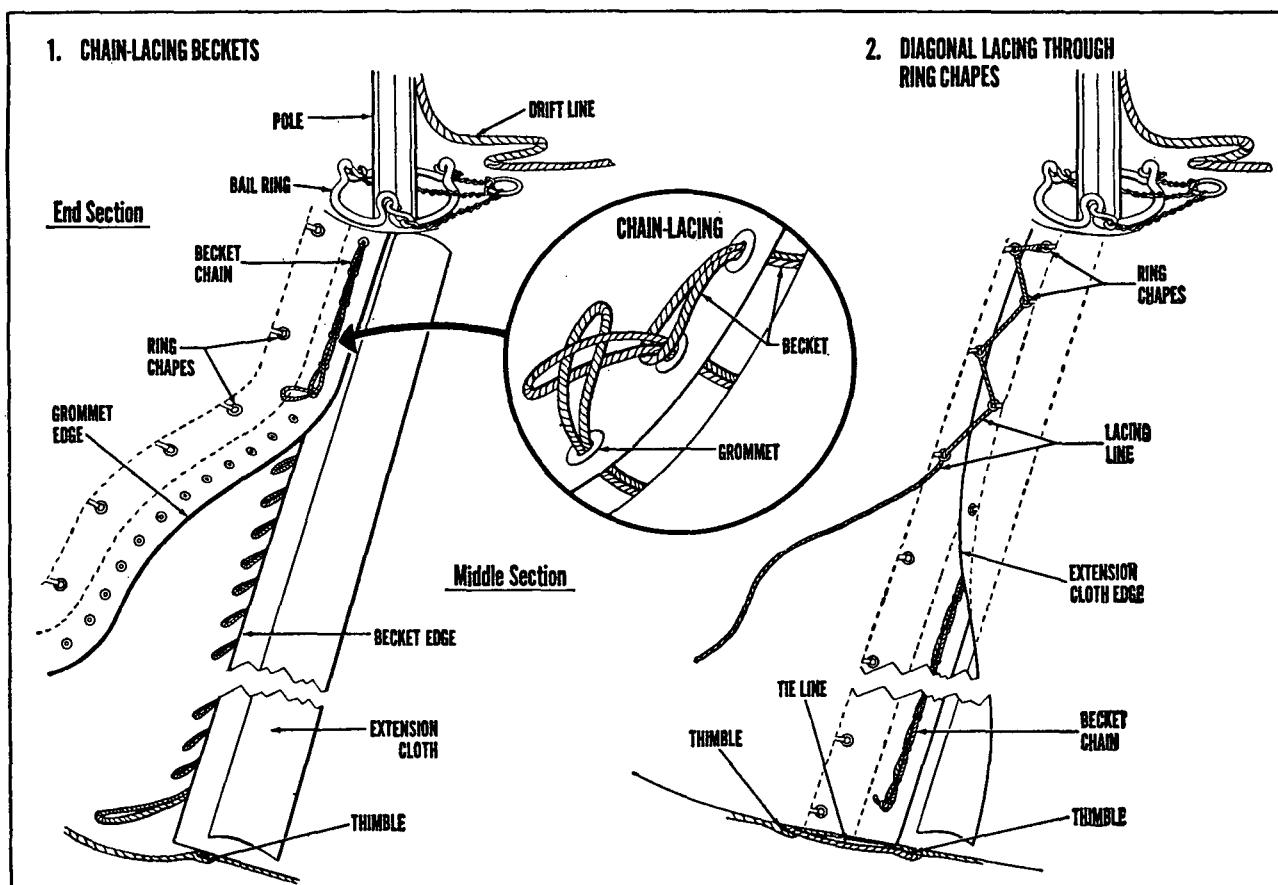


Figure 10. Steps in lacing top sections together of tent, assembly, M-1942.

late it against heat or cold. The line, when attached, covers only the main part of the tent; it does not cover the vestibule.

(9) *Cover.* The tent is provided with a cover for use when it is in storage or is being transported.

c. Ground Plan. Before pitching the tent, study the ground plan carefully (fig 14).

d. Pitching. The tent can be pitched by five men in approximately 20 minutes.

(1) *Pitching tent.*

(a) Spread tent on ground with eave corners matching bottom corners.

(b) Drive a 16-inch pin at each of the eight tent corners. Attach a footstop to each of the four corner pins at front and rear of tent. At each of the four side corners, attach two footstops to one pin (1, fig 15).

(c) Drive the twelve 24-inch pins according to ground plan.

(d) Attach guy lines loosely to long pins (2, fig 15).

(e) Remove corner footstops from 16-inch pins, insert eave poles through eave grommets, and tighten guy lines until poles are vertical (3, fig 15).

(f) Raise tent ridge by inserting spindle of a 9-foot pole through hole in metal plate and

grommet at ridge at front of tent, and spindle of the other 9-foot pole through hole in metal plate and grommet in other end of ridge (4, fig 15).

(g) Secure jumper lines to center poles and to eave poles with two half hitches (5, fig 15).

(h) Reattach the 12 corner footstops to the 8 corner 16-inch pins. Drive the remaining twelve 16-inch pins and attach footstops to them.

(i) Tighten all guy lines.

(2) *Attaching liner to tent.*

(a) Unroll liner so that stovepipe and window openings match those of tent (1, fig 16).

(b) Raise butt end of rear center pole and place it through hole in liner; run liner hoisting lines up poles through bull's eyes at tent ridge (2, fig 16).

(c) Hoist liner up to top of tent and secure lines to center poles (3, fig 16).

(d) Fasten liner to eave corners of tent by tying tie tapes of liner to triangular hooks of tent (4, fig 16).

(e) Tie tie tapes at stovepipe opening of liner to corresponding tie tapes at stovepipe opening of tent. Tie tie tapes at sides of liner

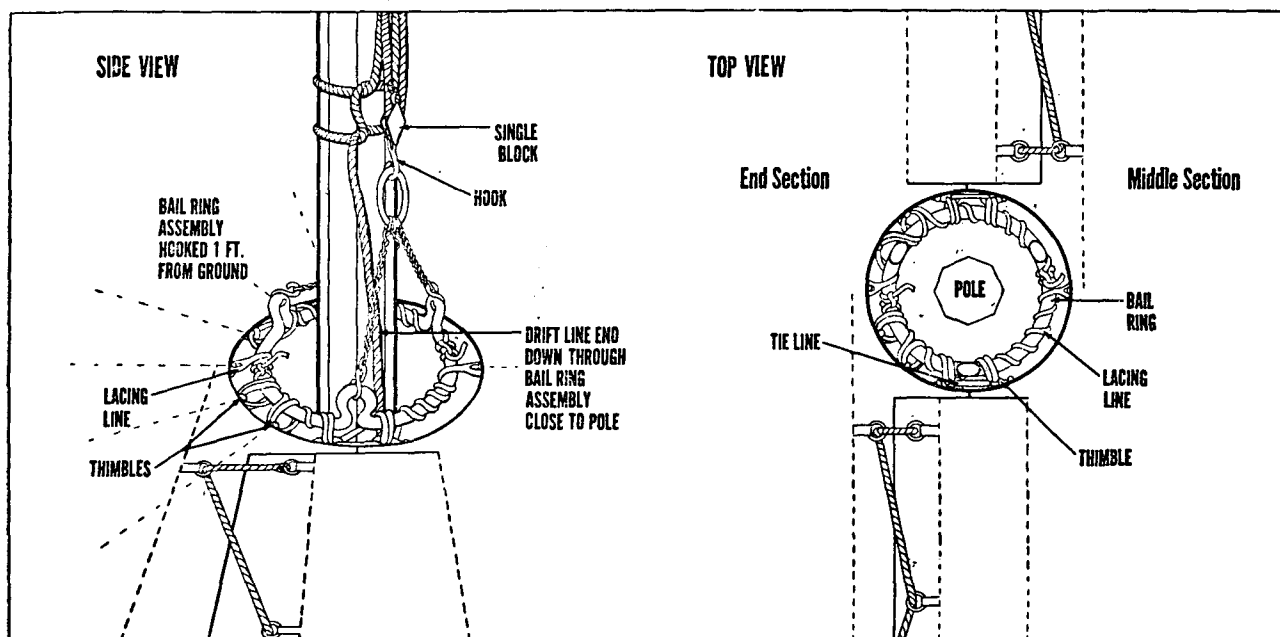


Figure 11. Lacing tent sections to bail rings tent, assembly, M-1942.

to eave to corresponding tie tapes at sides of tent at eave (5, fig 16).

(3) Attaching screens to sidewalls (fig 17). Remove footstops from sidewalls, open slide fasteners at corners and roll up sidewalls and liner of tent and tie them with tie tapes near eave reinforcement. Then place a screen between lugs at each side of tent, aligning grommets on screen with grommets on lugs. Run the 13-foot rope, attached to a top corner of screen, through aligned grommets of screen and lugs at the top, securing with a knot at the last set of aligned grommets. In the same manner, run the 8-foot rope, attached to each side of screen, downward through aligned grommets of screen and lugs, securing with a knot at the last set of aligned grommets. Fold screens at bottom so sod cloths are on ground inside tent. Fasten footstops that were removed from sidewalls to grommets at bottoms of screens, and attach footstops to the 16-inch pins.

e. Striking.

- (1) Remove screens, and lower sidewalls of tent.
- (2) Loosen liner hoisting lines, and untie tapes fastening liner to tent.
- (3) Remove liner.
- (4) Remove all footstops from 16-inch pins.
- (5) Loosen all guy lines and remove center poles.
- (6) Remove all 5-foot 8-inch eave poles.
- (7) Remove all guy lines from 24-inch pins.
- (8) Remove all pins.

f. Folding (fig 18).

- (1) Fold tent at ridge, with tent laid out

flat one side on top of the other, sod cloth and vestibule door flaps extended, and blackout curtain folded neatly one half on top of the other half (1).

(2) Fold door flaps over on top of vestibule, then fold rear of tent over body of tent, the fold line extending from rear ridge plate down along rear body slide fasteners (2). Fold guy lines inside folded tent.

(3) Fold vestibule over body of tent, the fold line extending from front ridge plate down along front body slide fasteners (3).

(4) Fold both the ridge end of tent and the sod cloth end of tent to the eave line (4).

(5) Fold deck of tent to eave line over sidewall. Place exposed guy lines on folded tent (5).

(6) Place liner, folded in the same way as the tent, on top of tent (6).

(7) Fold ends of folded tent and liner toward center (7).


(8) Fold the two ends together (8).

(9) Place folded tent and liner in cover; place screens, each folded in fourths, on top of folded tent and liner; close cover, and tie with the two tielines (9).


7. Tent, General Purpose, Large

a. Use. The tent, general purpose, large FMWWR, OD, complete with pins and poles (fig 19), is designed to be used as a hospital ward, surgical operating room, command post, fire direction center, or messhall. It can also be used for quartering troops, as an assembly tent, for a storage area, or to house components of a field bakery. The tent is intended to be used in temperate and tropical climates;


1. FOLDING MIDDLE SECTIONS (2)

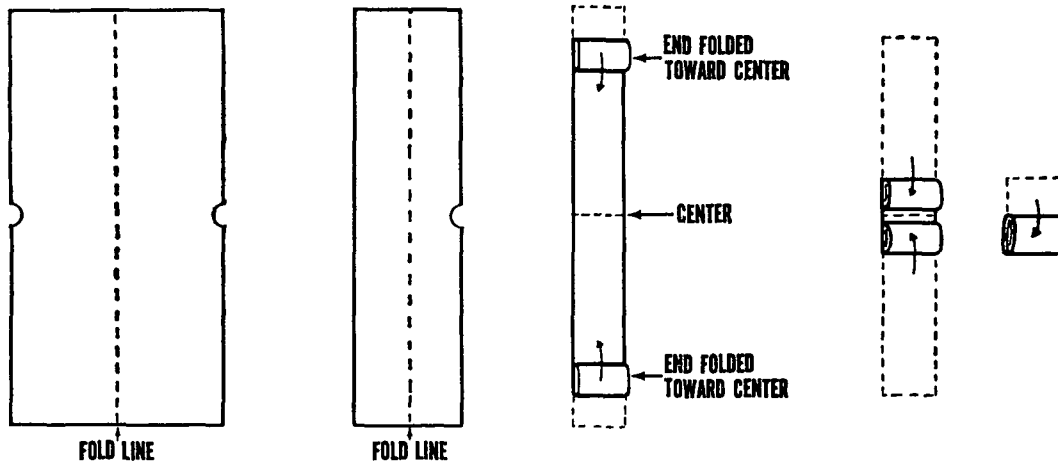

2. FOLDING END SECTIONS (2)

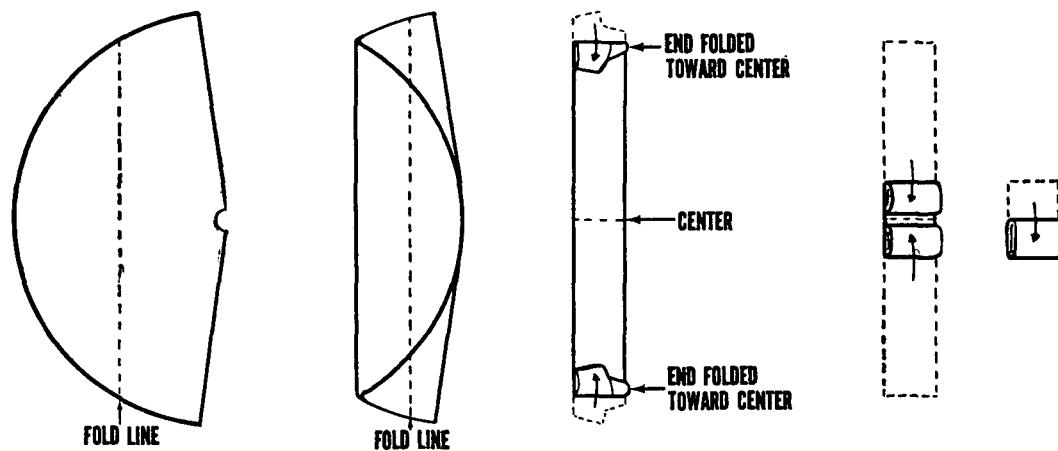

3. FOLDING WALL SECTIONS (4)

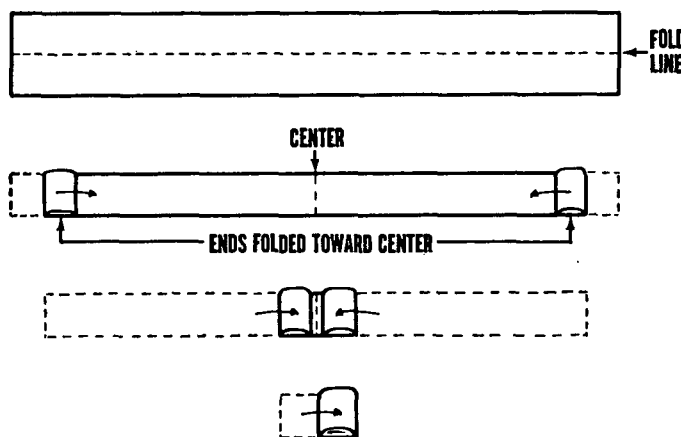

4. PUTTING FOLDED SECTIONS INTO 6 SEPARATE COVERS


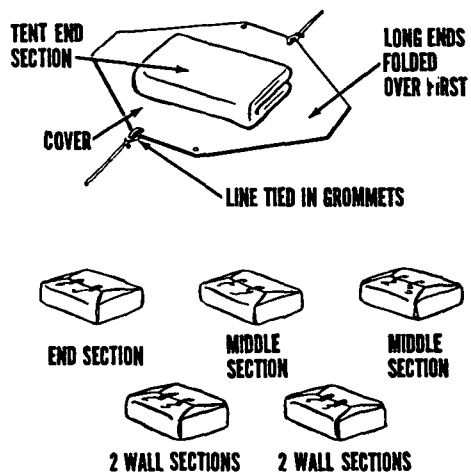


Figure 12. Steps in folding tent, assembly, M-1942.

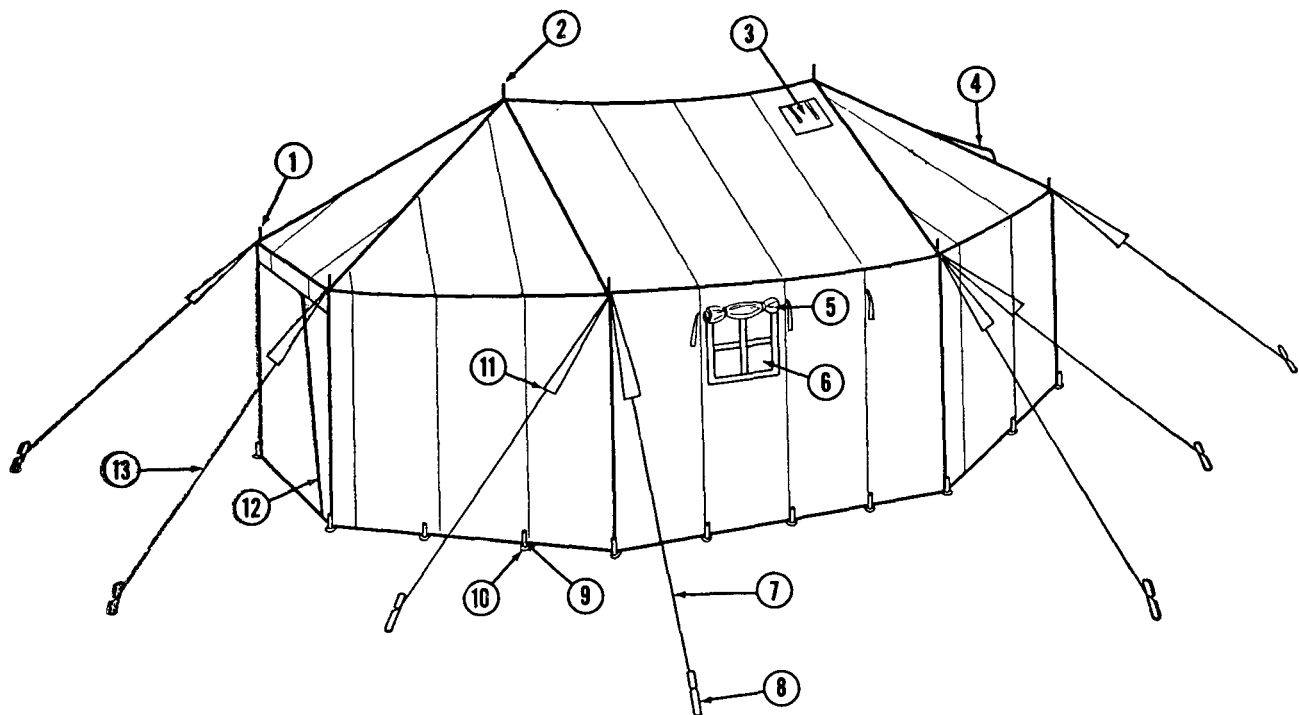

- | | | |
|---------------------|-------------------------|---------------------------|
| 1 Eave pole | 6 Window, w/o screening | 10 Footstop |
| 2 Center pole | 7 Corner line | 11 Tent slip |
| 3 Stovepipe opening | 8 24-inch wood tent pin | 12 Vestibule door opening |
| 4 Ventilator | 9 16-inch wood tent pin | 13 Door eave line |
| 5 Window flap | | |

Figure 13. Tent, command post, M-1945.

however, with the liner, it can be used effectively in cold climates.

b. Description. The tent is a rectangular, hip-roofed, pole-supported tent consisting of eave poles, door poles, center upright poles, tent, and tent liner.

(1) *Tabulated data.*

Height: 12 feet 3 inches at the offset ridge; eave height, 5 feet 6 inches.

Length: 52 feet.

Width: 18 feet.

Weight: tent, 420 pounds; liner, 155 pounds; pins and poles, 245 pounds.

Cube: 69 cubic feet.

Floorspace: 936 square feet.

(2) *Material.* The roof, sidewalls, and end walls are made of 12.29-ounce cotton duck, FMWWR. The whole tent is made in one piece. The canvas is suspended on a webbing framework, which carries the stress and supports the canvas. The walls are split at the four corners and can be fastened together with a slide fastener at each corner.

(3) *Doors.* The tent has two door entrances, one at each end. Each door entrance is 6 feet high and 4 feet wide.

(a) *Door curtains.* Two curtains, attached to each end near the door entrances, slide

along a double wire cable at the eave to open or shut the door entrances.

(b) *Door screens.* A screen is attached on the inside to each side of each door entrance. When in use, the door screens are pulled across the door entrances and secured in place by tying tie tapes at the top of the screens to metal rings at the eave above the door entrances. When not in use, the door screens are rolled to the side inside the tent and secured by tying the screens with the tie tapes at one side of the door.

(4) *Windows.* There are four window assemblies on each side of the tent below the eave. Each window assembly consists of a plastic window screen, a vinyl plastic windowpane, and a canvas blackout flap. The window screen is attached to the sidewall. The windowpane is attached at the top to the sidewall and is secured at the bottom and the two sides by a slide fastener. The slide fastener can be unfastened and the windowpane rolled up and tied at the top with tie tapes. A blackout flap is attached at the top to the sidewall. When the flap is in use, it is secured by tying tie tapes at the two sides and at the bottom; when not in use, it is rolled up and tied at the top with the tapes.

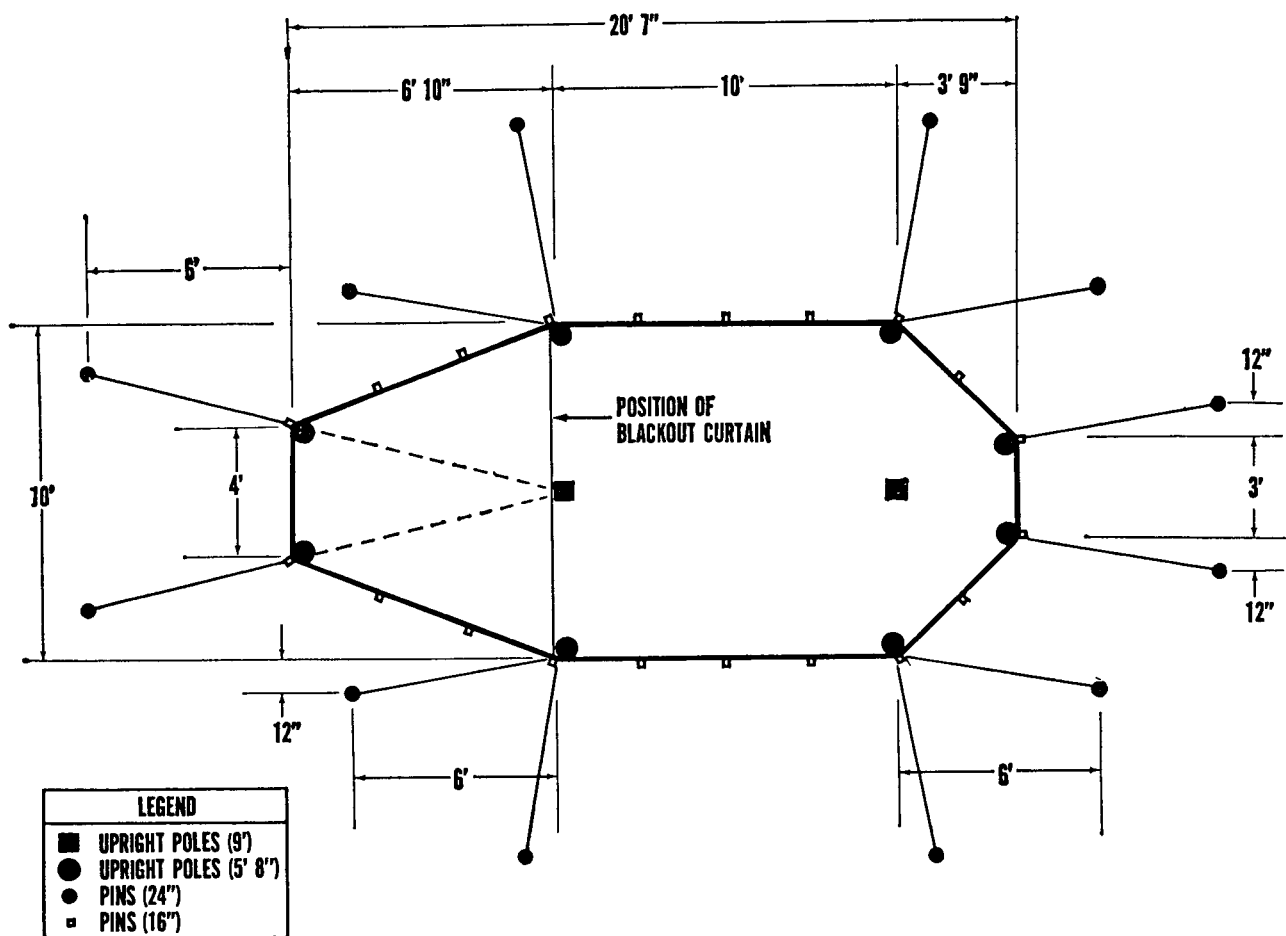


Figure 14. Ground plan of tent, command post, M-1945.

(5) *Ventilation.*

(a) The tent is ventilated by two ventilators, one at the top of each end section near the ridge. The openings are protected by canvas flaps.

(b) When stoves are not being used, the stovepipe openings can also be used as ventilators.

(c) Additional ventilation can be obtained by rolling up the window blackout flaps and the windowpanes and tying them with tie tapes.

(d) The door curtains can be opened for more ventilation.

(e) Additional ventilation can be obtained by rolling up the sides of the tent to the eaves and tying them with tie tapes.

(6) *Heating.* The tent is heated by three M-1941 tent stoves. There are three stovepipe openings built in the top of the tent. Each opening is protected by canvas flaps.

(7) *Cover.* The tent is provided with a cover for use when it is in storage or is being transported.

(8) *Liner.* A liner is available as a separate item of issue. It provides insulation from the cold in winter and reduces radiation from the sun in summer. The liner has 5.2-ounce cotton

cloth sidewalls below the eaves and, in addition, has screening sidewalls made of plastic. The fabric sidewalls can be rolled up to the eaves and secured by tie tapes and thus permit the use of the screening alone. The screening provides protection from insects and permits the liner to be used in hot as well as cold weather. There are two built-in ventilator screens corresponding in location to the two ventilators in the tent. There are four vinyl plastic windows on each fabric sidewall corresponding in location to the windows in the tent. There are three stovepipe openings in the liner corresponding in location to the stovepipe openings in the tent.

c. Ground Plan. Before pitching the tent, study the ground plan carefully (fig 20).

d. Pitching. Six men can pitch the tent in approximately 1-1/4 hours.


(1) *Securing tent to ground in preparation for raising tent walls* (1, fig 21).

(a) Remove tent from cover, and place in position on ground so that corners are square.


(b) Close slide fasteners at tent corners.

(c) Drive a 16-inch wood pin, or in cold climate a 9-inch aluminum pin, at each corner, and attach end wall and sidewall corner footstops to pins.


1. SPREADING TENT ON GROUND, AND ATTACHING CORNER FOOTSTOPS TO PINS

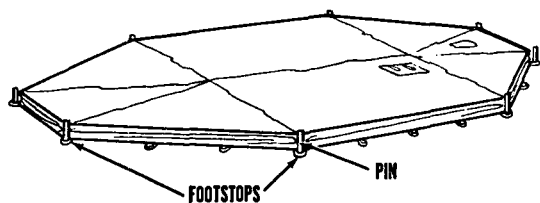


2. DRIVING PINS AND ATTACHING GUY LINES

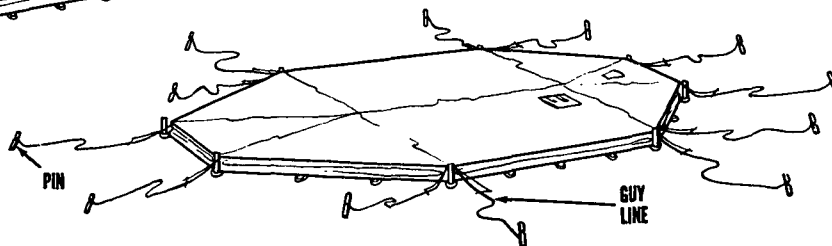

3. REMOVING CORNER FOOTSTOPS, INSERTING EAVE POLES THROUGH GROMMETS, AND TIGHTENING GUY LINES

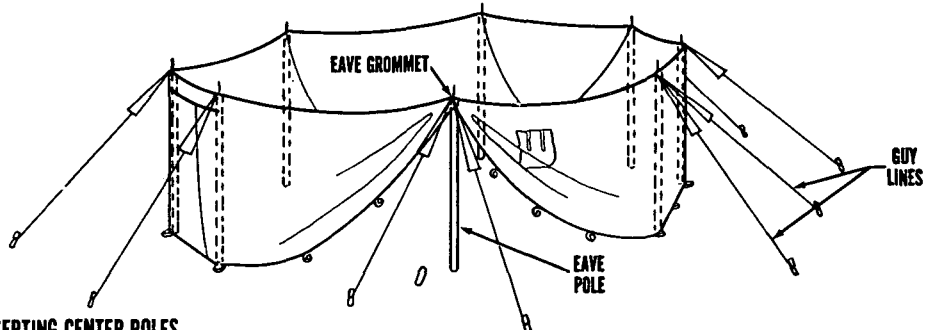

4. RAISING TENT RIDGE BY INSERTING CENTER POLES

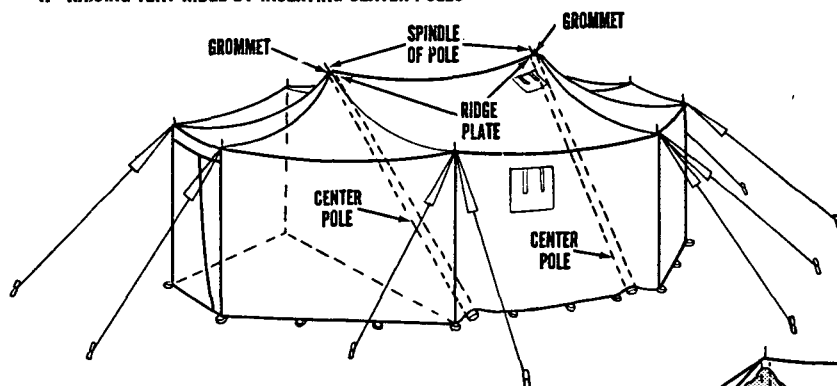

5. SECURING JUMPER LINES TO CENTER POLES AND TO EAVE POLES, ATTACHING FOOTSTOPS TO SHORT PINS, AND TIGHTENING GUY LINES

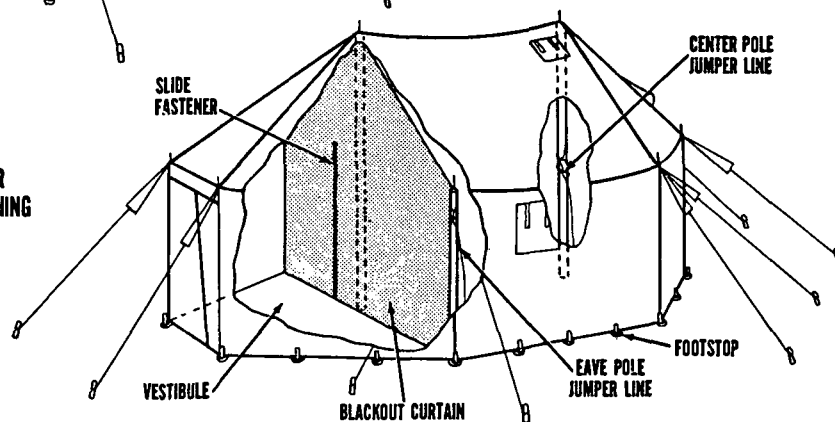


Figure 15. Steps in pitching tent, command post, M-1945.

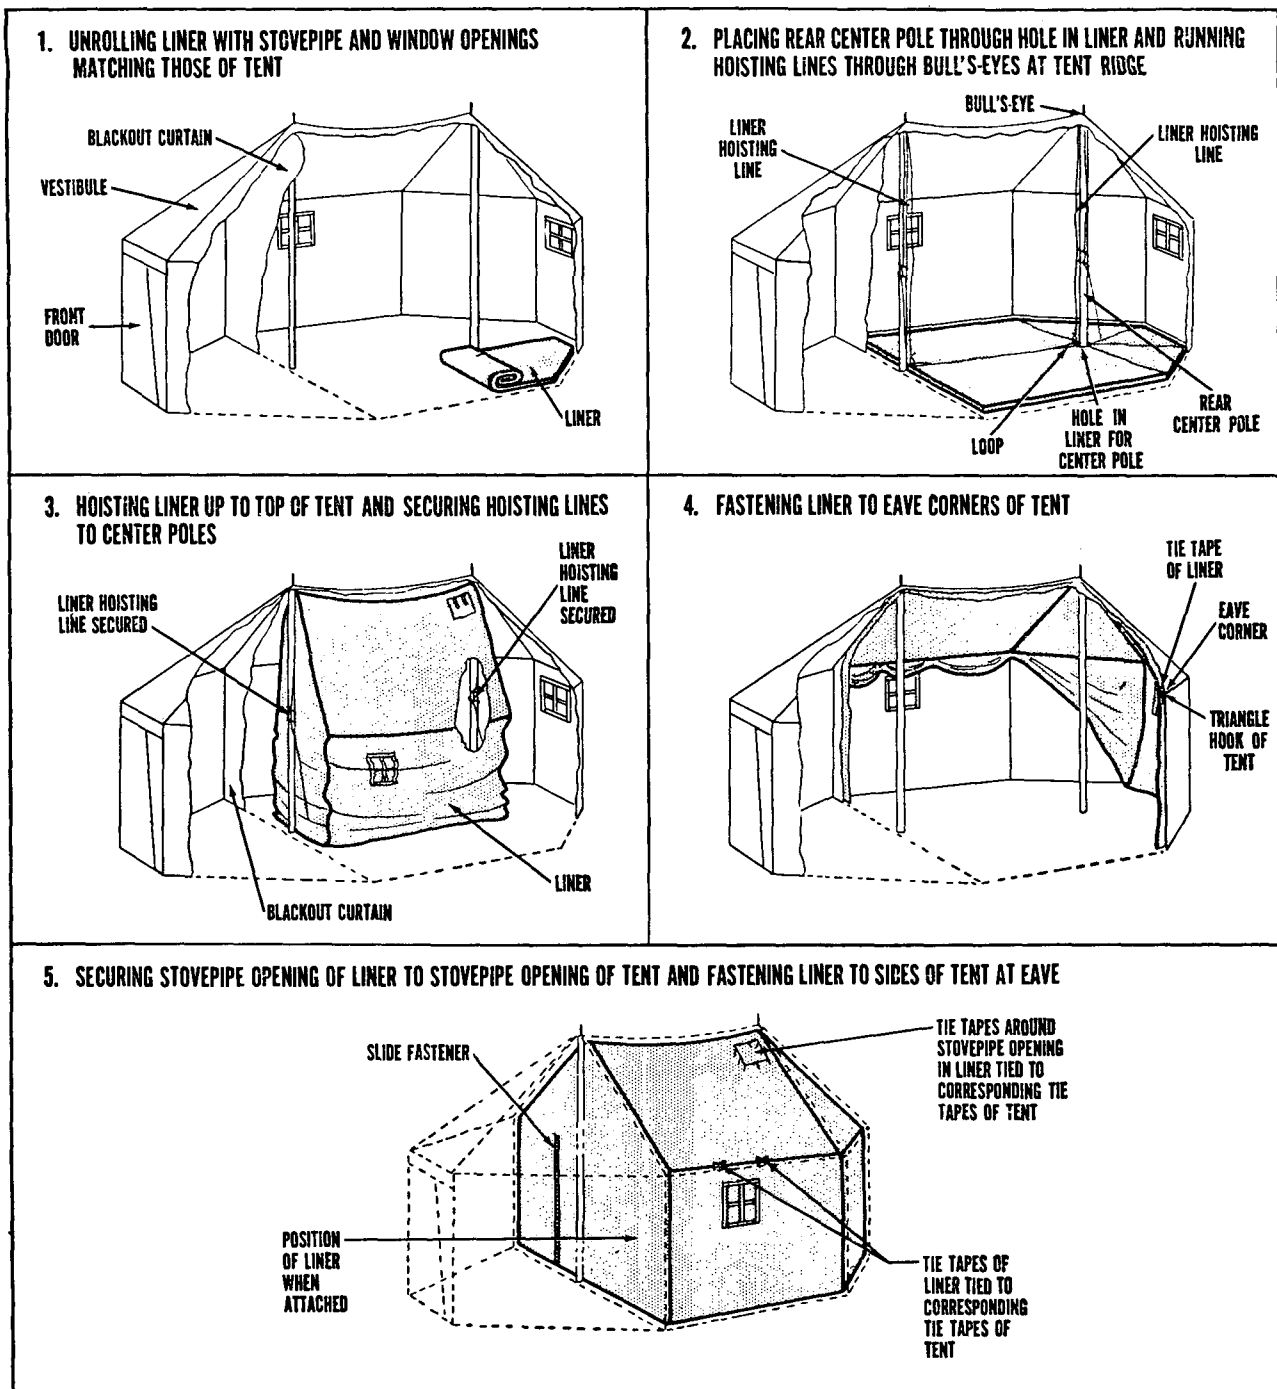


Figure 16. Steps in attaching liner to tent, command post, M-1945.

(d) Drive the 24-inch wood pins, or in cold climate the 12-inch steel pins, according to ground plan, using 5-foot 8-inch poles to measure distance from tent.

(e) Attach side, corner, and door eave lines to pins.

(2) Raising tent sidewalls (2, fig 21).

(a) Insert spindles of 5-foot 8-inch poles through grommets at sides and corners of tent.

(b) Insert spindles of 6-foot 2-inch poles through grommets at front and rear doors.

(c) Raise tent walls by raising side, corner, and door eave poles to an upright position.

(d) Tighten eave lines just enough to hold poles up.

(3) Preparing to raise tent roof (3, fig 21).

(a) Assemble center upright poles, and insert spindles of poles through ridge plates and grommets in ridge of tent.

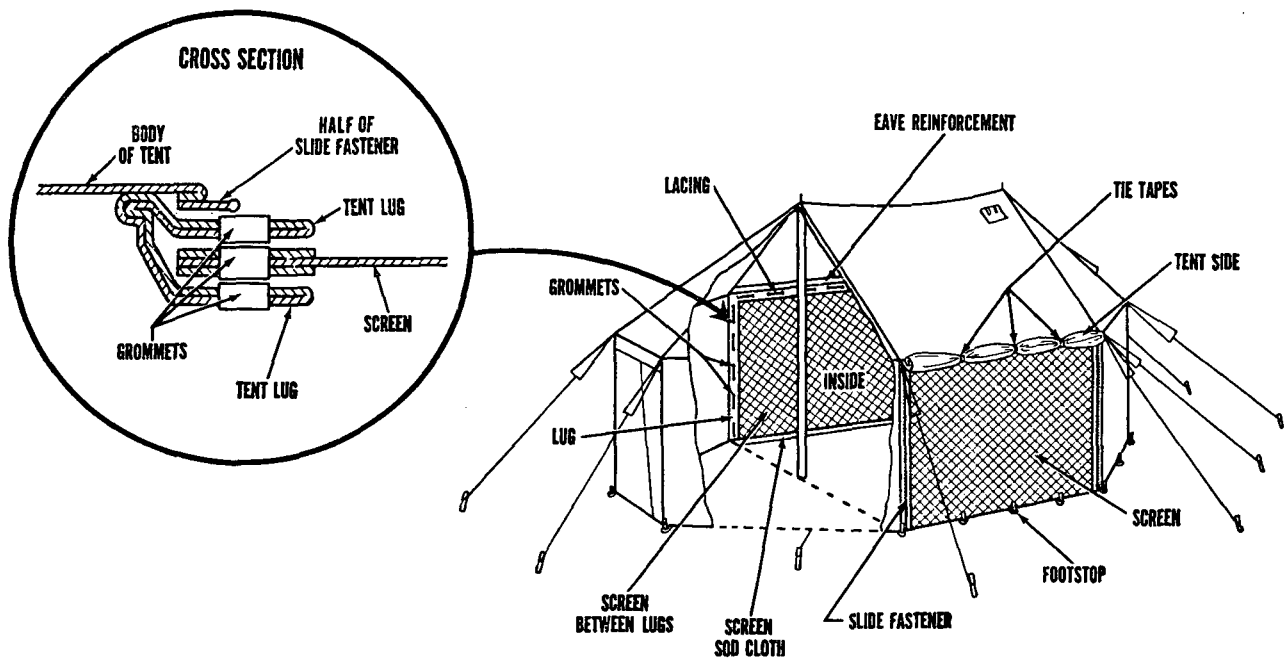


Figure 17. Attaching screens to sidewalls of tent, command post, M-1945.

(b) Attach guy lines to spindles of center upright poles at each end of tent.

(4) *Raising tent roof* (4, fig 21).

(a) Raise the four center upright poles to a vertical position.

(b) Attach all guy lines to pins and tighten.

(c) Drive remaining 16-inch wood pins, or in cold climate the 9-inch aluminum pins, and attach footstops to pins.

(d) Tie jumper lines to side and corner eave poles, door poles, and center upright poles.

(e) Adjust ventilator flap lines and tie them to spindles of corner eave poles.

(f) Straighten all poles, and tighten all lines until tent is smooth.

(g) Tie tie tapes at inside corners of tent around corner eave poles.

(5) *Attaching liner to tent* (fig 22).

(a) Loosen slightly all guy lines by adjusting tent slips (1).

(b) Unfold tent liner inside tent on one side of center poles so that stovepipe openings of tent liner are on the same side of tent as stovepipe openings of tent (2).

(c) Lift each center upright pole, pull liner under pole, and slip liner pole sleeve over pole (3).

(d) Tie ridge suspension lines at liner pole openings to tent ridge plates above center upright poles, and then tie liner suspension lines at ridge of liner to D-rings located along tent ridge (4).

(e) Secure liner to tent doors, corners, and sidewall eaves by passing eave suspension

lines on liner through hardware eye on inside of tent; and then run suspension lines through grommets in liner and secure to D-rings on liner (5).

(f) Tie tie tapes at sides of liner door openings to door eave poles.

(g) Wrap liner pole sleeves around center upright poles and tie with tie tapes (6).

(h) Secure footstops in liner sidewall screen to tent footstop pins (6).

(i) Tighten all tent guy lines.

e. *Striking*. Six men can strike the tent in approximately 50 minutes.

(1) *Removing liner*.

(a) Remove tent and tent liner footstops from 16-inch wood or 9-inch aluminum pins.

((b) Untie tie tapes at liner corners. Untie tie tapes from door eave poles. Untie tie tapes of pole sleeves from around center upright poles.

(c) Untie and remove eave suspension lines from liner D-rings and grommets and tent hardware eye.

(d) Untie ridge suspension lines from tent ridge plates and D-rings, and allow liner to drop to the ground.

(e) Loosen all guy lines. Lift center upright poles slightly and remove liner from the poles.

(2) *Striking tent*.

(a) Untie corner lug tie tapes and unwrap lugs from corner eave poles.

(b) Close all window assemblies. Close doors and fasten wooden toggles to toggle chapes.

(c) Untie jumper lines from center up-

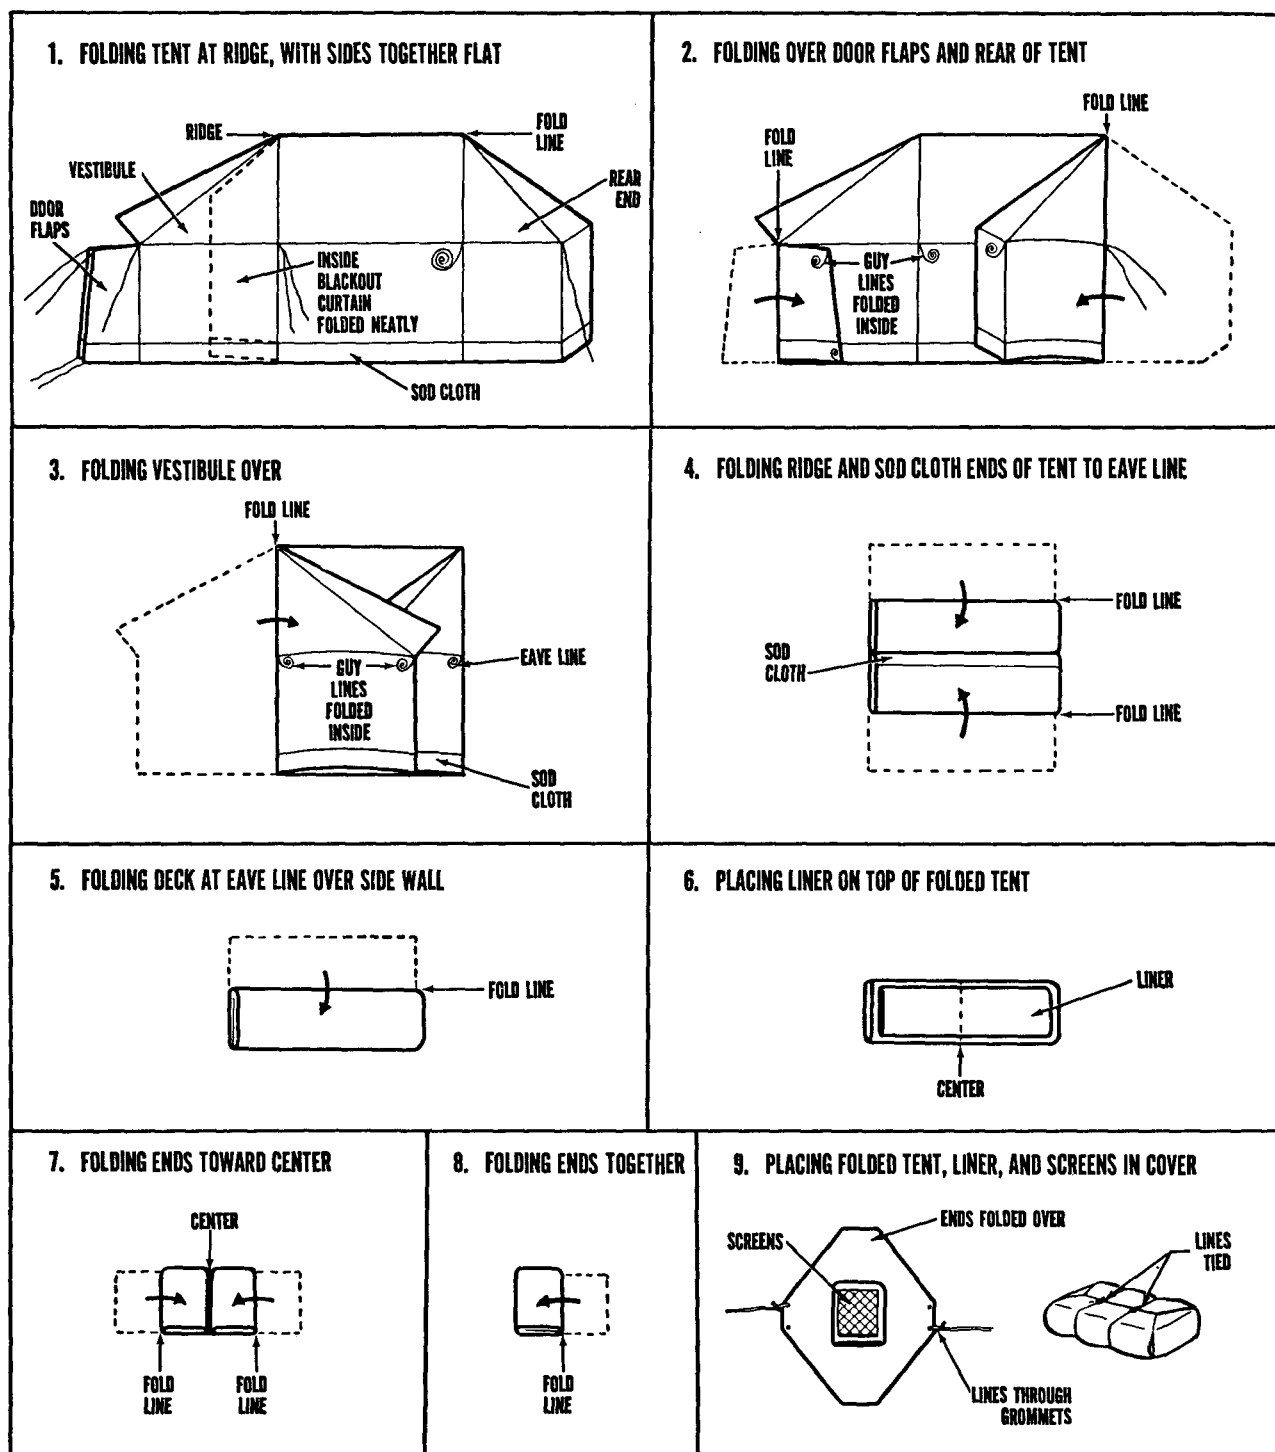


Figure 18. Steps in folding tent, command post, M-1945.

right poles and from eave and door poles.

(d) Remove all footstop pins except those at each corner of the tent.

(e) Remove all eave guy lines from guy line pins except those at the corners of the tent. Remove all unused guy line pins.

(f) Remove door eave poles and all other eave poles except those at corners.


(g) Remove ridge guy lines from tent pins, and lower center upright poles gently to the ground. Remove all unused tent pins.

(h) Unfasten the eight corner eave guy lines from guy line pins, remove corner eave poles, remove corner footstops from footstop pins, and remove remaining tent pins.

f. Folding.

(1) Folding liner (fig 23).

(a) Lay liner out as flat as possible with eave suspension lines rolled and placed on top of liner. Fold side and end walls and sidewall screens under liner; fold triangular ends of end walls over liner roof (1).

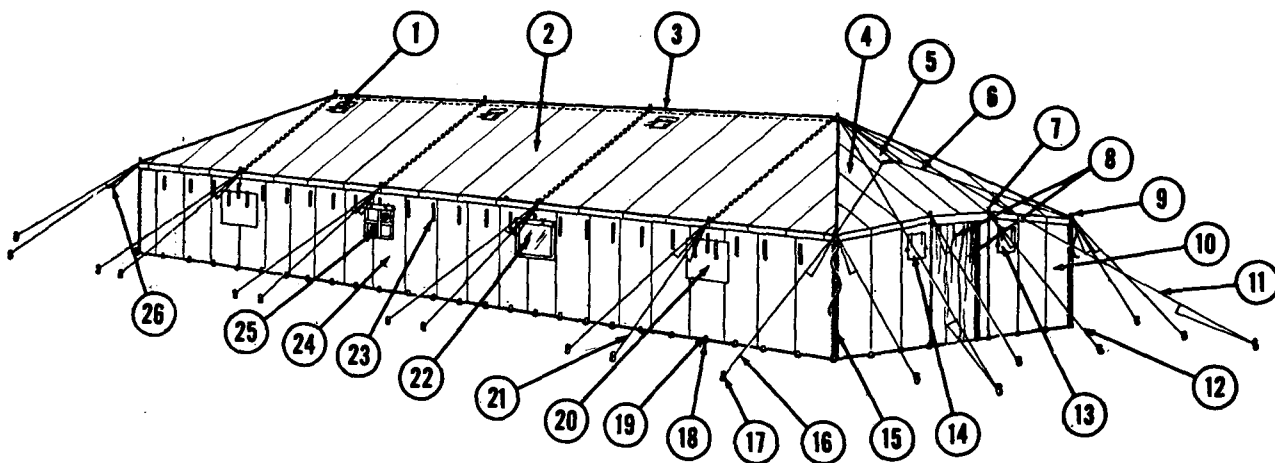

- | | | |
|------------------------|---|-------------------------|
| 1 Stovepipe opening | 10 End wall | 19 Footstop pin |
| 2 Side roof | 11 Ridge guy line | 20 Window blackout flap |
| 3 Center pole | 12 Door eave guy line | 21 Side eave guy line |
| 4 End roof | 13 Care and maintenance instructions flap | 22 Windowpane |
| 5 Ventilator | 14 Erection instructions flap | 23 Tie tape |
| 6 Ventilator flap line | 15 Slide fastener | 24 Sidewall |
| 7 Door pole | 16 Corner eave guy line | 25 Window screen |
| 8 Door curtain | 17 Guy line pin | 26 Tent slip |
| 9 Eave pole | 18 Footstop | |

Figure 19. Tent, general purpose, large.

(b) Fold ends of liner toward center, first making a 3-1/2-foot fold and succeeding folds of 6 feet each. Fold one end of folded liner over the other (2). Make sure that folds do not come at windows. Dimensions of folded liner at this point are approximately 6 by 18 feet.

(c) Fold one end of liner toward the center and over the other end so that dimensions of folded liner are approximately 6 by 6 feet (3). Make sure that folds do not come at the windows.

(d) Fold liner in half twice so that dimensions of folded liner are approximately 3 by 3 feet; place folded liner in center of liner cover, fold all cover ends of flaps neatly within package, and close cover securely (4).

(2) Folding tent (fig 24).

(a) Open corner slide fasteners, close tent doors, close and secure stovepipe openings, and close and secure window assemblies.

(b) Spread tent out flat, outside up, and coil guy lines and place them on tent roof.

(c) Fold end and sidewalls, along eave line, on tent roof (1).

(d) Fold ends of tent toward center, first making a 3-1/2 foot fold and succeeding folds of 6 feet each. Fold one end of tent over the other (2). Care should be taken that folds do not come at windows.

(e) Fold tent in half across the length; fold tent again in half; place folded tent in center of cover (2). Close cover securely.

8. Tent, General Purpose, Medium

a. *Use.* The tent, general purpose, medium, FMWWR, OD, complete with pins and poles (fig 25), is designed to be used primarily for the quartering of troops. It can also be used as a command post, a fire support control center, or a messhall; and it can be used for artillery operations, storage, housing components of a field hospital, or for housing components of a field bakery. The tent is intended to be used in temperate and tropical climates; however, with the liner, it can be used effectively in cold climates.

b. *Description.* The tent is a rectangular, hip-roofed, pole-supported tent consisting of eave poles, door poles, center upright poles, ridge pole, tent, and tent liner.

(1) Tabulated data.

Height: ridge height, 10 feet; eave height, 5 feet 6 inches.

Length: 32 feet 8 inches.

Width: 16 feet.

Weight: tent, 269 pounds; liner, 100 pounds; pins and poles, 200 pounds.

Cube: 33 cubic feet.

Floorspace: 528 square feet.

(2) *Material.* The roof, sidewalls, and end walls are made of 12.29-ounce duck, FMWWR. The whole tent is made in one piece. The canvas is suspended on a webbing framework which carries the stress and supports the canvas. The walls are split at the four corners and

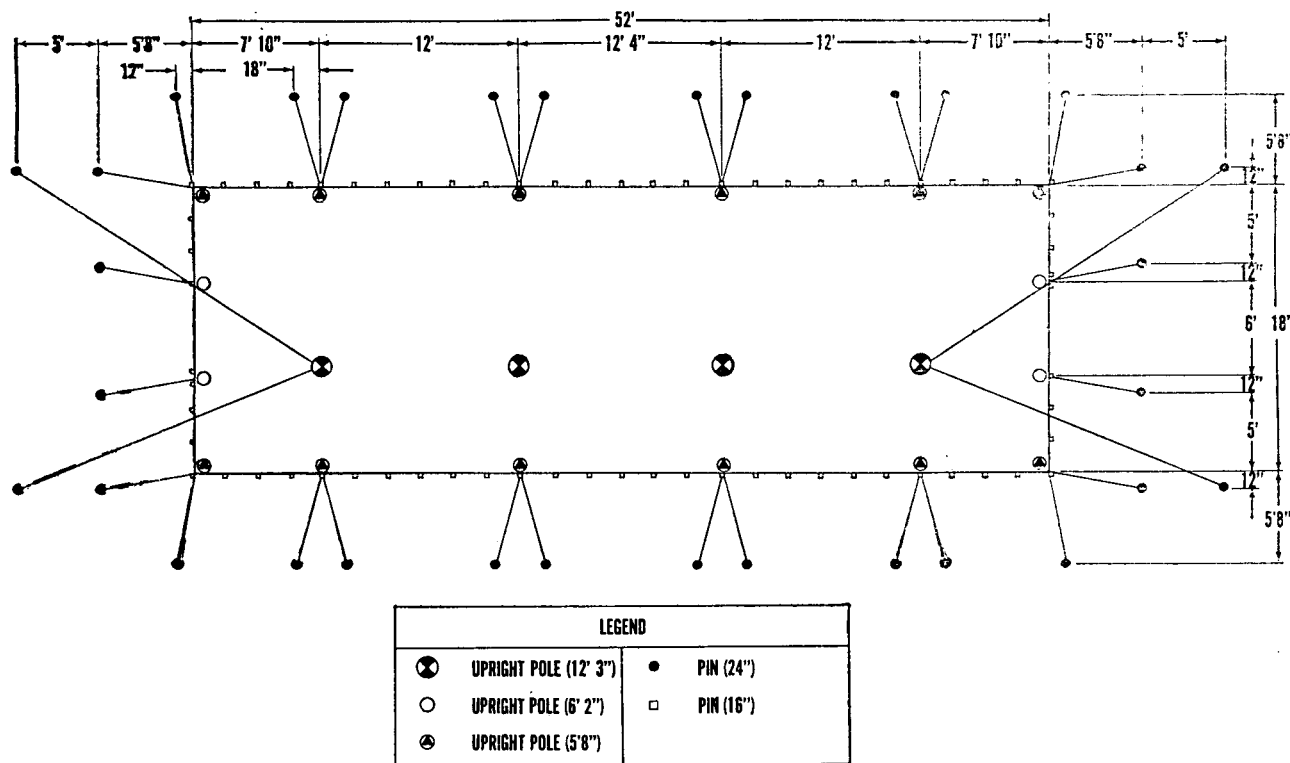


Figure 20. Ground plan of tent, general purpose, large.

can be fastened together with a slide fastener at each corner.

(3) *Doors.* The tent has two door entrances, one at each end. Each door entrance is 6 feet high and 4 feet wide.

(a) *Door curtains.* Two curtains, attached to each end near the door entrances, slide along a double wire cable at the eave to open or shut the door entrances.

(b) *Door screens.* A screen is attached on the inside to each side of each door entrance. When in use, the door screens are pulled across the door entrances and secured in place by tying tie tapes at the top of the screens to metal rings at the eave above the door entrances. When not in use, the door screens are rolled to the side inside the tent and secured by tying tie tapes along the sides of the screens.

(4) *Ventilation.*

(a) The tent is ventilated by two ventilators, one at the top of each end section near the ridge. The openings are protected by canvas flaps.

(b) When stoves are not being used, the stovepipe openings can also be used as ventilators.

(c) The door curtains can be opened for more ventilation.

(d) Still more ventilation can be obtained by rolling up the sides of the tent to the eaves and tying them with tie tapes.

(5) *Heating.* The tent is heated by two M-1941 tent stoves. There are two stovepipe openings built in near the two large upright

poles of the tent. The openings are protected by canvas flaps.

(6) *Cover.* The tent is provided with a cover for use when it is in storage or is being transported.

(7) *Liner.* A liner with cover is available as a separate item of issue. It provides insulation from the cold in winter and reduces radiation from the sun in summer. The liner has both fabric and screening sidewalls below the eaves. The fabric sidewalls are made of 5.2-ounce cotton cloth. The screening sidewalls are made of plastic. The fabric sidewalls can be rolled up to the eaves and secured by tie tapes and thus permit the use of the screening alone. The screening provides protection from insects and permits the liner to be used in hot as well as cold weather. There are two built-in ventilator screens corresponding in location to the two ventilators in the tent. There are two stovepipe openings in the liner corresponding in location to the stovepipe openings in the tent.

c. *Ground Plan.* Before pitching the tent, study the ground plan carefully (fig 26).

d. *Pitching.* Four men can pitch the tent in approximately 40 minutes.

(1) *Securing tent to ground in preparation for tent walls (1, fig 27).*

(a) Remove tent from cover, and place it in position on the ground so that corners are square.

(b) Close slide fasteners at tent corners.

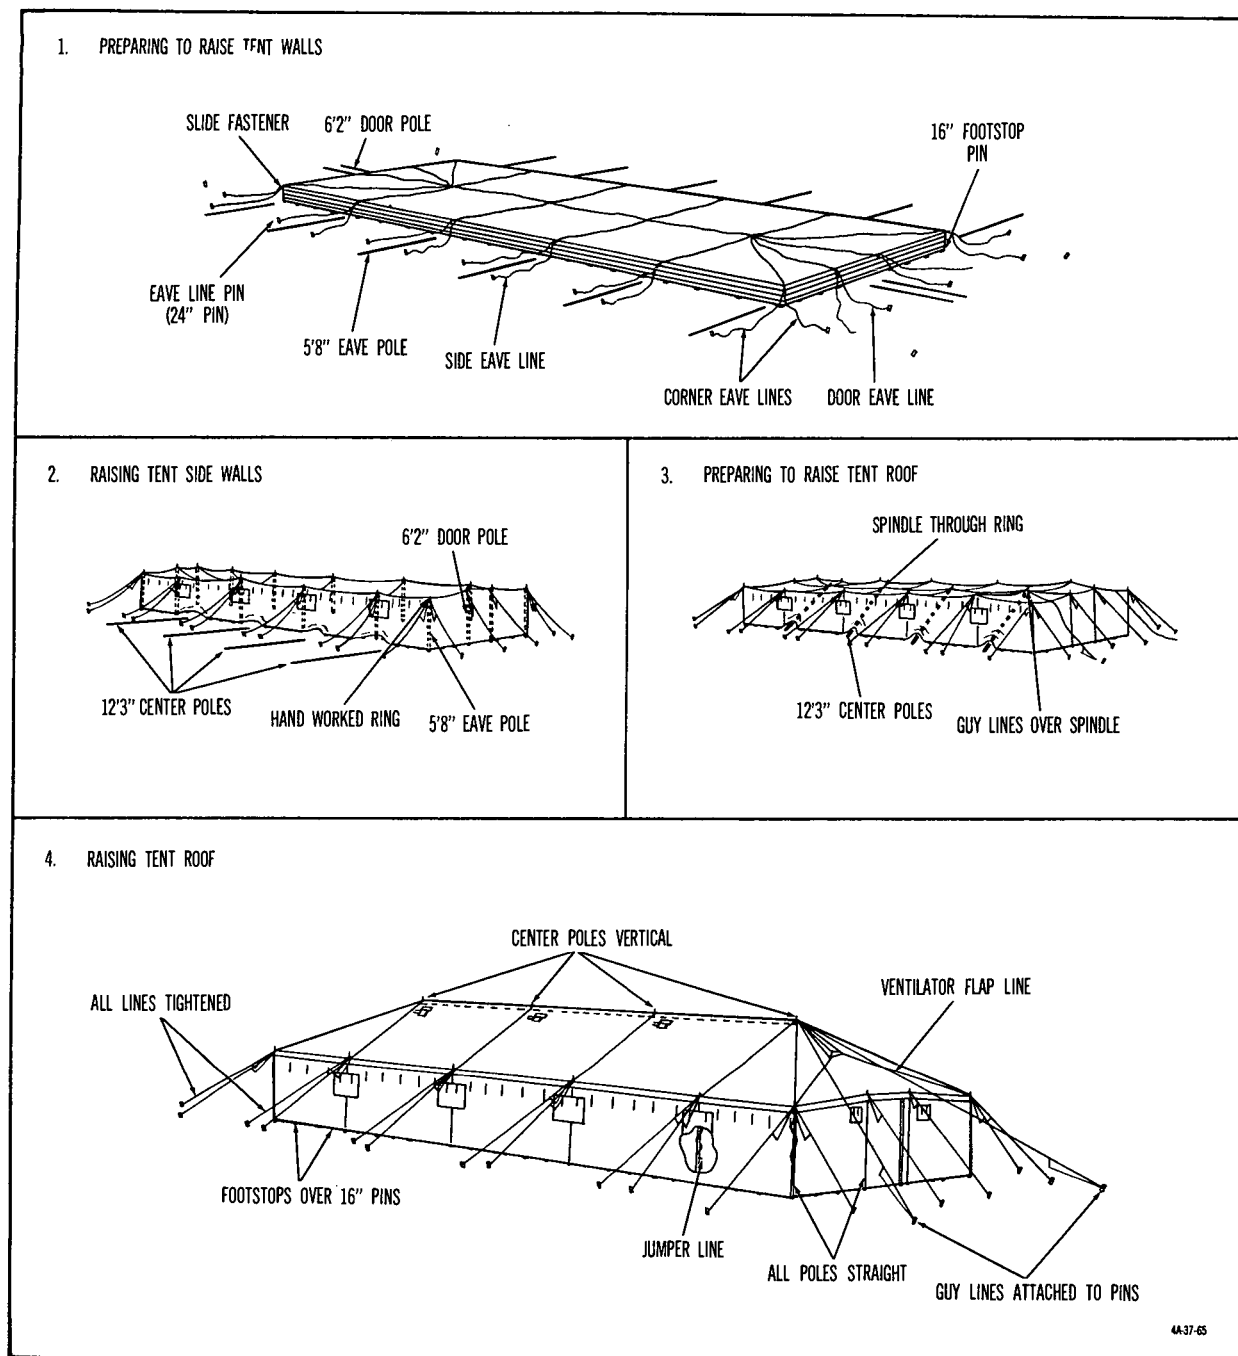


Figure 21. Steps in pitching tent, general purpose, large.

(c) Drive a 16-inch wood pin, or in cold climate a 9-inch aluminum pin, at each corner, and attach end wall and sidewall corner footstops to pins.

(d) Drive the 24-inch wood pins, or in cold climate the 12-inch steel pins, according to the ground plan, using the 5-foot 8-inch poles to measure distance from the tent.

(e) Attach side, corner, and door eave lines to pins.

(2) *Raising tent sidewalls (2, fig 27).*

(a) Insert spindles of 5-foot 8-inch poles through grommets at sides and corners of tent.

(b) Insert spindles of 6-foot 2-inch poles through grommets at front and rear doors.

(c) Raise tent walls by raising side, corner, and door eave poles to an upright position.

(d) Tighten eave lines just enough to hold poles up.

(3) *Preparing to raise tent roof (3, fig 27).*

(a) Assemble center upright poles and ridge pole.

(b) Slide ridge pole through tent door and position it under tent ridge.

(c) Insert spindles of center upright poles through holes in ridge pole, through tent

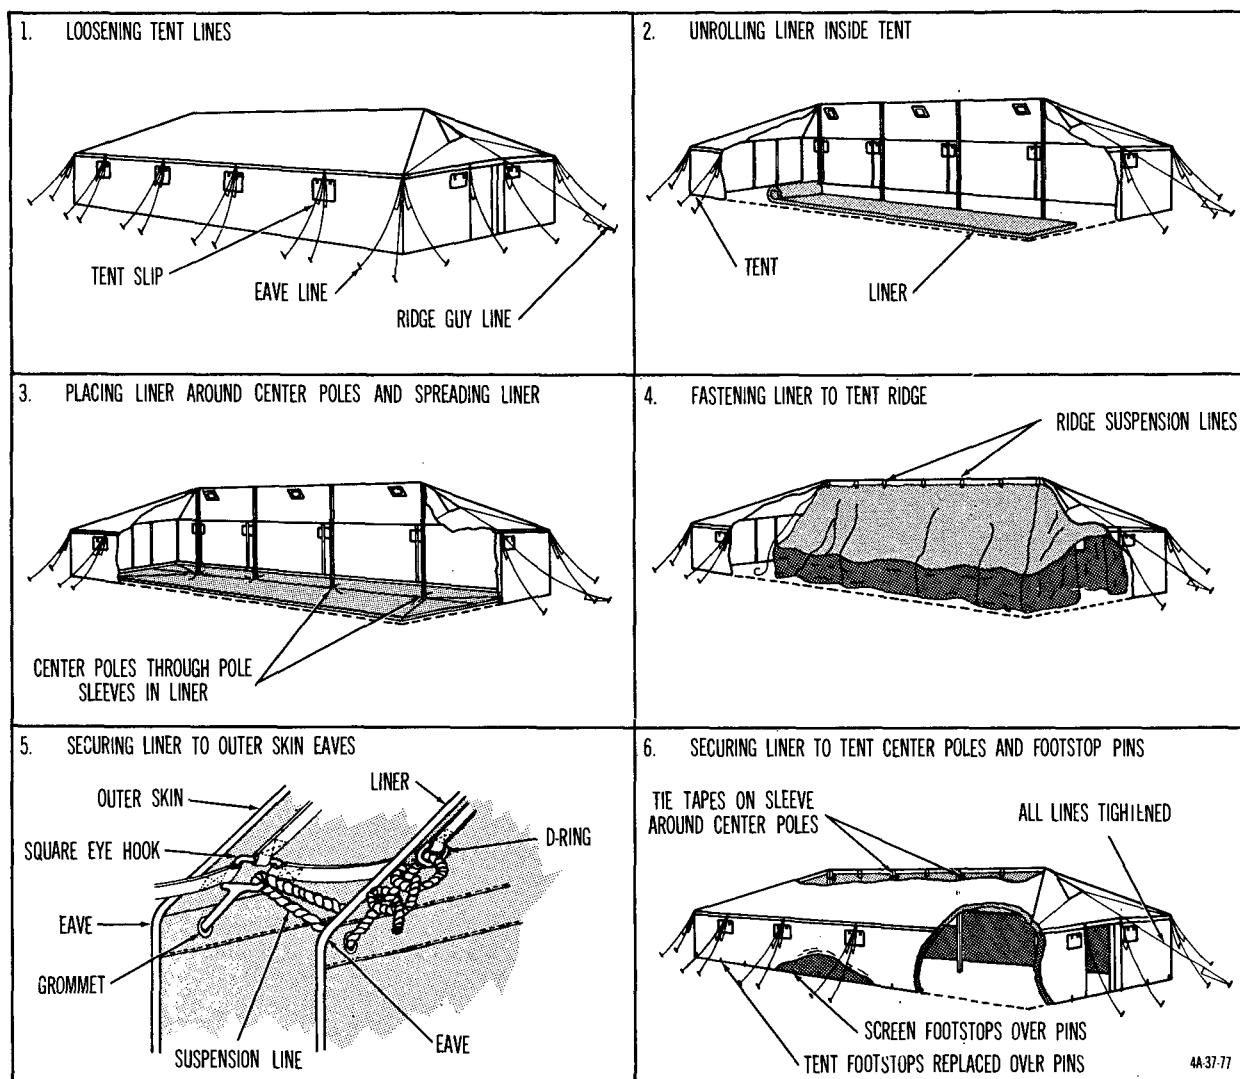


Figure 22. Steps in attaching liner to tent, general purpose, large.

ridge plates, and through grommets in tent ridge.

(d) Attach guy lines to spindles of center upright poles at each end of the tent.

(4) *Raising tent roof* (4, fig 27).

(a) Raise the two center upright poles to a vertical position.

(b) Attach all guy lines to pins and tighten.

(c) Drive remaining 16-inch wood pins, or in cold climate the 9-inch aluminum pins, and attach footstops to pins.

(d) Tie jumper lines to side and corner eave poles, door poles, and center upright poles.

(e) Adjust ventilator flap lines and tie them to spindles of corner eave poles.

(f) Straighten all poles and tighten all lines until tent is smooth.

(g) Tie tie tapes at inside corners of tent around corner eave poles.

(5) *Attaching liner to tent* (fig 28).

(a) Loosen slightly all guy lines by adjusting tent slips (1).

(b) Unfold tent liner inside tent on one side of center poles so that stovepipe openings of tent liner are on same side of tent as stovepipe openings in tent (2).

(c) Lift each center upright pole, pull liner under pole, and slip liner pole sleeve over pole (3).

(d) Tie liner ridge suspension lines to tent ridge plates and to tent ridge pole (4).

(e) Secure liner to tent doors, corners, and sidewall eaves by passing eave suspension lines on liner through hardware eye on inside of tent; and then run suspension lines through grommets in liner and secure to D-rings on liner (5, fig 22).

(f) Tie tie tapes at sides of liner door openings to door eave poles.

(g) Wrap liner pole sleeves around center upright poles and tie with tie tapes (5, fig 28).

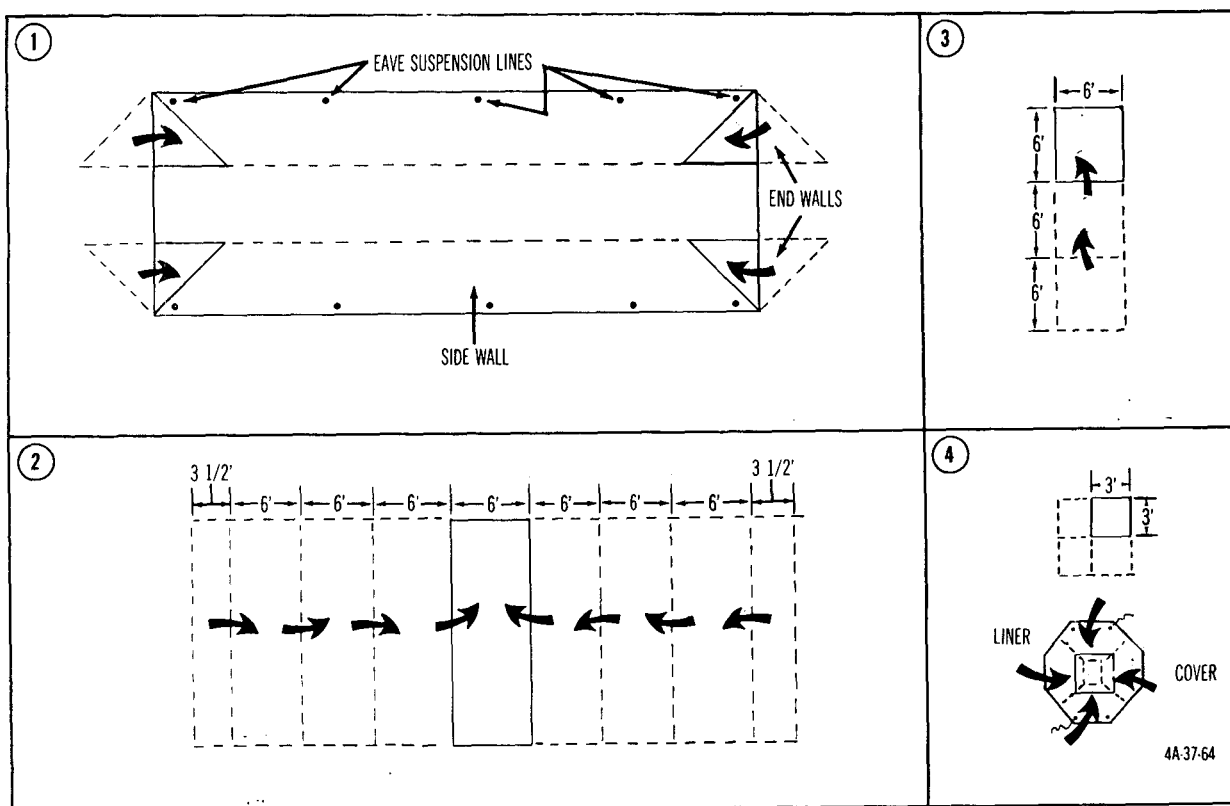


Figure 23. Steps in folding liner of tent, general purpose, large.

(h) Secure footstops in liner sidewall screen to tent footstop pins (5, fig 28).

(i) Tighten all tent guy lines.

e. *Striking.* Four men can strike the tent in approximately 30 minutes.

(1) *Removing liner.*

(a) Untie tie tapes at corners. Untie tie tapes at door entrances from door eave poles. Untie tie tapes of pole sleeves from around center upright poles.

(b) Remove footstops of tent and liner screen from footstop pins.

(c) Untie and remove eave suspension lines from liner D-rings and grommets, and tent hardware eye.

(d) Untie ridge suspension lines from tent ridge plates and ridge pole, and allow tent liner to drop to the ground.

(e) Loosen all guy lines. Lift center upright poles slightly and remove liner from the poles.

(2) *Striking tent.*

(a) Untie corner lug tie tapes and unwrap lugs from corner eave poles.

(b) Close doors and fasten wooden toggles to toggle chapes.

(c) Untie jumper lines from center upright poles and from eave and door poles.

(d) Remove all footstop pins except those at each corner of the tent.

(e) Remove all eave guy lines from guy line pins except those at the corners of the tent. Remove all unused guy line pins.

(f) Remove door eave poles and all other eave poles except those at corners.

(g) Remove ridge guy lines from tent pins, and lower center upright poles gently to the ground. Remove all unused tent pins.

(h) Disconnect center poles from ridge pole and remove poles from tent. Disassemble ridge pole and center poles.

(i) Unfasten the eight corner eave guy lines from guy line pins; remove corner eave poles; remove corner footstops from footstop pins; and remove remaining tent pins.

f. *Folding.*

(1) *Folding liner.*

(a) Lay liner out as flat as possible with eave suspension lines rolled and placed on top of liner. Fold side and end walls and sidewall screens under liner; fold triangular ends of end walls over liner roof (1, fig 29).

(b) Fold ends of liner toward center, making 6-foot folds. Fold one end of folded liner over the other (2, fig 29).

(c) Fold one end of folded liner toward the center and over the other end so that dimensions of folded liner are approximately 6 feet by 6 feet (3, fig 23).

(d) Fold liner in half twice so that dimensions of folded liner are approximately 3 by 3 feet, place folded liner in center of liner cover, fold all cover ends of flaps neatly within package, and close cover securely (4, fig 23).

(2) *Folding tent.*

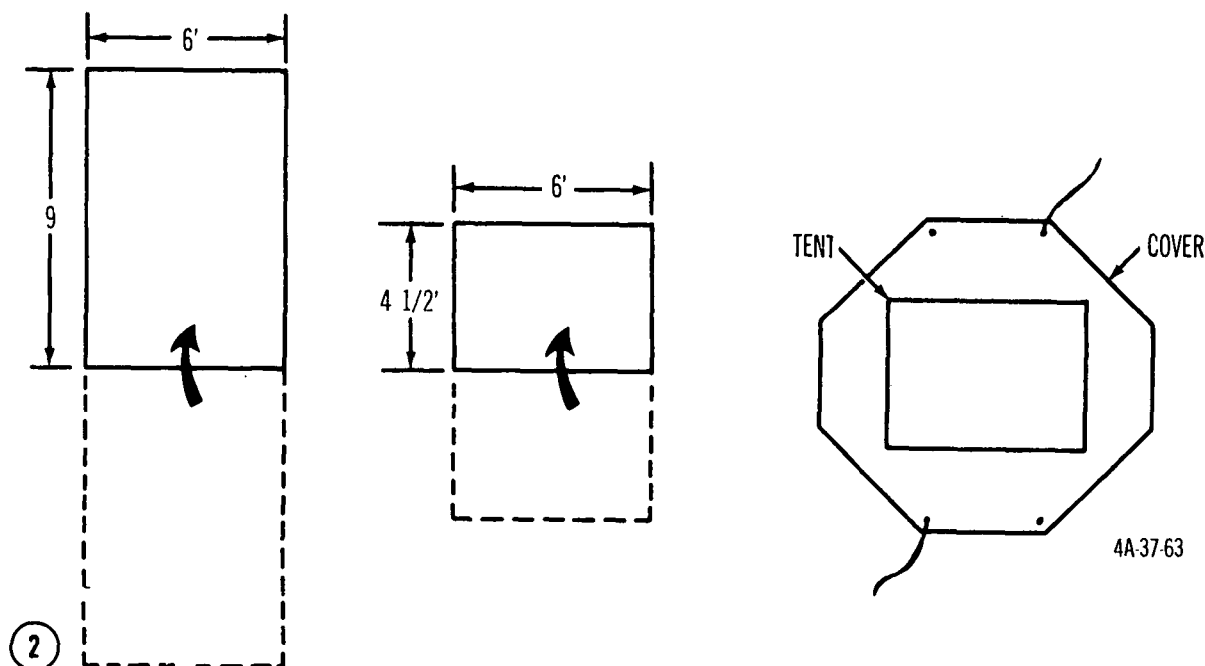
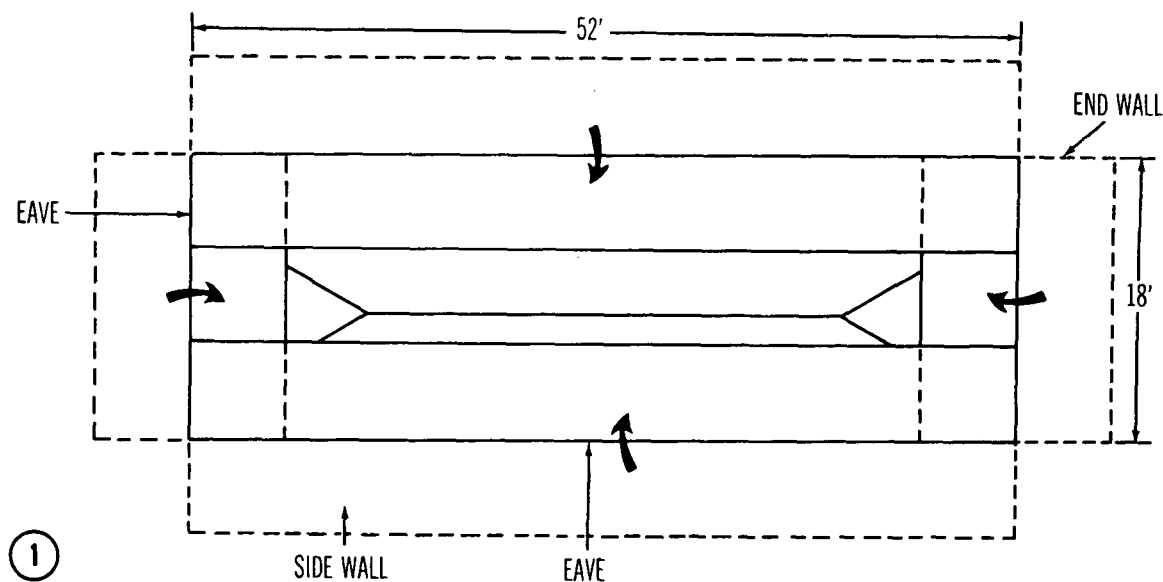


Figure 24. Steps in folding tent, general purpose, large.

(a) Open corner slide fasteners, close tent doors, and close and secure stovepipe openings.

(b) Spread tent out flat, outside up, and coil guy lines and place them on tent roof.

(c) Fold end and sidewalls, along eave line, on tent roof (1, fig 24).

(d) Fold ends of tent toward center, making 6-foot folds. Fold one end of folded tent over the other (2, fig 29).


(e) Fold each end of folded tent toward center, making 3-foot folds; and overlap one end over the other (fig 30).

(f) Fold tent in half and place in center of cover (fig 30). Close cover securely.

9. Tent, General Purpose, Small

a. Use. The tent, general purpose, small, FMWWR, OD, complete with pins and poles (fig 31), is designed to be used as a command post, fire direction center, battalion aid station, or for any general purpose use. The tent is intended to be used in temperate and tropical climates; however, with the liner, it can be used effectively in cold climates.

b. Description. The tent is a six-sided pyramidal tent, supported by a telescopic center pole and eight telescopic eave poles. A front and rear entrance is provided, each with a lacing flap arrangement to permit vestibule attachment or the erection of tents in tandem.

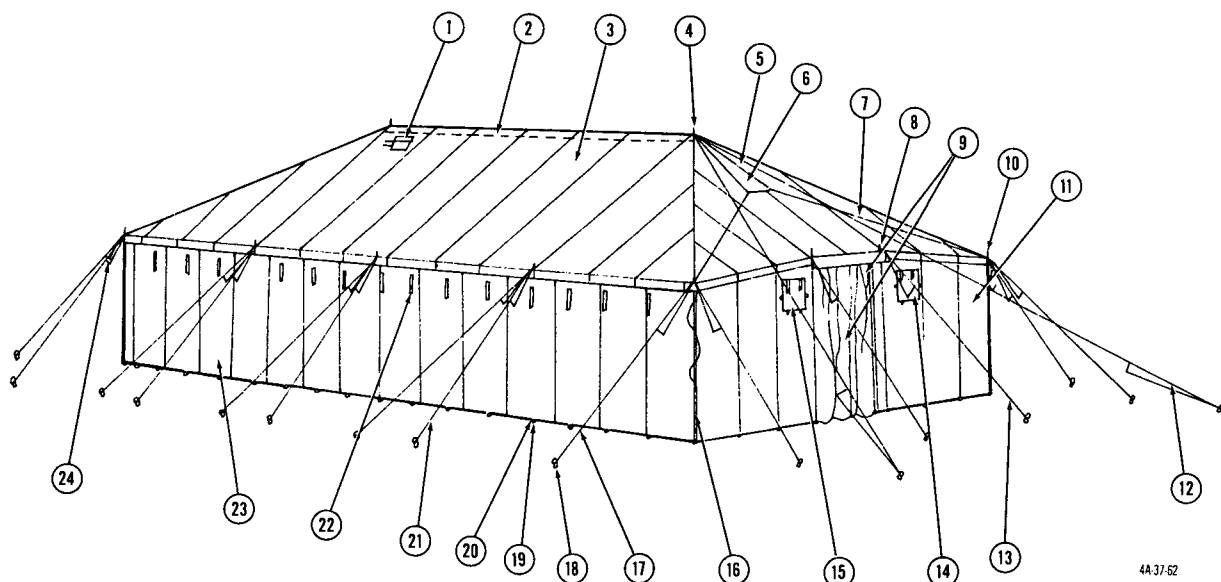

4A 37-52

- | | |
|------------------------|---|
| 1 Stovepipe opening | 13 Door eave line |
| 2 Ridge pole | 14 Care and maintenance instructions flap |
| 3 Side roof | 15 Erection instructions flap |
| 4 Center pole | 16 Slide fastener |
| 5 End roof | 17 Corner eave line |
| 6 Ventilator | 18 24-inch wood tent pin, or 12-inch steel tent pin |
| 7 Ventilator flap line | 19 Footstop |
| 8 Door pole | 20 16-inch wood tent pin, or 9-inch aluminum tent pin |
| 9 Door curtain | 21 Side eave line |
| 10 Eave pole | 22 Tie tape |
| 11 End wall | 23 Sidewall |
| 12 Ridge guy line | 24 Tent slip |

Figure 25. Tent, general purpose, medium.

(1) *Tabulated data.*

Height: peak height, 10 feet 6 inches;
eave height, 5 feet.

Length: each side of the tent is 8 feet
9 inches.

Width: the hexagonal floor of the tent
is 17 feet 6 inches in diameter.

Weight: tent, 116 pounds; liner, 23
pounds; pins and poles, 47 pounds.

Cube: 8 cubic feet.

Floorspace: 198.9 square feet.

(2) *Material.* The tent is made of 9.85-ounce duck, FMWWR.

(3) *Doors.* The tent has two doors 7 feet high on opposite sides, permitting tents to be joined together with suitable access from one to the other. Door flaps can be securely closed either by slide fasteners or by loops over wooden toggles. The doors are operated from both inside and outside.

(4) *Ventilation.* The tent is ventilated by six ventilators. Four ventilators have inside ducts, which can be closed by tie cords. These ventilators have hoods of the fixed type, each hood being constructed with a stiffener inserted in the hem to keep it extended out from the ventilator opening. The other two ventilators

consist of nonmetallic mesh insect screens and opening flaps with ventilator tielines.

(5) *Heating.* The tent is heated by an M-1950 Yukon stove. A stovepipe opening is built in one side of the tent near the eave. When the stove is not in use, the opening can be closed by securing stovepipe opening flaps to the tent with tie tapes.

(6) *Snow cloths.* There is a snow cloth sewed to the bottom of each side of the tent. When the tent is pitched, the snow cloths are flat on the ground on the outside of the tent. Snow is deposited on the snow cloths for insulation purposes.

(7) *Screen doors.* Two screen doors are provided; they may be attached to the front and rear of the tent for protection against insects.

(8) *Sock lines.* Sock lines are provided for drying clothing and equipment.

(9) *Liner.* A fire-resistant liner, made of 5.2-ounce permeable cotton cloth, is provided to insulate the tent and to prevent frost from falling on the occupants. The liner is held in place by metal toggles.

c. Ground Plan. Before pitching the tent, study the ground plan carefully (fig 32).

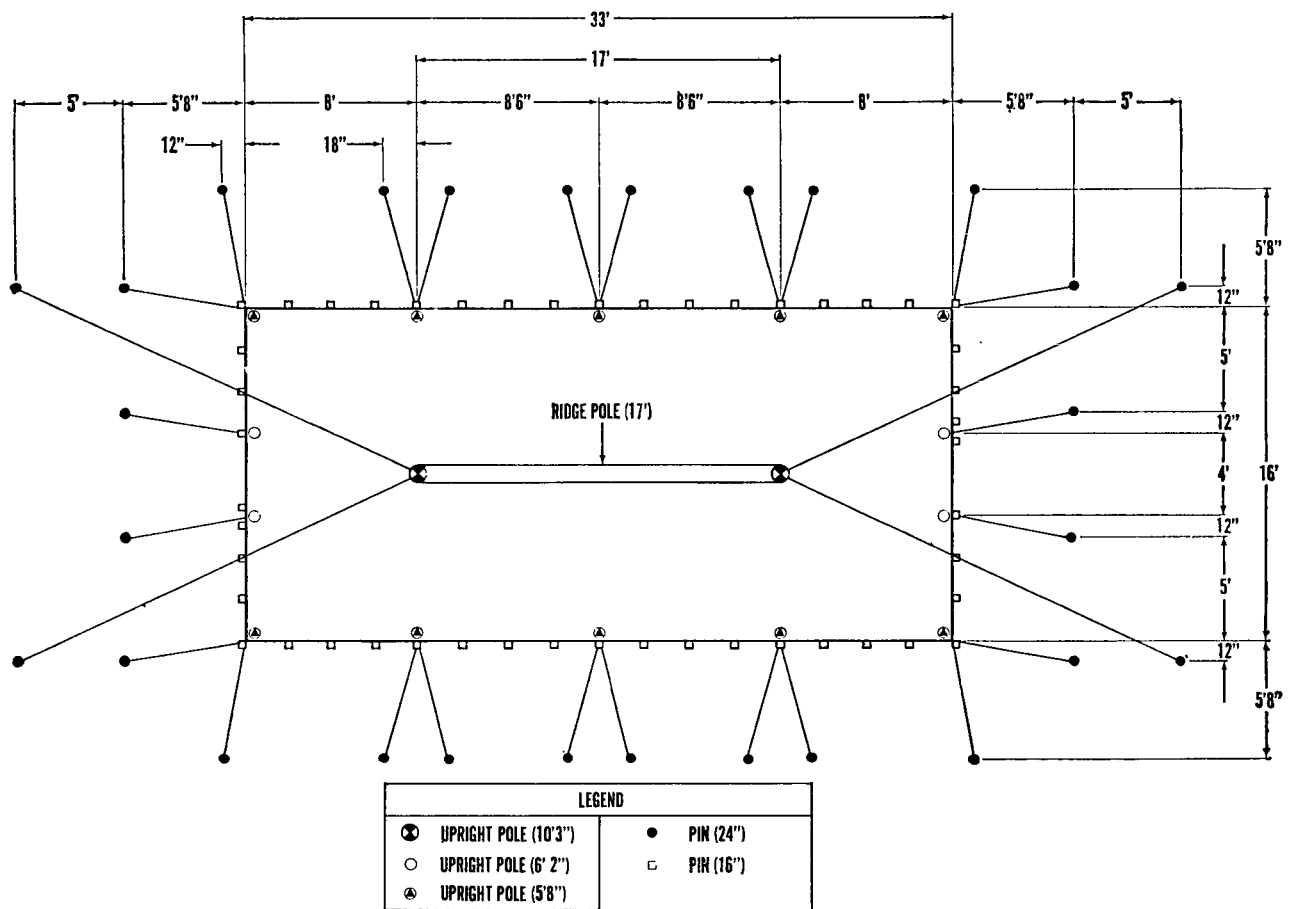


Figure 26. Ground plan of tent, general purpose, medium.

d. *Pitching.* The tent can be pitched by four men in approximately 30 minutes.

(1) *Preliminary instructions* (1, fig 33).

(a) Spread tent on ground. Check to see if liner is in place; if it is not in place, spread it out beneath the tent.

(b) Secure D-rings to snaps inside front and rear doors.

(c) Close all slide fasteners.

(d) Secure D-rings to snaps outside front and rear doors.

(e) Drive six corner pins and four door pins, and attach footstops to pins.

(2) *Attaching corner eave lines and inserting tentpole* (2, fig 33).

(a) Drive six pins about 11 feet from corners of tent, and attach corner eave lines. Pins on opposite sides of tent should be in a straight line.

(b) Open front door and push pole, extended to 10 feet 6 inches, under tent.

(c) Insert spindle of pole through hole in peak of liner and through supporting ring in peak of tent.

(3) *Raising tent* (3, fig 33).

(a) With one man inside the tent, close inside and outside D-rings and snaps on doors; close slide fasteners.

(b) Fasten loops to wood toggles on doors.

(c) Lift tentpole; and line up door openings, stovepipe, and vent openings of liner with like openings in tent.

(d) Insert D-rings at peak of liner into snaps near peak of tent.

(e) Raise tentpole, placing butt of tentpole in center of tent area.

(f) Extend six eave poles to 5-foot length, and insert spindles of eave poles through tent grommets at corners of tent (4, fig 33).

(g) Drive remaining eave line pins as shown on ground plan.

(h) Attach corner lines, intermediate eave lines, and door eave lines to tent pins.

(i) Extend two eave poles to 7-foot length, and insert spindles of poles through tent grommets at center of tent doors (4, fig 33).

(j) Adjust and tighten all lines.

(4) *Fastening liner to inside of tent.*

(a) Insert metal toggles on inside of tent through grommets on liner, allowing approximately 2 inches between tent and liner for insulating purposes.

(b) Tie tapes around stovepipe opening in liner to corresponding tapes around stove-

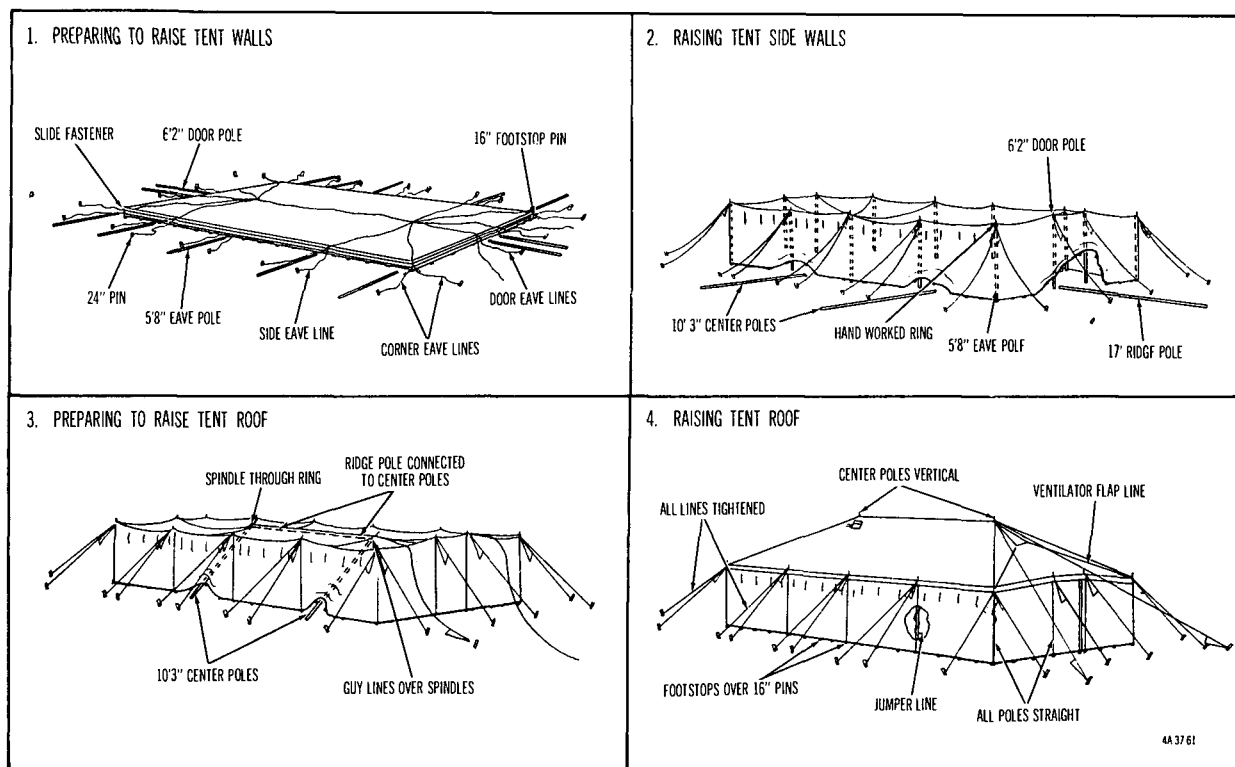


Figure 27. Steps in pitching tent, general purpose, medium.

pipe opening in tent, to keep stovepipe opening in place.

(c) Tie liner door tie tapes to screen door tie tapes.

(d) Thread sock lines through lines of metal toggles around tent, and tie.

(5) *Joining two tents together.*

(a) When two tents are to be joined together, erect the first tent as described above. Fasten lugs (4, fig 33) at front or rear of tents together by inserting grommet lug of one tent between grommet lug and the becket lug of other tent, and chain-lace becketts (fig 4) on lug of one tent through grommets on each lug of both tents. Begin chain-lacing at bottom (near the ground) of lugs and continue until bottom (near the ground) at other end of the same lugs is reached, securing last becket with a knot. Then erect the second tent in the same manner as the first tent.

(b) An alternate method of joining two tents together is to spread both tents on the ground with the front or rear of one tent next to the front or rear of the other tent, and fasten the lugs of the two tents together as described in (a) above. Then erect the two tents as described in (1) through (4) above.

(6) *Attaching vestibule.*

(a) Attach vestibule to door of tent in the same manner used for attaching two tents together (5 above).

(b) Drive vestibule guy line tent pins as shown in ground plan.

(c) Attach vestibule guy lines to guy line tent pins.

(d) Extend two eave poles to 5-foot length, and insert spindles of eave poles through tent grommets at corners of vestibule.

(e) Extend one eave pole to 7-foot length, and insert spindle of eave pole through grommet in end of vestibule.

(f) Adjust and tighten all guy lines.

e. *Striking.* Make sure all slide fasteners are closed, then—

(1) Loosen vestibule guy lines and remove guy line pins.

(2) Remove vestibule eave poles and telescope poles to their shortest length.

(3) Remove vestibule from tent.

(4) Loosen tent footstops from footstop pins, and remove footstop pins.

(5) Loosen door eave lines and remove door eave poles. Telescope poles to their shortest length.

(6) Remove door eave lines from tent pins and remove tent pins.

(7) Loosen all other lines and remove all other eave poles. Telescope poles to their shortest length.

(8) Remove tentpole and telescope pole to its shortest length.

(9) Remove all lines from tent pins and remove all tent pins.

f. *Folding* (fig 34).

(1) Engage D-rings into snaps inside front and rear doors, close slide fasteners, and en-

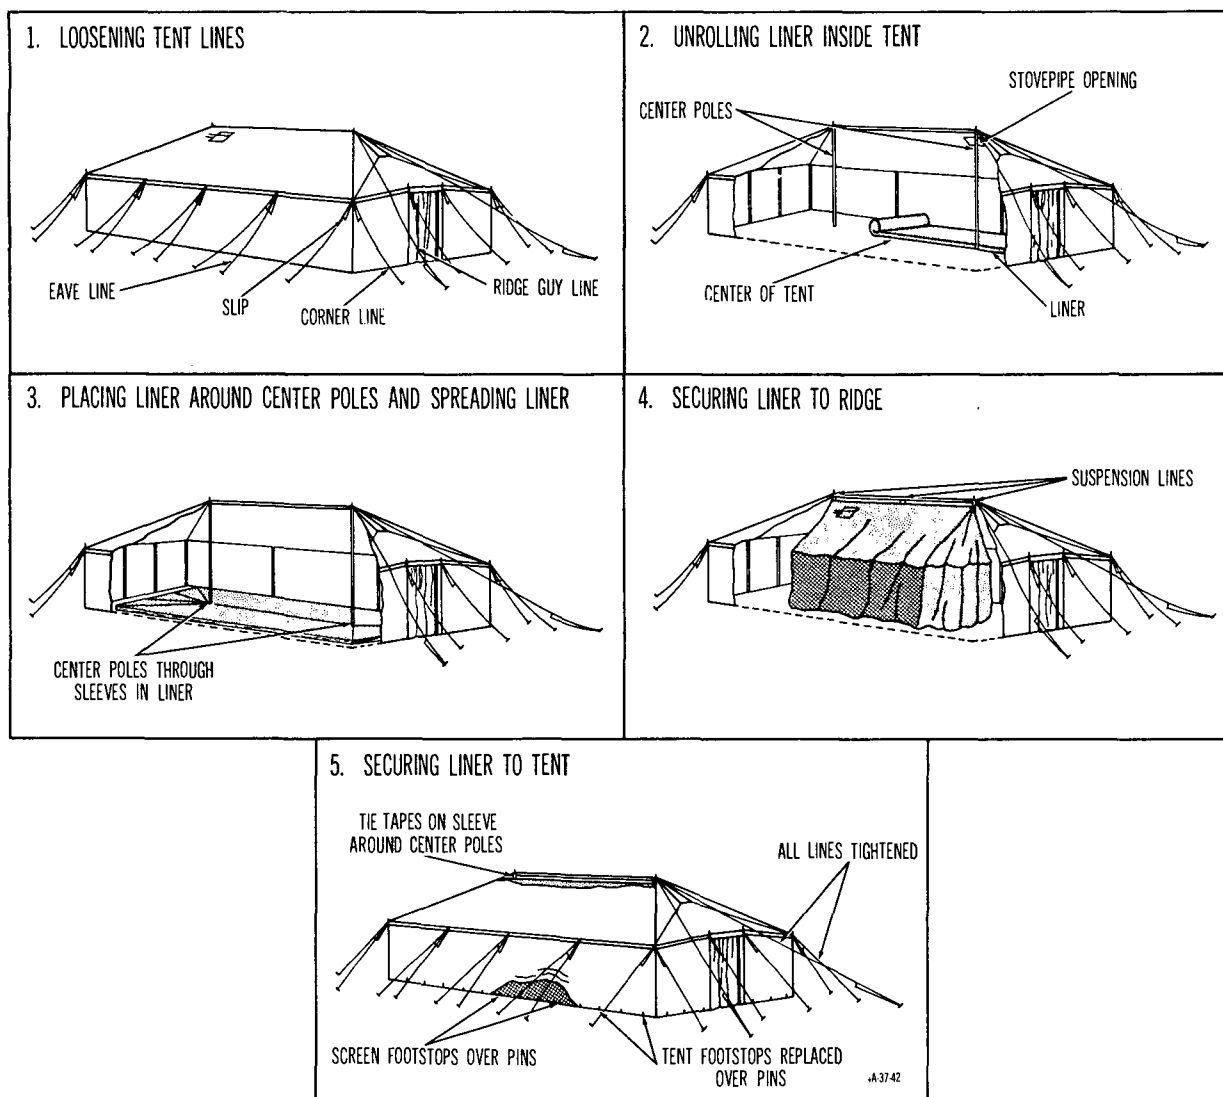


Figure 28. Steps in attaching liner to tent, general purpose, medium.

gage D-rings into snaps outside front and rear doors.

(2) Spread tent on ground and locate stovepipe opening panel. Grasp corner eave line (to right of stovepipe opening) and pull out corner of panel. Then coil intermediate eave line, corner line, and corner eave line neatly on extended panel (1).

(3) Reaching to the left, grasp corner eave line (to left of stovepipe opening) and pull second panel to the right, making an accordion fold (2).

(4) Fold remaining panels in the same manner, having six folds in all. As each fold

is completed, coil intermediate eave lines or door eave lines neatly between folds. Coil corner lines and corner eave lines on top of each panel.

(5) Fold peak of tent about half way to eave of tent (3).

(6) Fold short side of tent toward center to make a rectangle of the tent (4).

(7) Roll or fold tent to the smallest possible size, and place tent on cover (5).

(8) Fold vestibule to dimensions equal to, or smaller than, the dimensions of the folded tent. Place folded vestibule on top of folded tent, (5).



(9) Strap cover tightly around tent.

Section II. SPECIAL PURPOSE TENTS

10. Tent, Hexagonal, Lightweight, M-1950

a. *Use.* The tent, hexagonal, lightweight, M-1950, FMWWR, OD, complete with pins and poles (fig 35), is used to provide shelter for troops operating in extremely cold-dry or cold-

wet areas. Normally the tent will accommodate five men and their individual clothing and equipment; under emergency conditions, the tent will provide shelter for five men sleeping and one on watch.

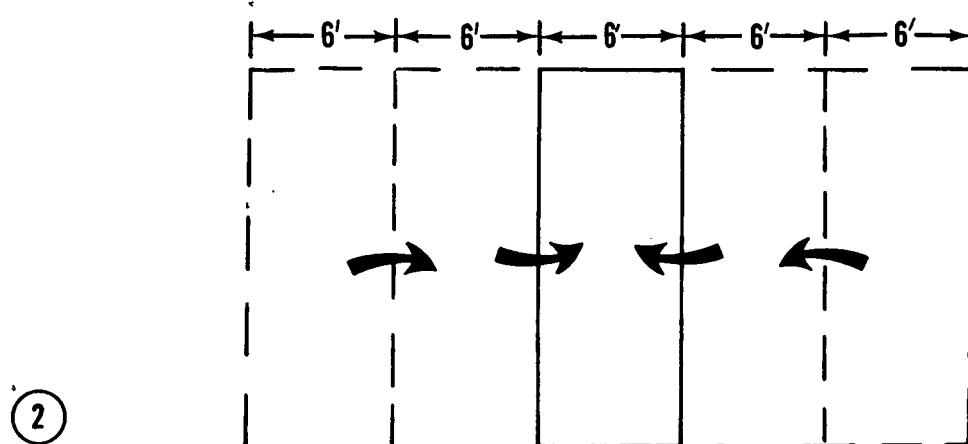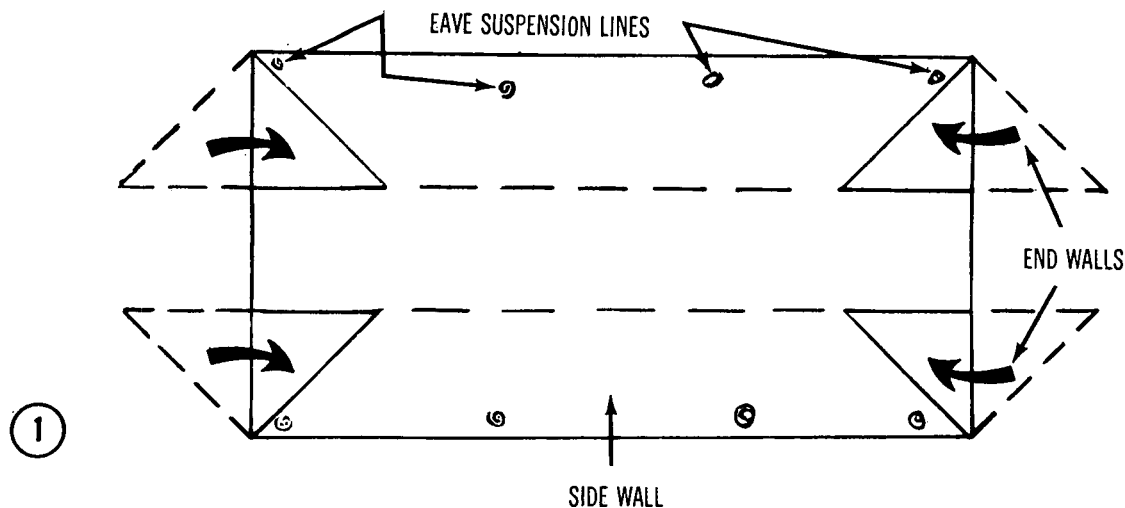

4A-37-60

Figure 29. Steps in folding liner of tent, general purpose, medium.

b. *Description.* The tent is a six-sided pyramidal tent, supported by a telescopic center pole.

(1) *Tabulated data.*

Height: peak height, 8 feet 6 inches;
eave height, 2 feet.

Length: each side of the tent is 6 feet
7 inches long.

Width: the hexagonal floor of the tent
is 13 feet 3 inches in diameter.

Weight: tent and liner, 48 pounds; pins
and pole, 8 pounds.

Cube: 3.8 cubic feet.

Floorspace: 113.2 square feet.

(2) *Material.* The tent is made of plied
yarn, wind-resistant, sateen cotton cloth,
FMWWR, which weighs approximately 9
ounces per square yard.

(3) *Door.* The tent has one door 5 feet
high, which is located in the center of one side.
Door flaps may be closed either by the slide
fastener or by loops over wood toggles.

(4) *Ventilation.* The tent is ventilated by
two built-in ventilators on opposite sides and
near the peak of the tent. The ventilators
have inside ducts, which can be closed by tie

cords. The ventilator hoods are of the fixed
type, each hood being made with a stiffener in-
serted in the hem to keep it extended out from
the ventilator opening.


(5) *Heating.* The tent is heated by an
M-1950 Yukon stove. A stovepipe opening with
a silicone rubber-molded ring is built in one
side of the tent near the eave. When the stove
is not in use, the stovepipe opening can be pro-
tected by a canvas flap.

(6) *Sock lines.* Three sock lines are provid-
ed for drying clothing and equipment.

(7) *Snow cloths.* There is a snow cloth
sewed to the bottom of each side of the tent.
When the tent is pitched, the snow cloths are
flat on the ground on the outside of the tent.
Snow is deposited on the snow cloths for insu-
lation purposes.


(8) *Liner.* A fire-resistant liner, made of
5.2-ounce cotton cloth, is provided to insulate
the tent and to prevent frost from falling on the
occupants. The liner is held in place by metal
toggles.

(9) *Cover.* The tent is provided with a
cover for use when it is in storage or is being

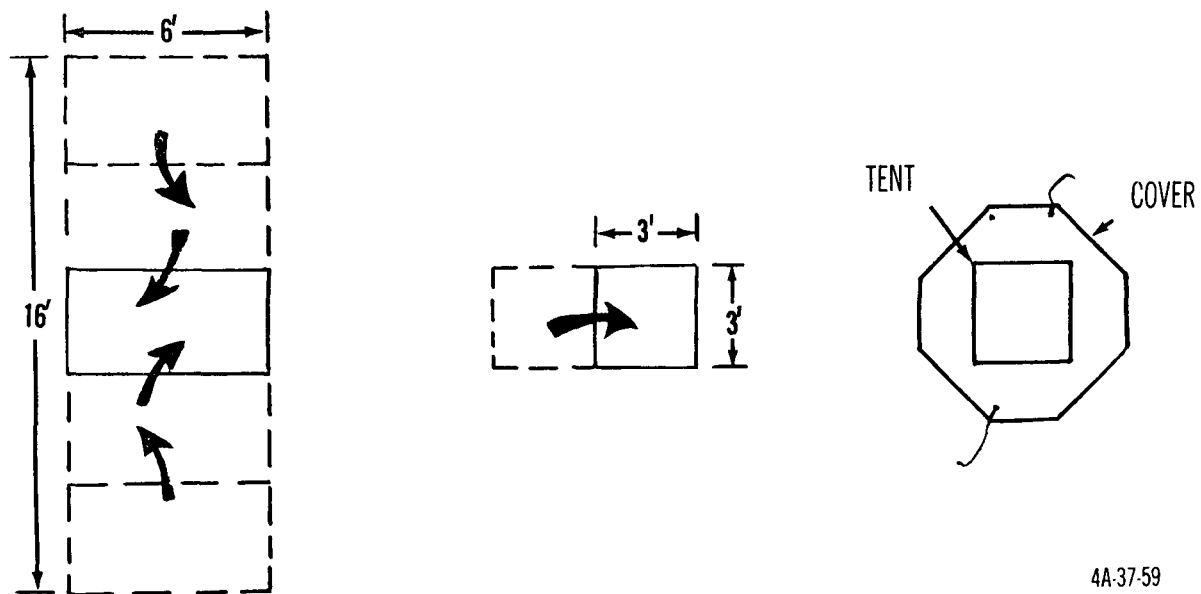

4A-37-59

Figure 30. Folding tent, general purpose, medium.

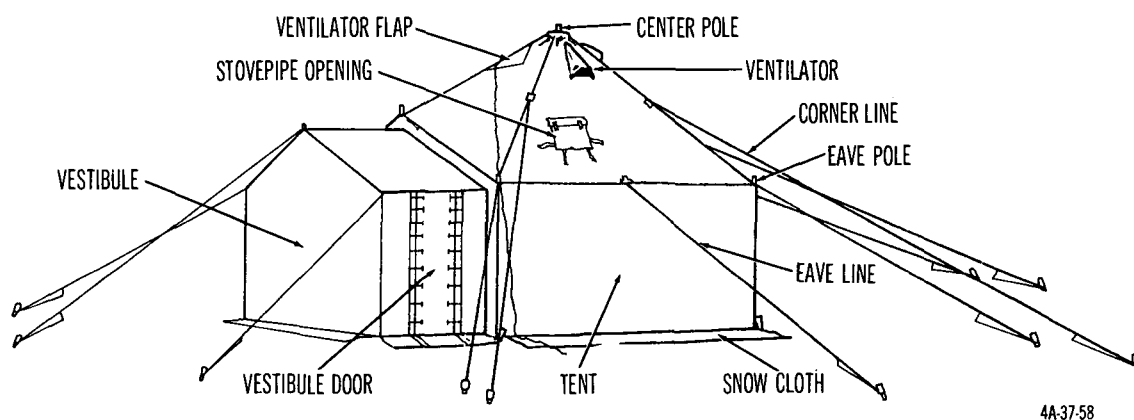

4A-37-58

Figure 31. Tent, general purpose, small.

transported. The tent and liner, when folded, fit into the cover. Aluminum tent pins are nested, and the magnesium pole is telescoped to its shortest length and placed in the pocket at one side of the cover.

c. Ground Plan. Before pitching the tent, study the ground plan carefully (fig 36).

d. Pitching. The tent can be pitched by five men in approximately 15 minutes.

(1) *Preliminary procedures* (1, fig 37).

(a) Spread tent on ground. Check to see if liner is in place; usually it is not in place in a new tent. If liner is not in place, spread it out beneath tent.

(b) Secure D-ring to snap inside door.

(c) Close all slide fasteners.

(d) Drive six corner pins and two door pins and attach footstops to pins.

(2) *Attaching corner eave lines and inserting tent pole* (2, fig 37).

(a) Drive pins about 6 feet from corners

of tent and attach corner eave lines to pins. Pins on opposite sides of tent should be in a straight line.

(b) Open door and push pole, extended to 8 feet 6 inches, under tent.

(c) Insert spindle at pole through grommet in peak of liner and through handworked ring in peak of tent.

(3) *Raising tent* (3, fig 37).

(a) With one man inside the tent, close inside and outside D-rings and snaps on door; close slide fastener.


(b) Fasten loops to wood toggles on door.

(c) Raise tent and liner; place butt of tentpole in center of tent area.

(4) *Attaching door eave line and intermediate eave lines* (4, fig 37).

(a) Stake door eave line far enough to hold door vertical.

((b) Stake intermediate eave line pins.

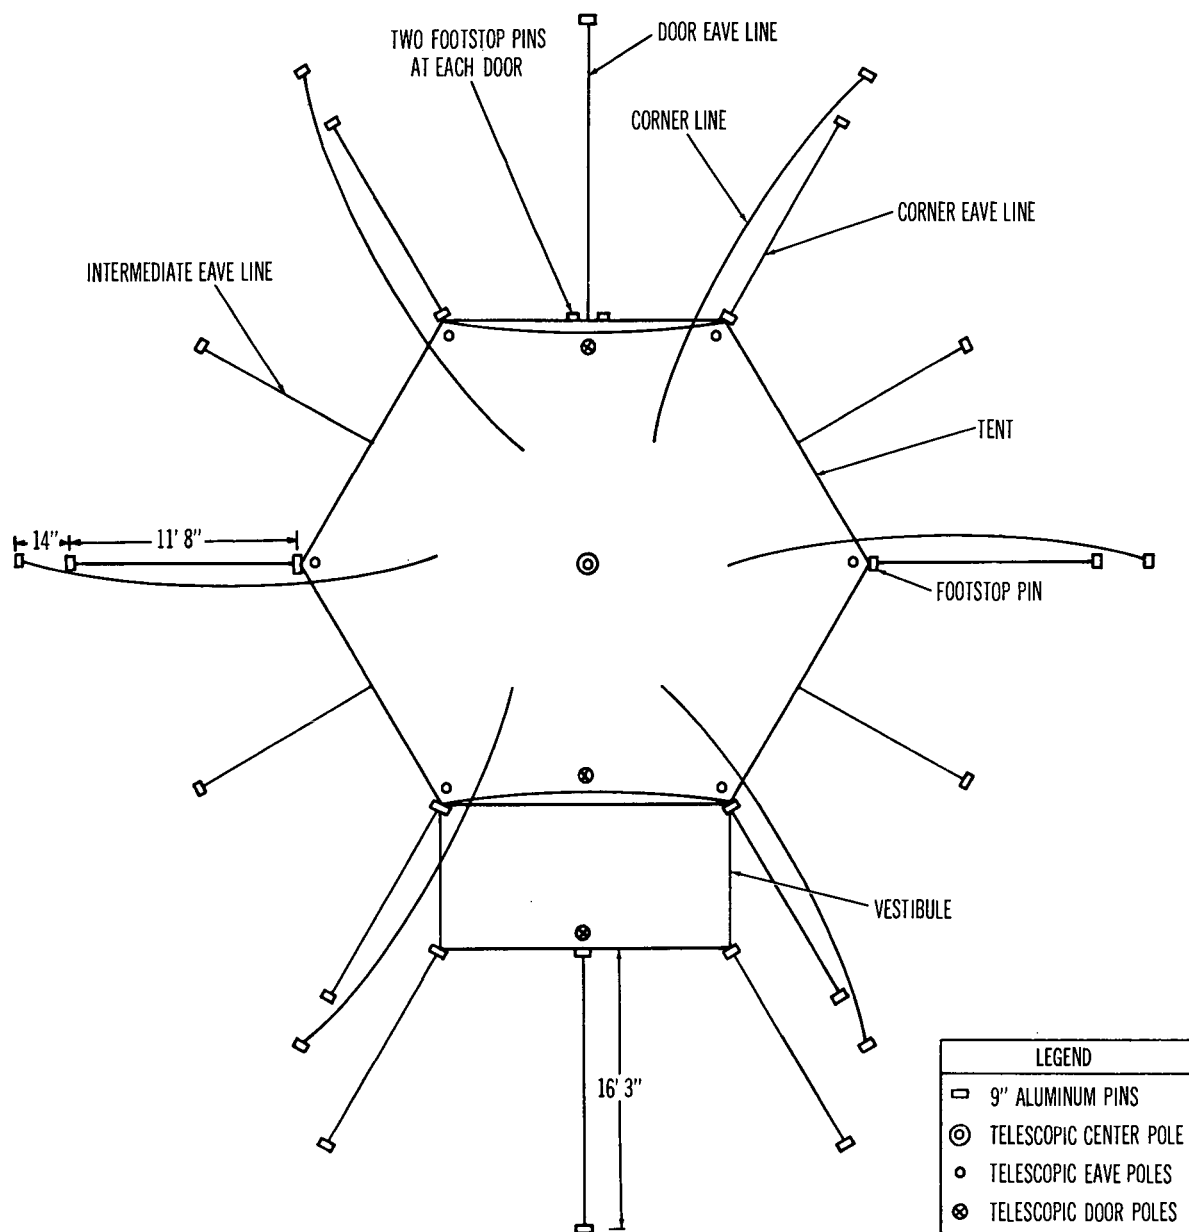

4A-37-57

Figure 32. Ground plan of tent, general purpose, small.

(c) Attach the five intermediate lines to pins.

(d) Adjust and tighten all lines.

(5) *Propping up door eave line.* The door eave line can be propped up by placing the line over an improvised pole (tree branch or other object higher than the door entrance) at a distance of about 5 feet in front of the door and then staking the line out to a pin. This keeps the door from sagging, makes the slide fastener work better, makes the tent easier to get into and out of, and gives the tent greater stability.

(6) *Fastening liner.* Fasten liner in place by inserting wire toggles, which are secured to

tent, into grommets set in liner. Allow approximately 2 inches between tent and liner for insulating purposes. Tie tapes around stovepipe opening in liner to corresponding tapes around stovepipe opening in tent to keep stovepipe opening in place.

The 35-foot sock line is threaded through the eyes of the toggles at the eave line and tied to the toggle at each corner of the door. The 30-foot sock line is threaded through the eyes of the next row of toggles and the two ends are tied in a square knot. The 19-foot sock line is threaded through the eyes of the remaining row of toggles and the ends are tied in a square knot.

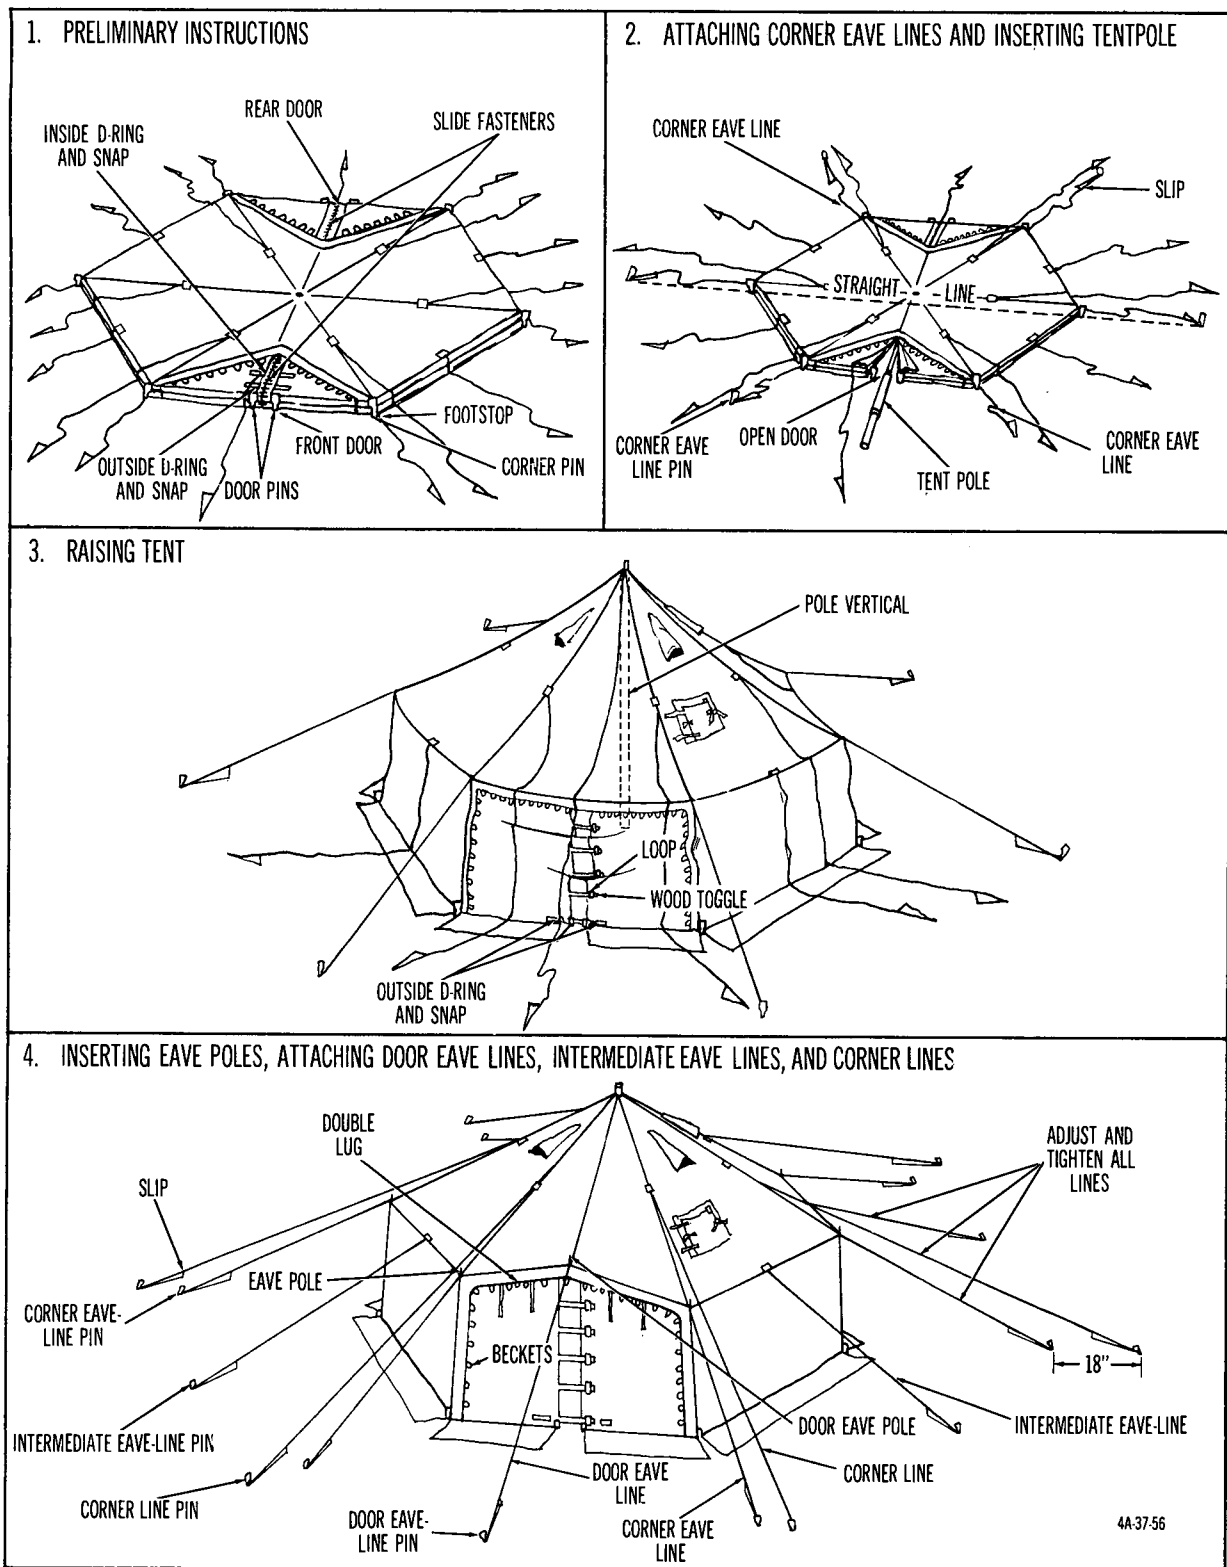


Figure 33. Steps in pitching tent, general purpose, small.

e. Striking. Make sure all slide fasteners are close, then—

- (1) Loosen liner tie tapes.
- (2) Loosen door eave line.
- (3) Remove all footstop pins.
- (4) Loosen all eave lines and remove all eave line pins.

(5) Remove tentpole, and telescope pole to its shortest length.

(6) Remove liner only if repairs are needed.

f. Folding.

(1) *Folding tent* (fig 38).

(a) Engage snap into D-ring inside door and close door slide fasteners.

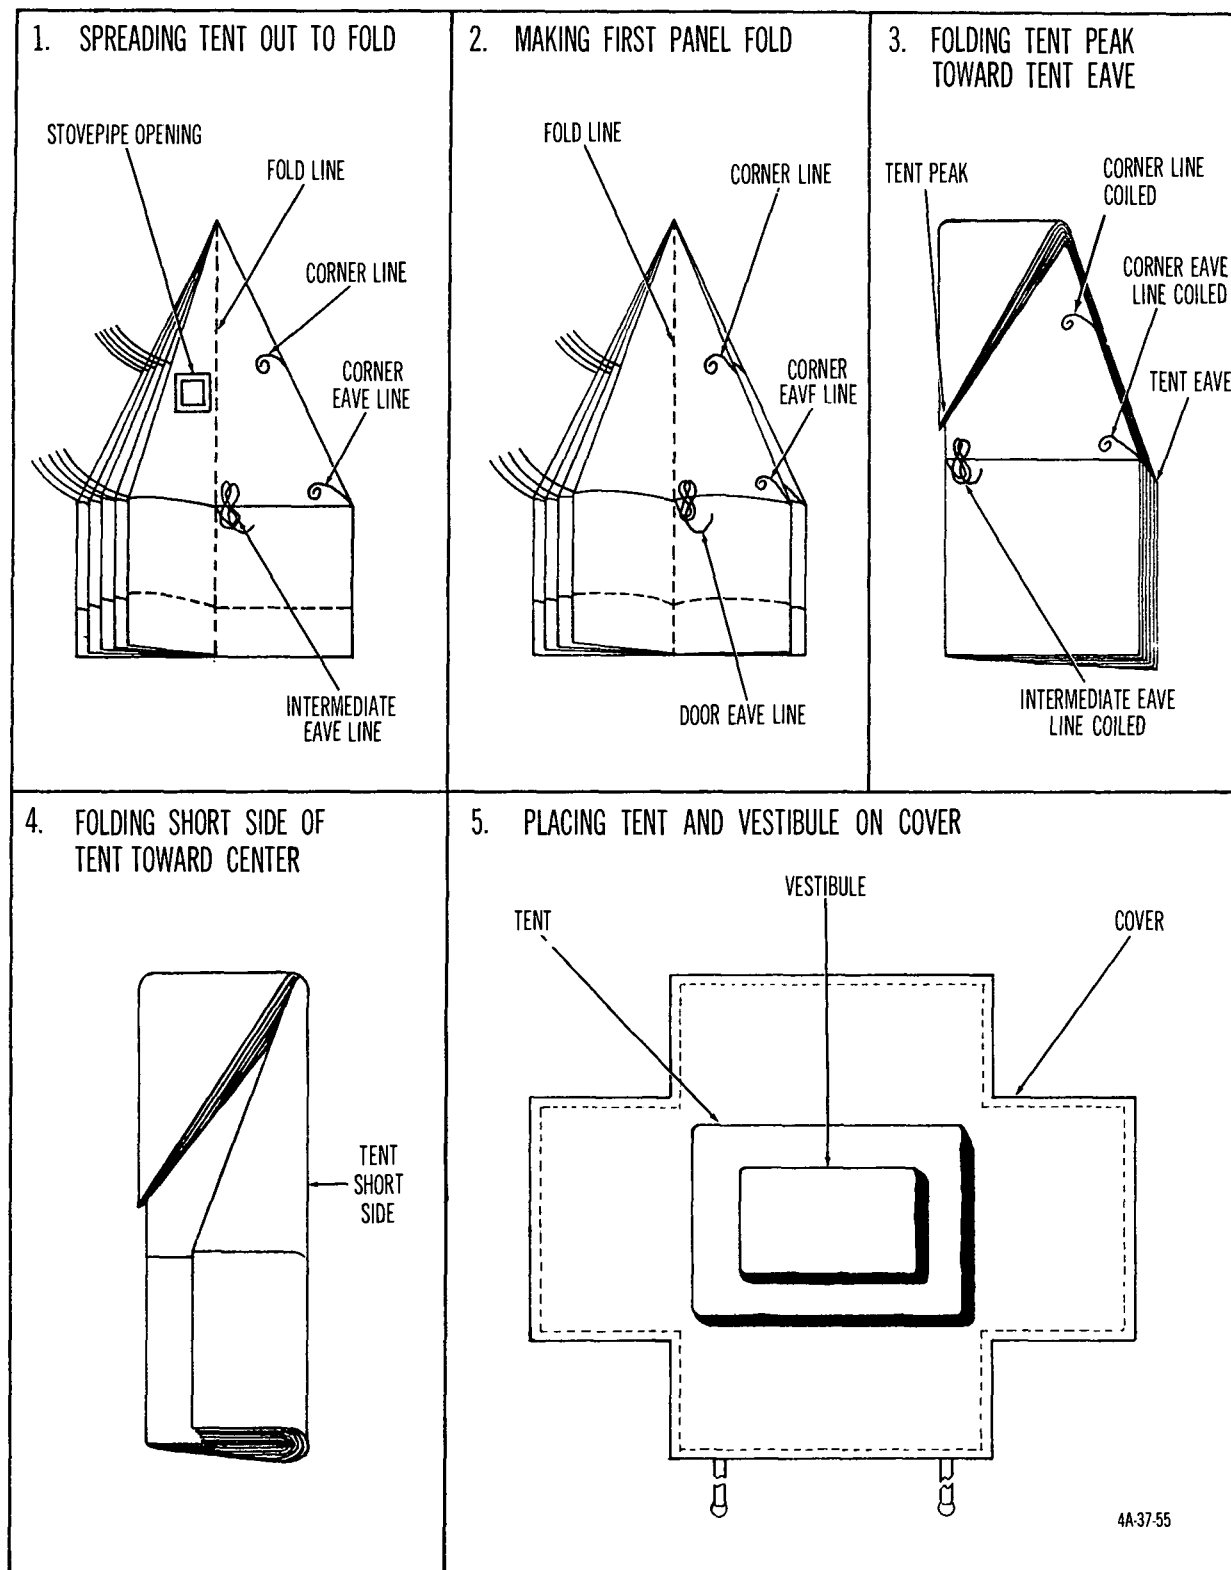



Figure 34. Steps in folding tent, general purpose, small.

(b) Spread tent on ground and locate stovepipe opening panel on top fold. Grasp corner eave line (to the right of stovepipe opening) and pull out corner of panel. Then coil intermediate eave line and corner line neatly on extended panel (1).

(c) Reaching to the left, grasp corner

eave line (to the left of stovepipe opening) and pull the second panel to the right, making an accordion fold (2).

(d) Fold remaining panels in the same manner, having six folds in all. As each fold is completed, coil intermediate eave lines, cor-

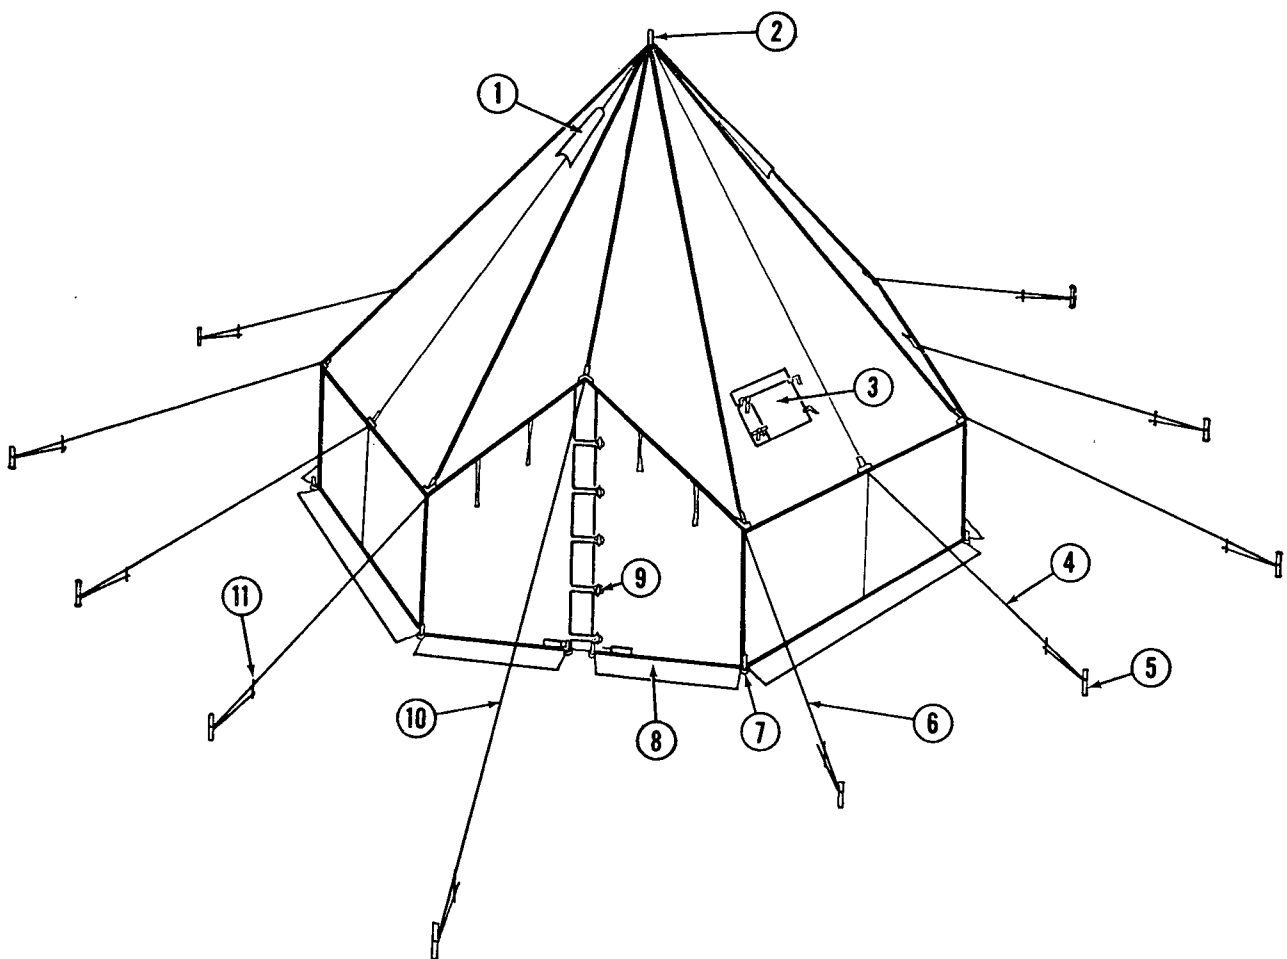

- | | | |
|--------------------------|----------------------------|--------------------|
| 1 Ventilator | 5 9-inch aluminum tent pin | 9 Wood tent toggle |
| 2 Telescopic tentpole | 6 Corner eave line | 10 Door eave line |
| 3 Stovepipe opening | 7 Footstop | 11 Tent slip |
| 4 Intermediate eave line | 8 Snow cloth | |

Figure 35. Tent, hexagonal, lightweight, M-1950.

ner eave line, and door eave line neatly between folds (3).

(e) Coil on top of folded tent panels the last remaining intermediate eave line and corner eave line (4).

(f) Fold snow cloth over sidewalls of tent. Fold peak of tent to edge of snow cloth (5).

(g) Fold short side of tent toward center to make a rectangle of the tent (6).

(h) Roll or fold tent to the smallest possible size, and place tent on cover. Place nested pins and telescoped pole into pocket of cover (7).

(i) Close cover, securing it with straps and loops. Care should be taken that flaps are tucked neatly inside cover.

(2) *Folding liner.* Ordinarily the liner is not removed from the tent. When necessary, the liner can be folded separately in the same manner as the tent. After the liner is folded,

it can be placed inside the cover with the tent, pins, and pole.

11. Tent, Kitchen, Flyproof, M-1948

a. Use. The tent, kitchen, flyproof, M-1948, FMWRW, OD, complete with pins and poles (fig 39), is a screened shelter for cooking and serving food where flies and other insects are numerous.

b. Description. The tent is an A-shaped, square-ended, rectangular tent. The back or field range section of the tent forms a stack, elevated in turret fashion 3 feet higher than the front or service section to accommodate the field ranges. Both sections have a similar contour, sloping gently to each side of a central ridge. The side and front walls of the tent may be guyed out, forming awnings on the side and front. A wall screen, which snaps to the tent, provides an insectproof closure on sides and

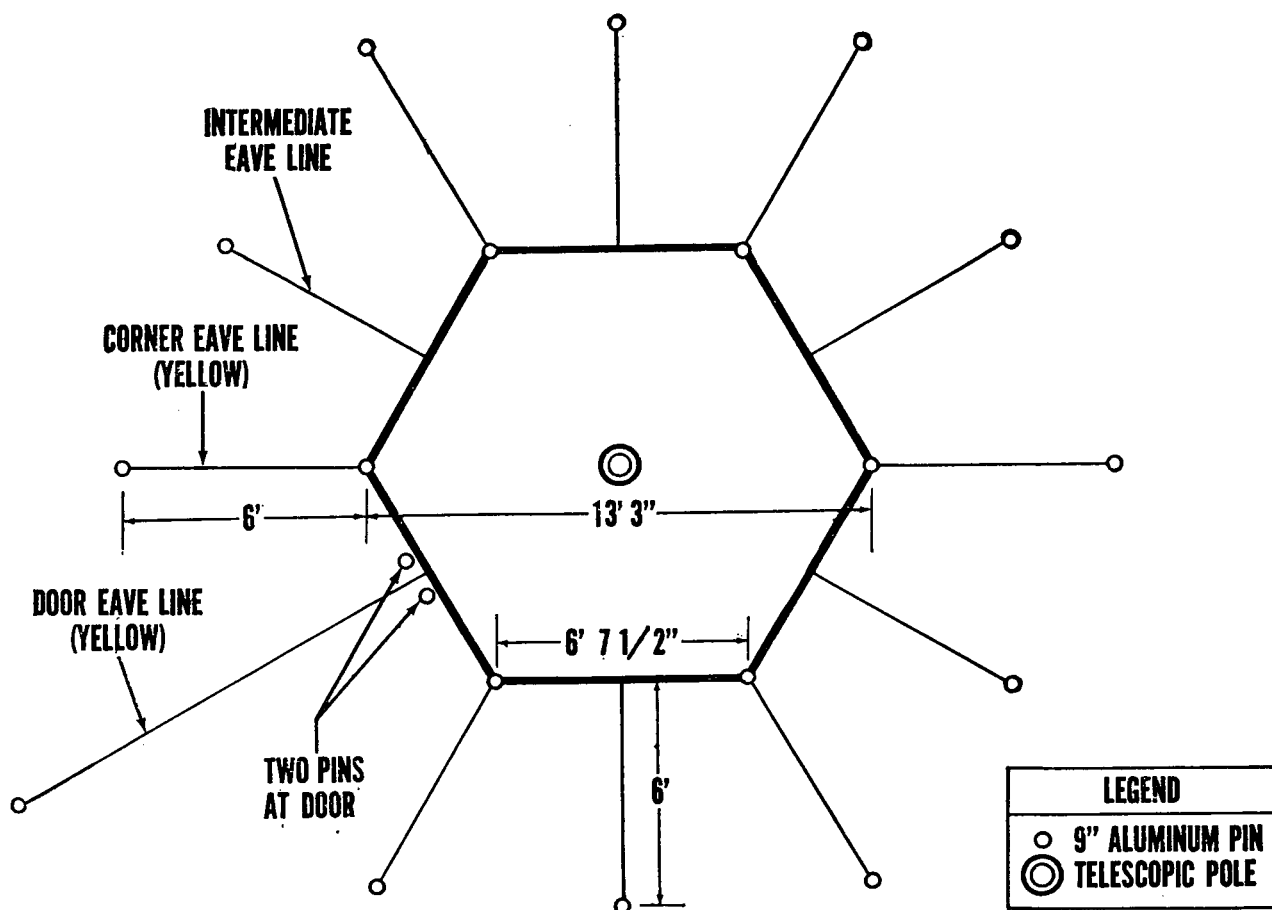


Figure 36. Ground plan of tent, hexagonal, lightweight, M-1950.

front when the walls are raised. The tent can be completely blacked out.

(1) *Tabulated data.*

Height: stack ridge height, 12 feet; stack sidewall height, 9 feet; service section ridge height, 9 feet; service section sidewall height, 6 feet.

Length: 18 feet overall; length of stack, 6 feet.

Width: 12 feet.

Weight: tent, 162 pounds; pins and poles, 218 pounds.

Cube: 26.2 cubic feet.

Floorspace: 216 square feet.

(2) *Material.* The tent is made of 9.85-ounce duck, FMWWR.

(3) *Support.* The tent is supported by 13 upright poles and 2 ridge poles. When the sides and front are guyed out to form awnings, 11 additional upright poles are required.

(4) *Entrances.* The vertical sidewalls of the tent are equipped with eight slide fasteners. Entrance to the tent can be gained by opening any one of the fasteners. However, when the screen wall is attached, entrance can be gained only by opening the one slide fastener in the corner near the service window.

(5) *Ventilation.*

(a) The four elevated sides of the stack section are equipped with air-permeable screening. This induces a draft, so that heat from the field ranges is taken away through the screening.

(b) When conditions are favorable, slide fasteners can be released and the sidewalls and front end of the tent lifted from the bottom to provide increased ventilation. The side and front walls can be guyed out, with the bottom seams supported by tentpoles to form awnings.

(c) When the sidewalls and front end of the tent are lowered and the slide fasteners closed to provide safe blackout operation conditions, adequate ventilation can be obtained by adjusting the ventilator flaps on the sides and the rear of the stack section near the base and on the front of the service section near the ridge poles.

(6) *Screens.*

(a) A detachable screen, made of 2.9-ounce type II nylon cloth, snaps to the tent and can be used as an insect-proof closure on the sides and front of the tent. The screen is fastened at the top of both end and side tentpoles and drapes vertically to the ground, where

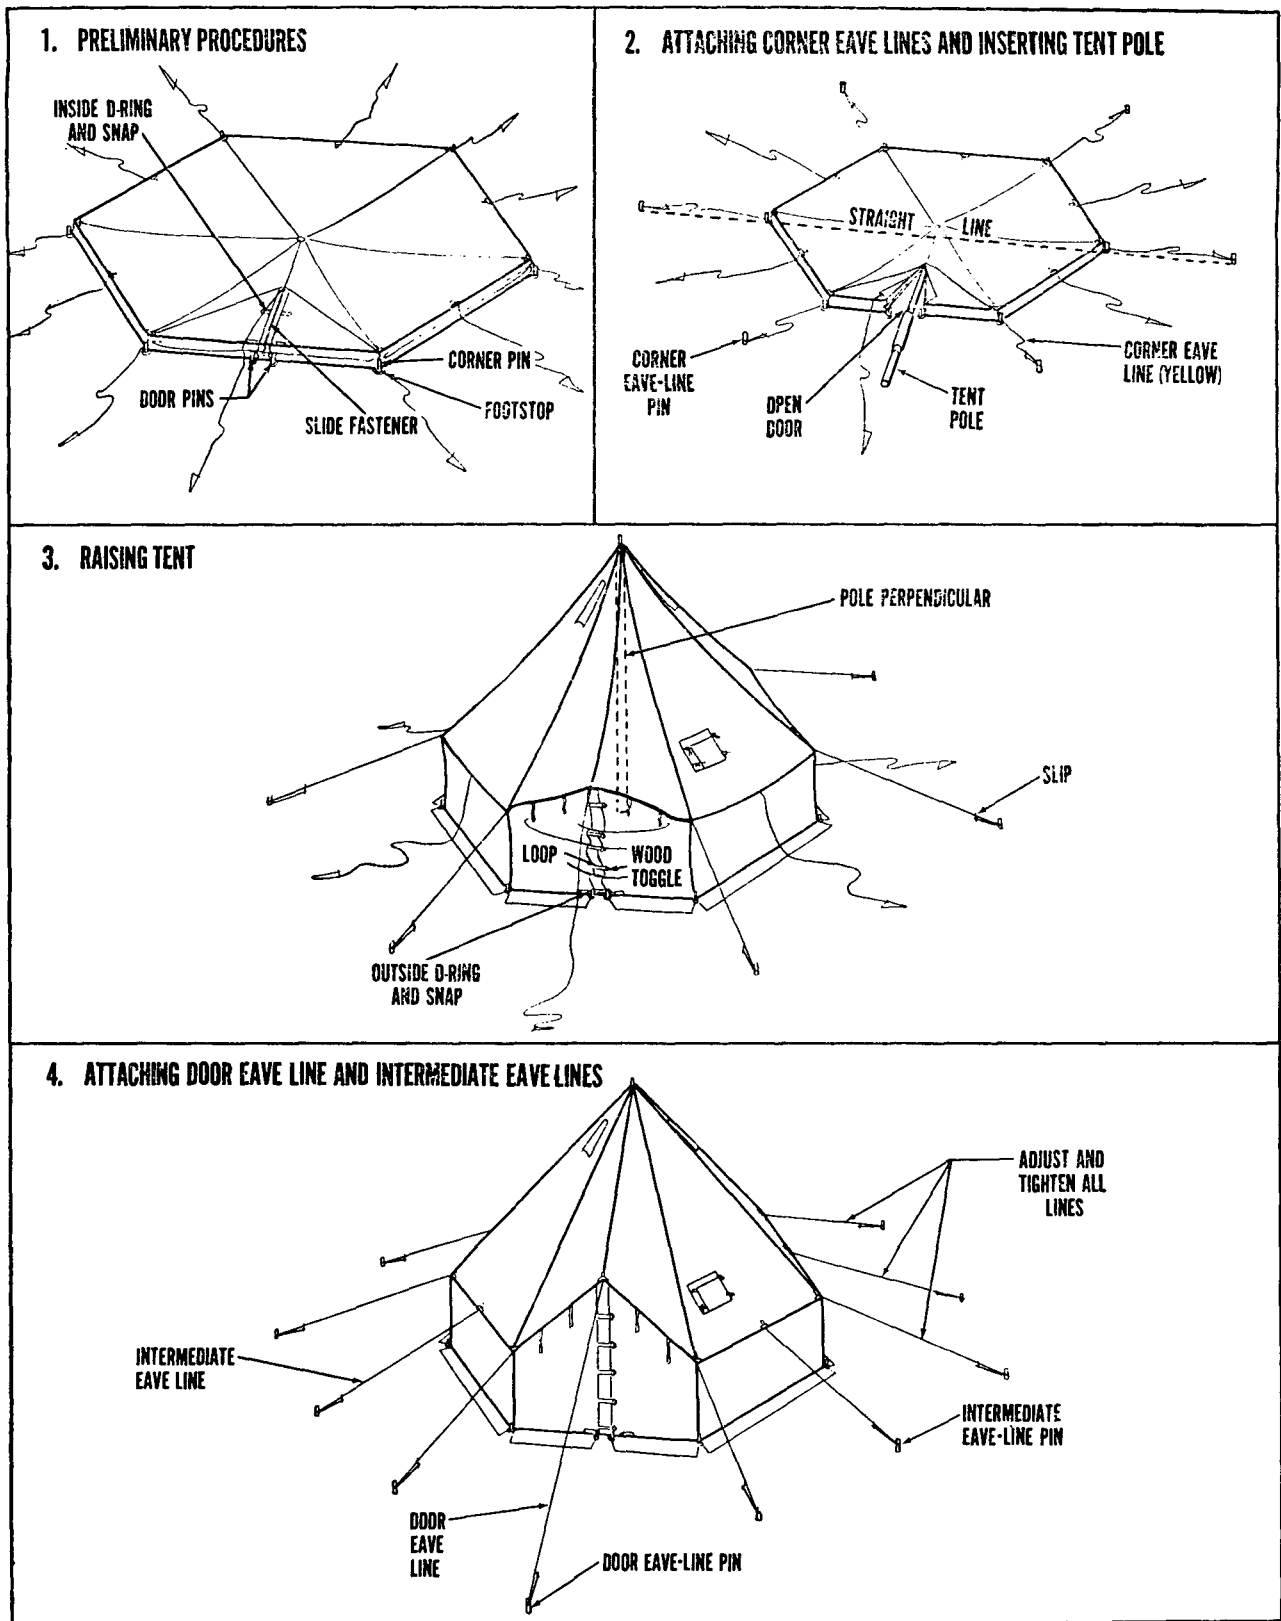


Figure 37. Steps in pitching tent, hexagonal, lightweight, M-1950.


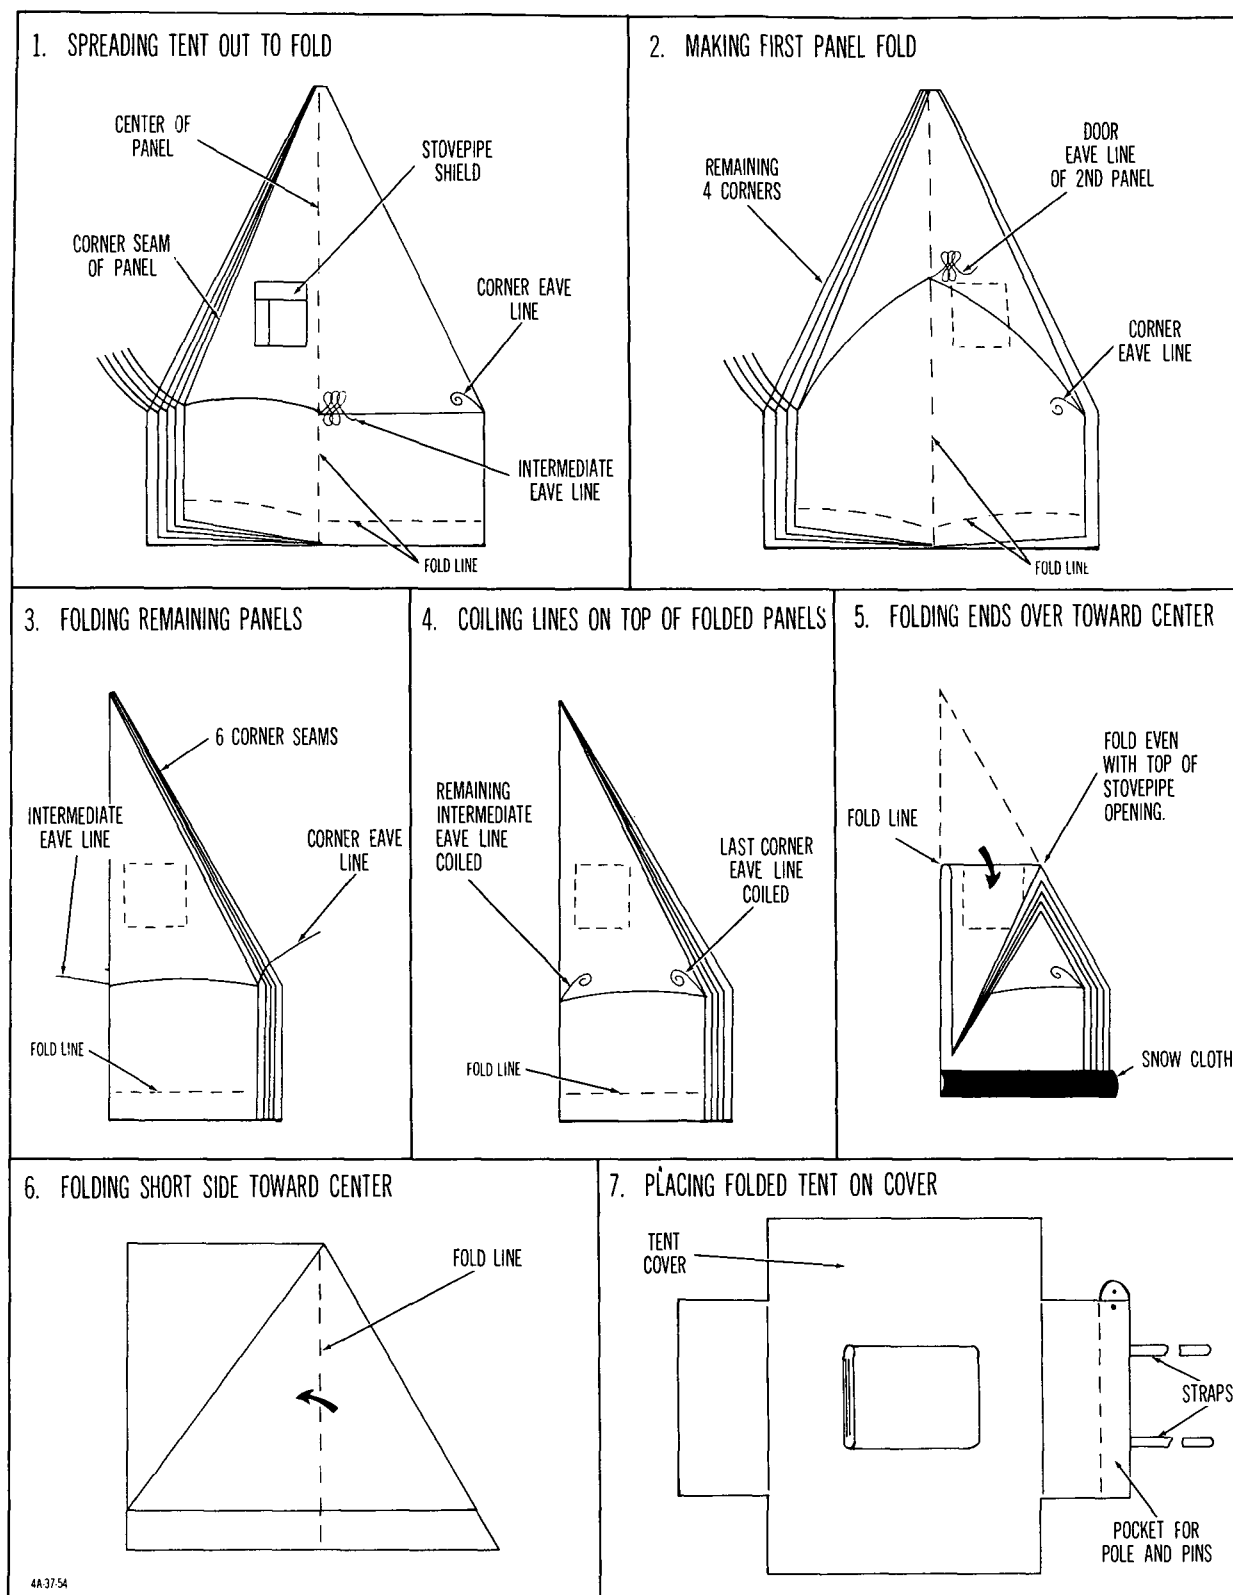


Figure 38. Steps in folding tent, hexagonal, lightweight, M-1950.

it is attached to 16-inch tent pins. The screen has a service window in the front section which can be opened by slide fasteners and rolled up. The front end and sidewalls of the tent can be raised and guyed out to form awnings, in which case the screen wall offers insect protection.

(b) There are built-in screens on the front and sides of the stack section near the top. Flaps operated by hoisting lines can be used to cover or uncover the screens. There are also built-in screens on the sides and rear of the stack section near the base and on the front of the service section near the ridge pole.

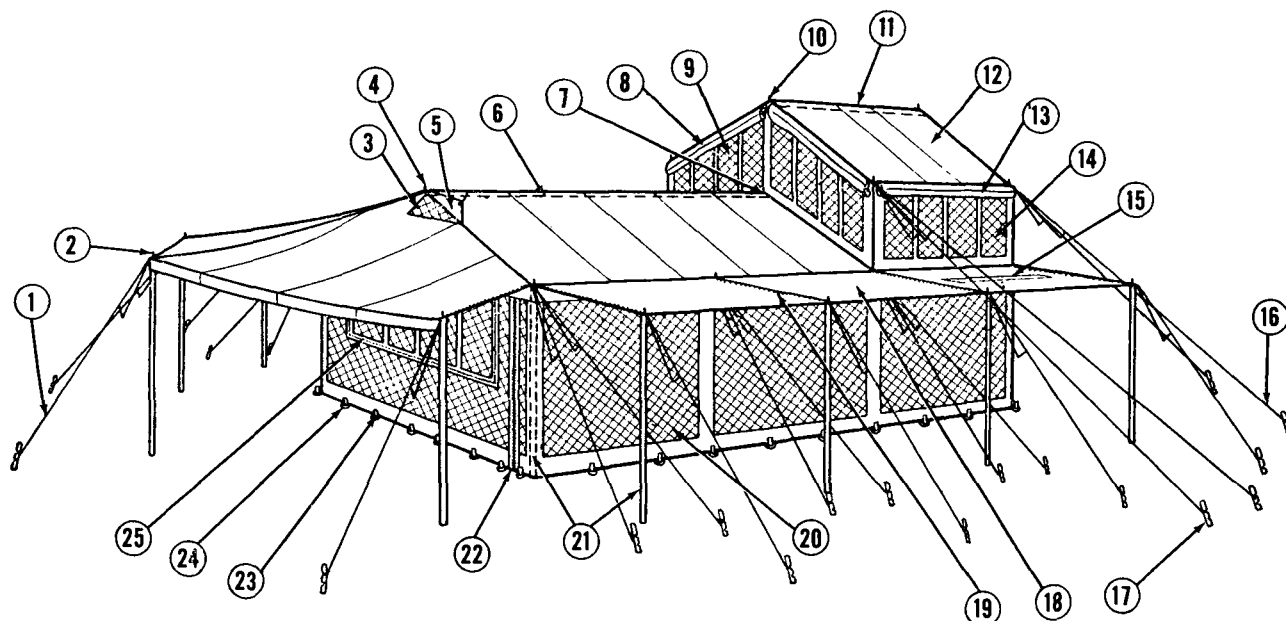

- | | | |
|---|--|--|
| 1 Eave line | 10 12-foot 3-inch tentpole | 18 Sidewall awning section |
| 2 7-foot tentpole | 11 5-foot 11-1/4-inch solid ridge pole | 19 Awning slide fastener |
| 3 Front ventilator screen | 12 Roof stack | 20 Tent screen |
| 4 9-foot tentpole | 13 Stack side flap | 21 6-foot 2-inch tentpole |
| 5 Front ventilator flap | 14 Stack side screen | 22 Entrance opening slide fastener |
| 6 11-foot 10-inch jointed ridge pole | 15 Sidewall ventilator opening | 23 16-inch tent pin |
| 7 Spindle of 11-foot 10-inch ridge pole | 16 Guy line | 24 Footstop |
| 8 Front stack ventilator flap | 17 24-inch tent pin | 25 Service window opening slide fastener |
| 9 Front stack ventilator screen | | |

Figure 39. Tent, kitchen, flyproof, M-1948.

(7) *Cover.* The tent is provided with a cover for use when it is in storage or is being transported.

c. *Ground Plan.* Before pitching the tent, study the ground plan carefully (fig 40).

d. *Pitching.* The tent can be pitched by five men in approximately 60 minutes. When conditions permit, the tent should be pitched away from natural elevations or tall equipment that might obstruct a draft through the tent stack.

(1) *Preliminary procedure* (1, fig 41). Spread tent out according to ground plan with the four 9-foot and the six 6-foot 2-inch side poles and twenty 24-inch pins in proper position.

(2) *Raising sides and attaching guy lines* (2, fig 41).

(a) Drive ten 24-inch pins on one side of tent site, according to ground plan.

(b) Insert spindles of two 9-foot upright poles through grommets in eave at one side of stack section of tent, raise stack section side, and attach guy lines to pins.

(c) Insert spindles of three 6-foot 2-inch upright poles through grommets in eave at one side of service section of tent, raise service section side, and attach guy lines to pins.

(d) Raise the other side of tent in the same manner as the first.

(e) Straighten poles, close slide fasteners, drive 16-inch pins, and attach footstops to pins.

(3) *Raising short ridge pole* (3, fig 41). Insert spindles of the two 12-foot 3-inch upright center poles through holes at ends of short ridge pole, raise poles, and insert spindles of the 12-foot 3-inch upright center poles into grommets in stack ridge. Make sure that the 12-foot 3-inch upright poles are at the front and rear center of stack section 6 feet from each side, and that they are perpendicular.

(4) *Raising long ridge pole* (4, fig 41).

(a) With one man at each end of the long ridge pole, raise pole to a position where a third man can insert the spindle of the 9-foot upright front pole through the hole in the front end of the ridge pole and into the grommet in the service ridge of the tent; and then set upright pole in place perpendicularly as indicated on ground plan.

(b) Fasten connector end of long ridge pole to the 12-foot 3-inch upright front center pole (fig 42) about 3 feet from the top of the stack so that the long ridge pole is level with the ground. This is done by placing connector

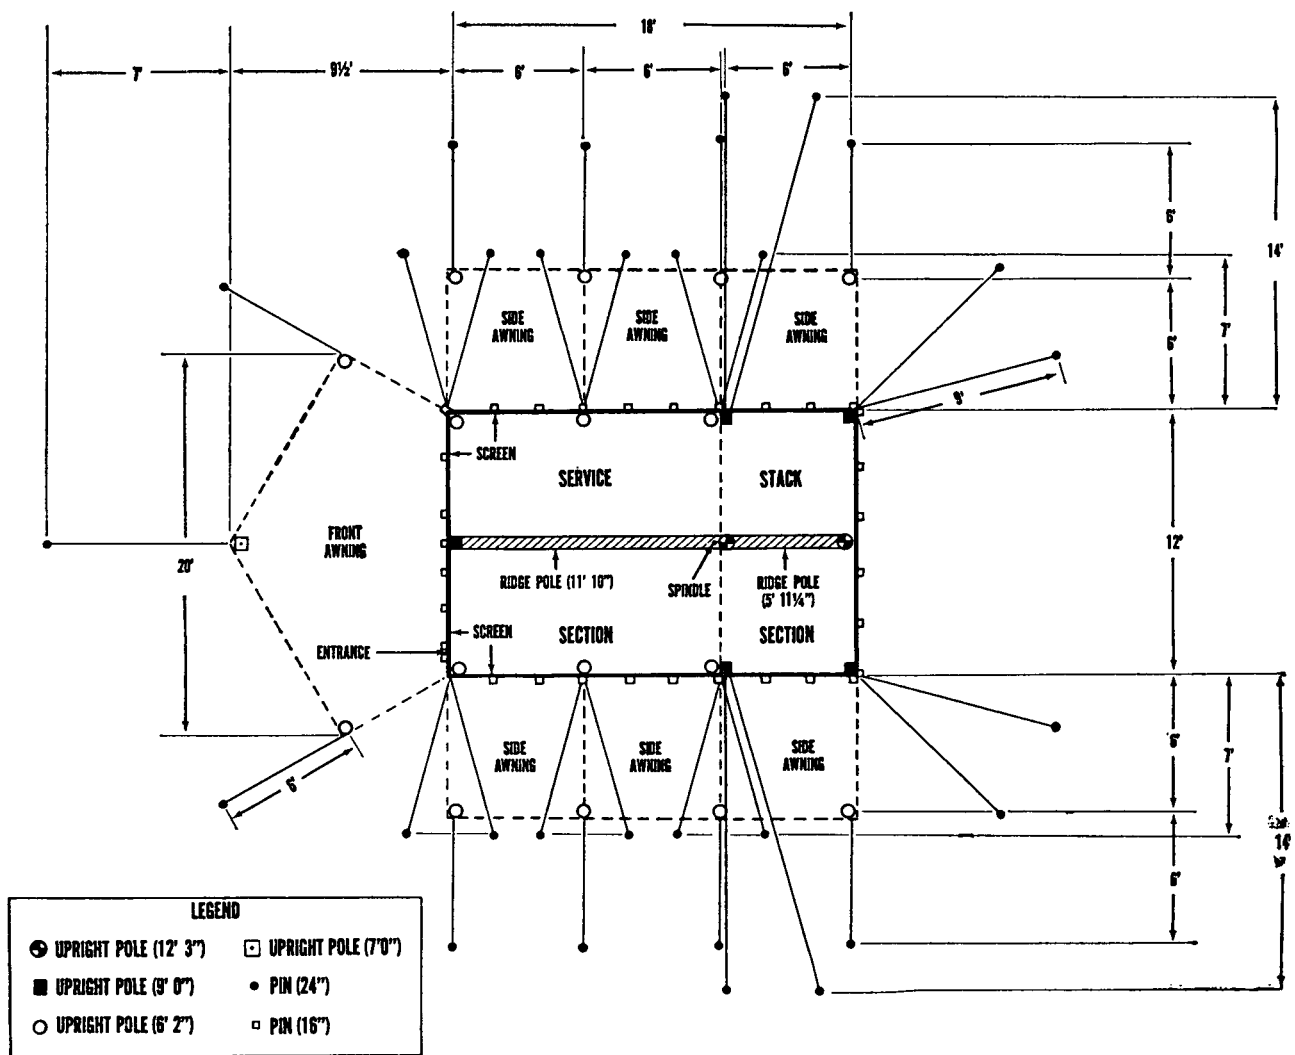


Figure 40. Ground plan of tent, kitchen, flyproof, M-1948.

of ridge pole around upright pole, swinging swivel plate into position on one side of upright pole, and tightening nut. Attach jumper line at front stack ridge around short ridge pole with a half hitch, and secure it to metal loop of connector with a round turn and two half hitches. Insert spindle of connector through grommet at ridge at rear end of service section of tent.

(5) *Preparing to attach screen (5, fig 41).*

(a) Unfasten slide fasteners at front and rear corners of sidewalls, and detach footstops from pins. Extend sidewalls outward with eight 6-foot 2-inch poles and front wall with two 6-foot 2-inch poles and one 7-foot pole, to form awnings. Drive pins and attach guy lines, according to ground plan. The slide fasteners on the sidewall awnings and at the front end of the stack can be unfastened, and the long guy lines from the 9-foot front slide stack poles can go through the openings.

(b) Spread out screen around outside of side and front poles at base of tent.

(6) *Attaching screen (6, fig 41).*

(a) Hang screen to tent by fastening snap fasteners at eave and rear corners. Remove tops of sidewall poles from eave grommets, insert spindles of poles into tabs in screen, and replace poles. Tie front peak of screen to ridge pole with screen wall tieline.

(b) Drive remaining 16-inch pins and attach footstops to pins in front of screen; attach footstops on sides of screen to 16-inch pins already driven.

(7) *Tying jumper lines and adjusting hoisting lines and ventilator screen flaps (7, fig 41).*

(a) Tie all jumper lines to eave and center poles.

(b) Adjust hoisting lines which go through D-rings on stack ventilator flaps and grommets on screen panel. Raise flaps and tie hoisting lines around stack upright poles.

(8) *Closing tent for blackout (fig 43).* Remove awning poles. Drop awnings and close slide fasteners. Place footstops over the same pins that are used for the screens. Close top stack section ventilator flaps. Make sure that top front service section ventilator flaps are open. Tie lines of bottom stack section ventila-

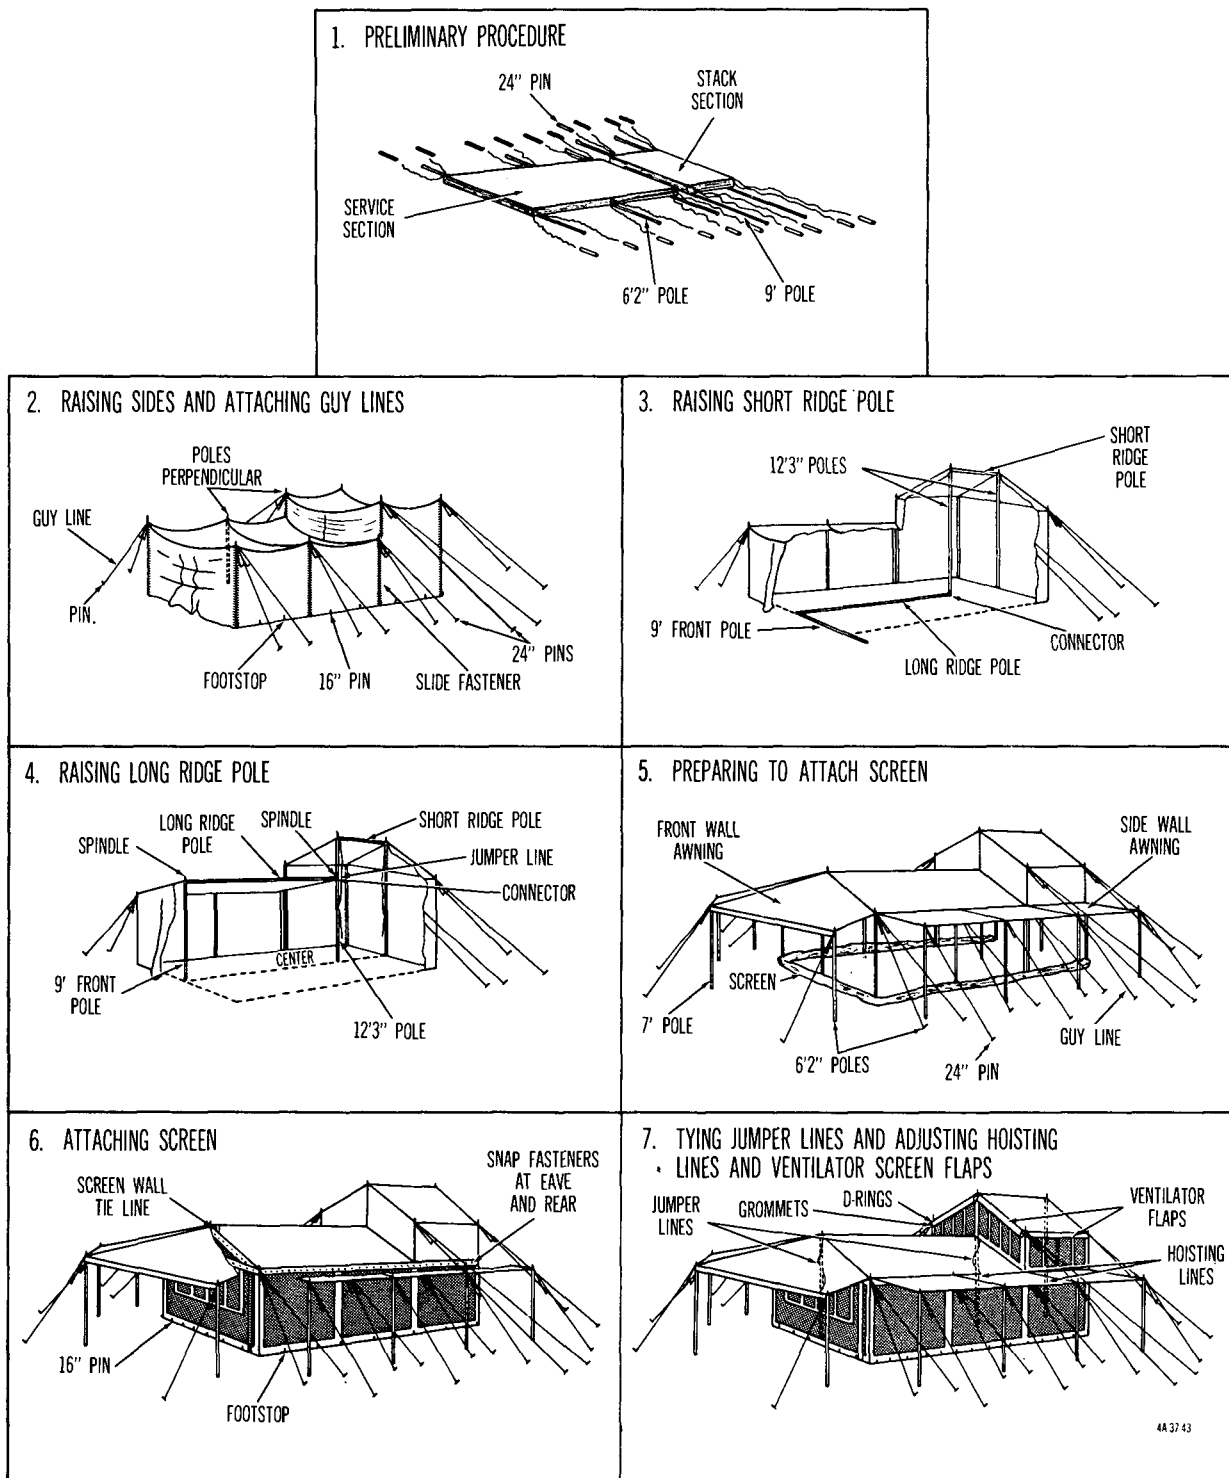


Figure 41. Steps in pitching tent, kitchen, flyproof, M-1948.

tor hoods in sides and rear to pins to assure a draft through the tent.

e. Striking.

(1) Unfasten slide fasteners along tent sidewalls.

(2) Release footstops and remove the 16-inch pins.

(3) Raise awnings temporarily, using the 6-foot 2-inch poles.

(4) Incline tentpoles supporting screen, remove screen from spindles of poles, and reset poles.

(5) Close all ventilator flaps.

(6) Remove awning poles and drop awnings.

(7) Remove the three center poles and their connecting ridge poles.

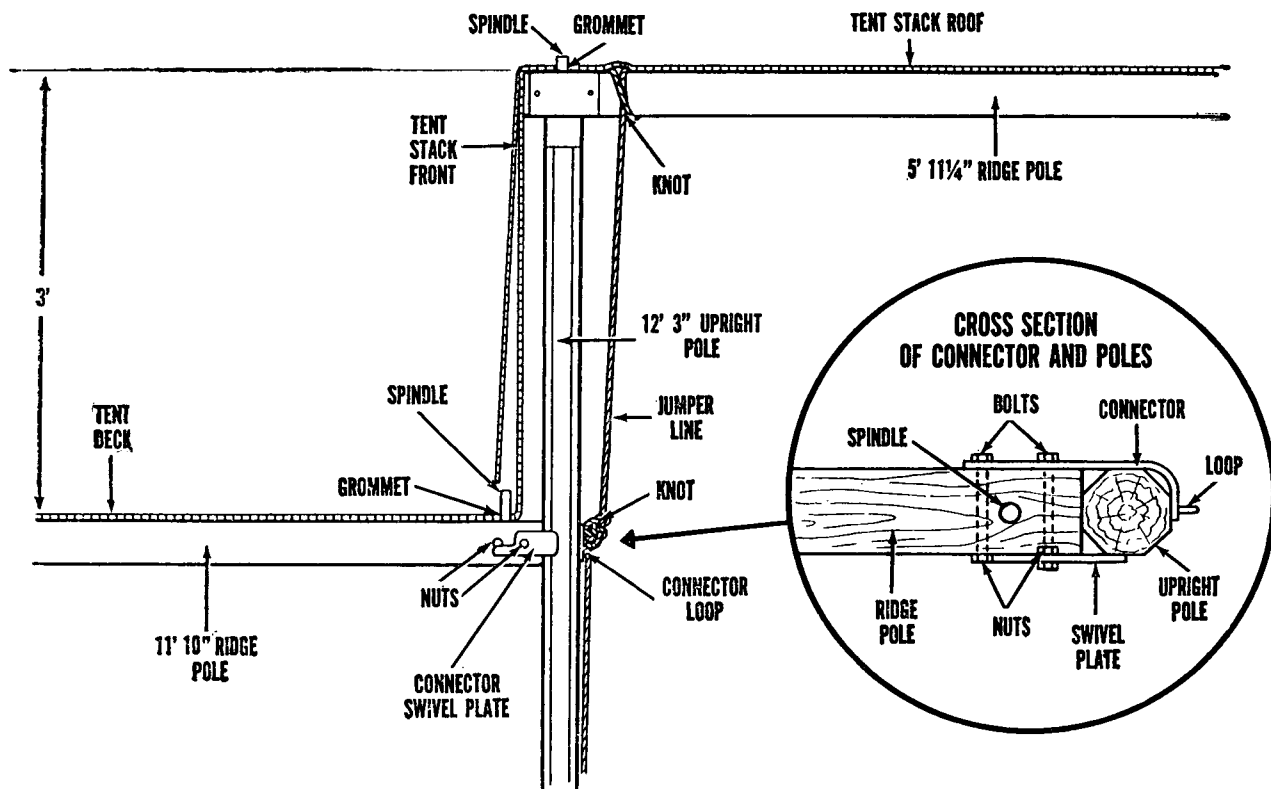


Figure 42. Fastening ridge poles to 12-foot 3-inch upright center pole tent, kitchen, flyproof, M-1948.

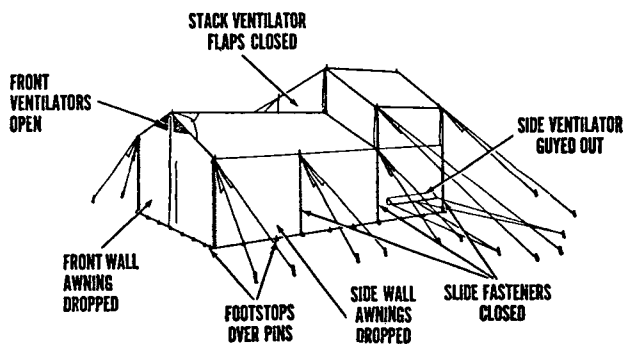


Figure 43. Closing tent, kitchen, flyproof, M-1948, for blackout.

(8) Remove the 6-foot 2-inch service section sidewall poles.

(9) Remove the 9-foot stack section sidewall poles.

(10) Remove the 24-inch pins from the ground.

f. Folding.

(1) *Folding screen* (1, fig 44). Spread screen flat on ground and close slide fasteners. Fold in sod cloth and triangular part at top of front section to form a straight line. Fold ends toward center in 30-inch folds. Fold one end over the other end, making a 3-by 6-foot bundle.

(2) *Folding tent* (2, fig 44).

(a) Spread tent flat on ground, arranging as neatly as possible. Throw all guy and

eave lines toward center. Fold side and end walls toward center.

(b) Grasp corners of rear, side, and front walls; fold over on front deck and stack. The tent is now a 12-foot square. Fold stack section on front deck. Establish a center line, and place folded screen to right of center line.

(c) Fold ends toward center and end over end. Establish a center line. Fold ends toward middle and end over end. The tent is now approximately a 3-by 3-foot bundle.

(d) Place in cover. Fold long flaps over first and then fold the shorter ones. Secure bundle with lines tied through grommets and around bundle.

12. Tent, Mountain, 2-Man

a. Use. The tent, mountain, 2-man, FMWWR, OD and white, complete with pins and poles (fig 45), is designed to provide a lightweight, temporary shelter for two men in mountainous and arctic regions.

b. Description. The tent is triangular in cross section, with an entrance and ventilator at each end.

(1) *Tabulated data.*


Height: ridge height, 3 feet, 7 inches;
eave height, 12 inches.

Length: 6 feet 10 inches.

Width: 14 feet 6 inches.

Weight: tent, 6 pounds; pins and poles, 3.5 pounds.

1. FOLDING SCREEN

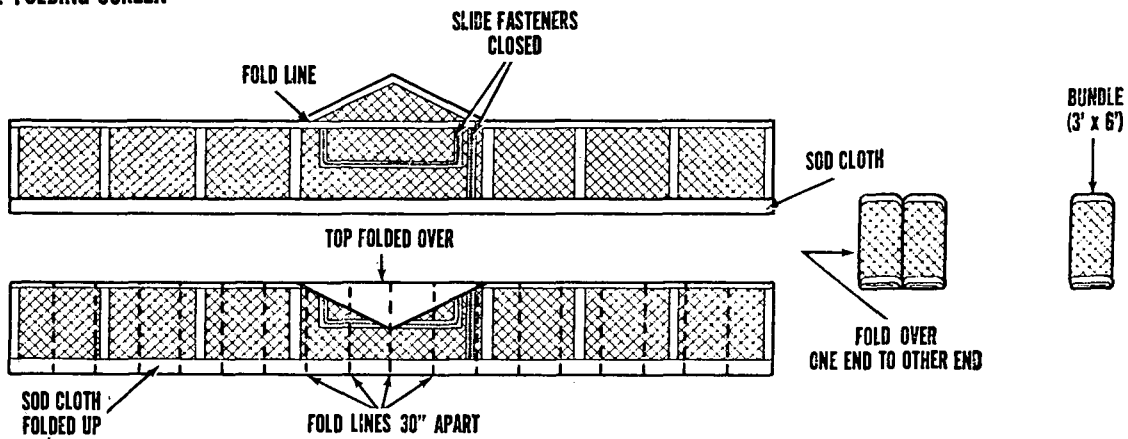

2. FOLDING TENT

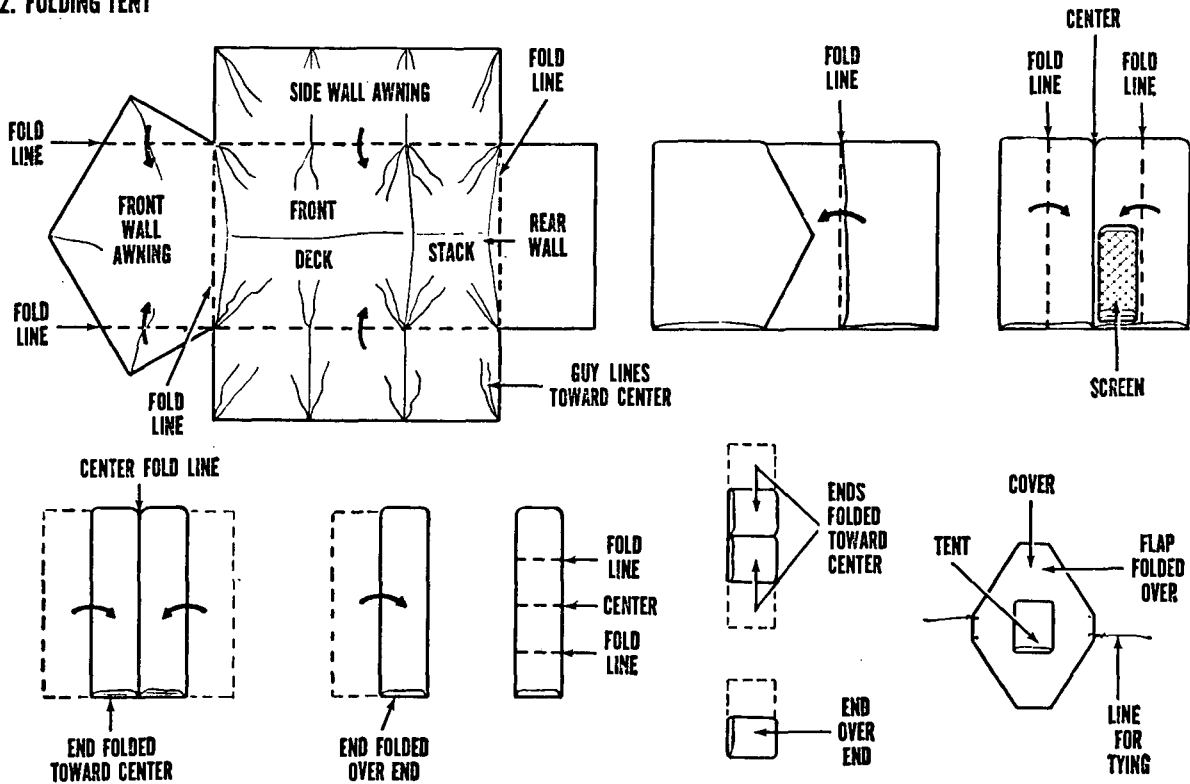


Figure 44. Steps in folding tent, kitchen, flyproof, M-1948.

Cube: 0.7 cubic feet.

Floorspace: approximately 30.75 square feet.

(2) *Materials.* The tent is made of a wind-resistant cotton twill cloth. The tent floor is made of a waterproof coated nylon cloth. The tent is olive drab in color on one side and white on the other so that it can be camouflaged by exposing the appropriate color.

(3) *Entrances.*


(a) The tent has two tubular tunnel entrances, 27 inches in diameter and 24 inches long.

(b) A tunnel entrance can be closed by

tying it either from the inside or outside with tie tapes. To tie entrances, wind tie tape around tunnel entrance as if entrance were the mouth of a bag, and fasten it with a half hitch.

(c) A tunnel entrance can be kept open by pulling it out and securing it to a guy line with tie tapes, or it can be rolled against the tent and secured by tying the tie tapes on the tent through grommets on the outside opening of the entrance.

(d) Tubular mosquito netting, attached to the body of the tent inside the entrance tunnels,

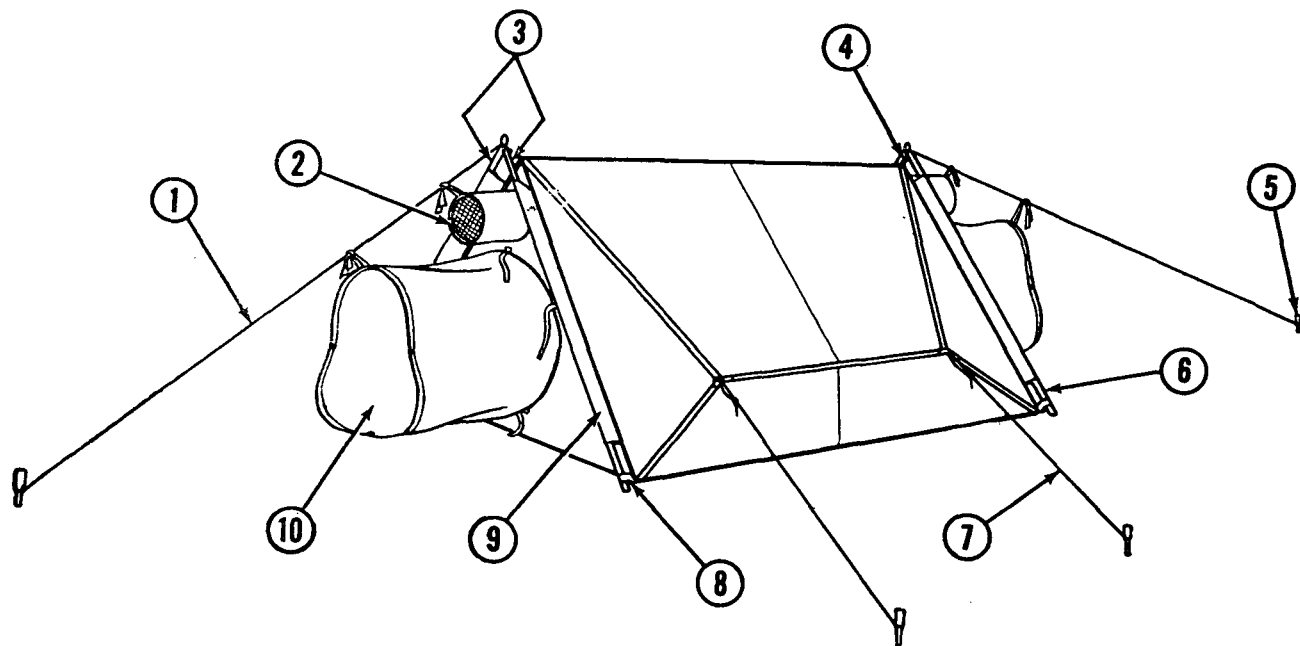

- | | |
|----------------------------|---------------------|
| 1 Long guy line | 6 Tentpole |
| 2 Ventilator | 7 Eave line |
| 3 Tentpole adaptor | 8 Loop for tentpole |
| 4 Loop for guy line | 9 Pole sleeve |
| 5 9-inch aluminum tent pin | 10 Entrance tunnel |

Figure 45. Tent, mountain, 2-man.

can be closed by tying it tight either from the inside or outside by tie tapes. To tie the mosquito netting, wind tie tapes around opening of netting as if it were the mouth of a bag, and fasten it with a half hitch.

(4) Ventilation.

(a) Ventilation is of the greatest importance in the mountain tent, because the cloth has been coated to make it impermeable. The tent can be ventilated by opening the tunnel entrances or by using the built-in ventilators.

(b) An 8-inch diameter ventilator, with mosquito netting at the outside opening, is at each end of the tent. In good weather, the ventilators are kept wide open by tying them to the guy lines with tie tapes. In storms, they are left hanging loosely to provide adequate protection as well as ventilation. The ventilators should never be closed when a gasoline-burning stove is lighted. In cold weather, there is an additional reason for leaving the ventilators open. Unless the moisture caused by breathing and cooking can pass off into the outside air, it forms as frost on the roof of the tent. In a wind, this shakes off and wets the clothes and sleeping bags.

(5) *Floor.* The floor is constructed as an integral part of the tent. Special care should be taken not to tear the floor with boots.

c. Pitching. Two men can pitch the tent in approximately 10 minutes.

(1) Preliminary procedures (1, fig 46).

(a) Spread tent on ground in position it is to occupy, with desired color on outside; olive drab in normal situations and white under snowy conditions. To reverse tent for proper color, pull inside of tent through one of the entrance tunnels, taking care not to damage the fabric.

(b) Assemble tentpoles so that four poles of three sections each are made. Place poles on ground alongside the two tentpole adapters.

(2) Inserting poles through loops and sleeves and attaching adapters (2, fig 46).

(a) Insert tentpoles through corner loops and pole sleeves of tent.

(b) Attach pole adapters to tentpoles.

(3) Raising front end of tent (3, fig 46).


(a) Raise front tentpoles and adapter to a position so that front end of tent is vertical.

(b) Place front guy line through ring of adapter and stake guy line out to a pin in front of tent.


(4) Raising rear end of tent (4, fig 46).

(a) Raise rear tentpoles and adapter to a position so that ridge of tent is almost level and rear end of tent is vertical.


1. PRELIMINARY PROCEDURES

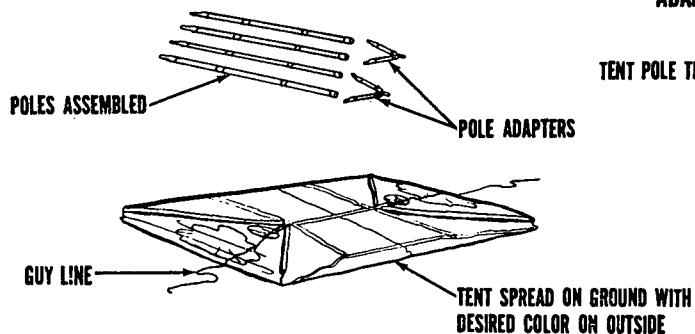


2. INSERTING POLES THROUGH LOOPS AND SLEEVES AND ATTACHING ADAPTERS

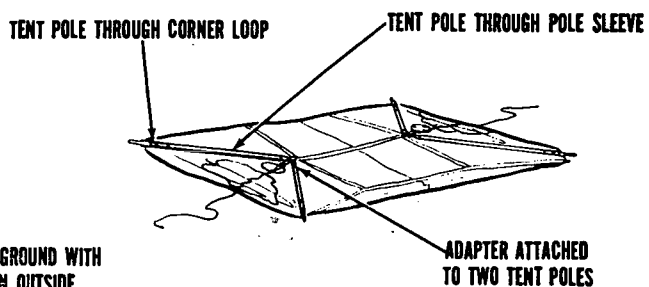

3. RAISING FRONT END OF TENT

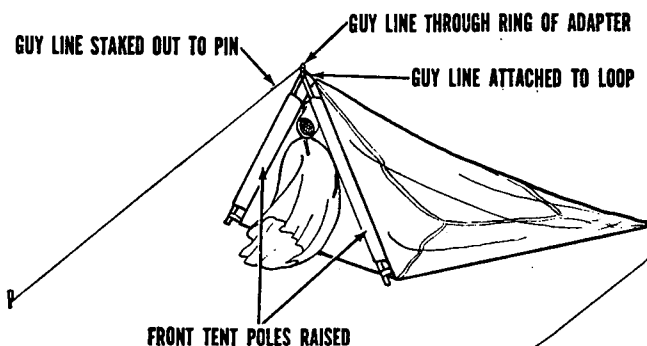

4. RAISING REAR END OF TENT

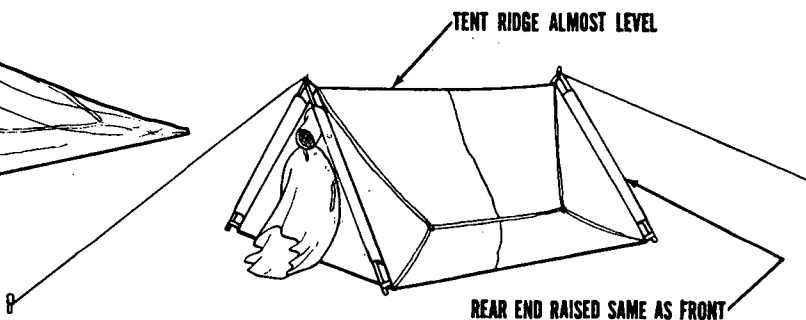

5. TYING VENTILATOR AND ENTRANCE TIE TAPES TO GUY LINES AND STAKING OUT EAVE LINES

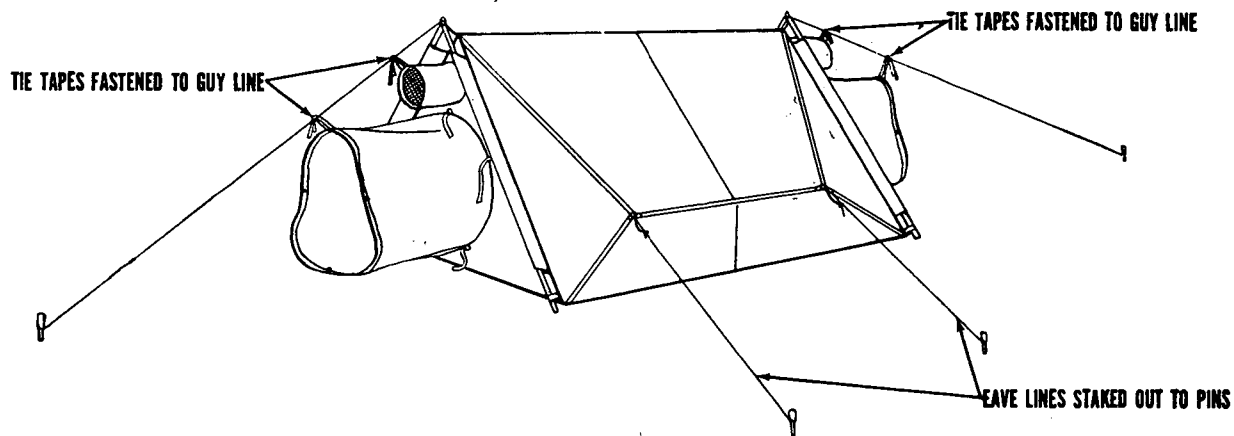


Figure 46. Steps in pitching tent, mountain, 2-man.

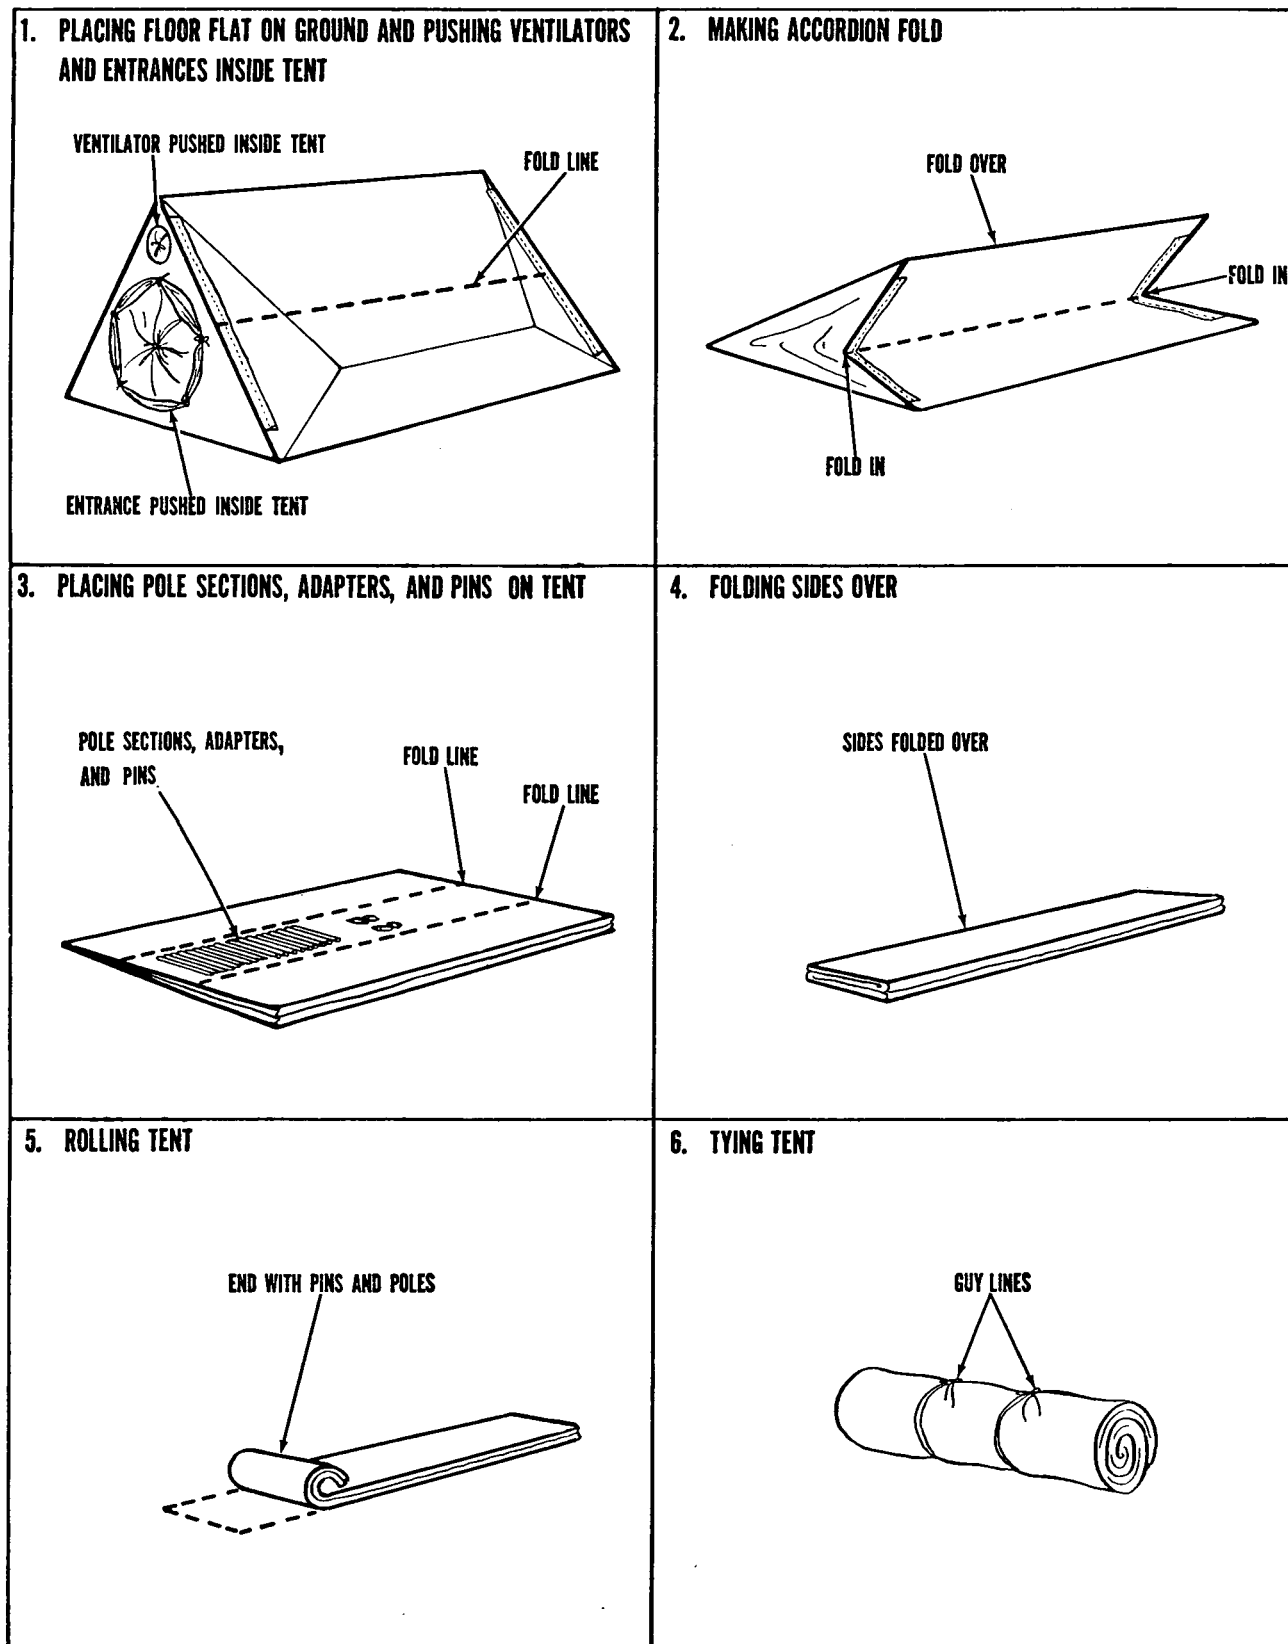


Figure 47. Steps in folding and rolling tent, mountain, 2-man.

(b) Place rear guy line through ring of adapter and stake guy line out to a pin to rear of tent.

(5) *Tying ventilator and entrance tie tapes to guy lines and staking out eave lines* (5, fig 46).

(a) Tie ventilator and tunnel entrance tie tapes to guy lines.

(b) Attach eave lines to the two loops on each side of tent and stake eave lines out to pins.

(6) *Anchoring corner*. When additional anchorage of the tent is required, lines can be attached to the corner loops and secured to the guy line pins.

(7) *Pitching tent without poles and pins*. To achieve maximum mobility, the tent can be pitched without using poles and pins. This procedure is especially valuable in wooded terrain. The corners of the tent and the front and rear guy lines can be staked down with available sticks or stones. If the ridge of the tent sags, it can be supported by attaching a line to the loop in the center of the ridge and securing the line to a tree. Skis and ski poles can be used in place of tentpoles and pins. Although the tent can be pitched without pins and poles, these items should always be available.

(8) *Pitching tent in rocky terrain*. In rocky terrain, it may be impossible to drive tent pins into the ground. In this case, attach guy lines to rocks.

(9) *Pitching tent in loose and powdery snow*.

When the snow on which the tent is pitched is loose and powdery, the guy lines can

be attached to ski poles or ice axes, which are driven down into the snow after it has been packed; or the lines can be attached to a "dead man" anchor. This is made by burying a tent pin or stick horizontally in a hole in the snow and stamping the snow on top of the anchor until it is thoroughly packed.

d. *Striking*.

(1) Untie ventilator and tunnel entrance tie tapes from guy lines.

(2) Remove guy and eave lines from pins.

(3) Remove pins from ground.

(4) Untie guy lines from webbing loops at front and rear peaks of tent.

(5) Unfasten adapters from poles and remove poles from tent, and then disassemble poles.

e. *Folding and Rolling* (fig 47).

(1) Place tent so that bottom is flat on ground. Push ventilators and tunnel entrances inside tent (1).

(2) With one man at each end of the tent, make an accordion fold by folding one side of tent inward at center and folding the other side over so that it covers bottom of tent (2).

(3) Place pole sections, adapters, and pins at center of one end of folded tent (3). Eave lines should remain attached.

(4) Fold sides of folded tent over toward center (4).

(5) Starting at the end with pins and poles, roll folded tent tightly toward the other end (5).

(6) Tie rolled tent with two guy lines (6). The tent can now be placed on the pack or stored.

CHAPTER 3

FRAME SUPPORTED TENTS

Section I. General Purpose Tents

13. Tent, Frame-Type, Maintenance, Medium Light Metal

a. *Use.* The tent, frame-type, maintenance, medium light metal, FMWWR, OD, complete with frame, tent, and tent liner (fig 48), is designed to be used as a medium sized maintenance tent for repair of wheeled and tracked vehicles in temperate or cold climates. It is also designed to be used as a maintenance shelter for personnel performing maintenance and assembly operations for the Hawk or Corporal missiles.

b. *Description.* The tent is rectangular shaped with an arched top consisting of a sectionalized magnesium frame, a sectionalized outer fabric or skin, and a sectionalized tent liner.

(1) *Tabulated data.*

Height: 14 feet.

Length: basic tent (two tent frame end sections, two tent outer fabric end sections, two tent liner end sections, three frame intermediate sections, three tent outer fabric intermediate sections, and three tent liner intermediate sections) is 32 feet. Additional 8-foot intermediate sections can be added as required, up to a maximum tent length of 64 feet.

Width: 20 feet.

Weight: basic tent: tent frame, 1042 pounds; tent outer fabric, 432 pounds; tent liner, 475 pounds; intermediate section: tent frame, 116 pounds; tent outer fabric, 80 pounds; tent liner, 95 pounds.

Cube: basic tent outer fabric, 52 cubic feet; basic tent liner, 185 cubic feet intermediate section tent outer fabric, 10 cubic feet intermediate section tent liner, 37 cubic feet.

Floorspace: basic tent, 640 square feet.

(2) *Material.* The outer fabric is made of 9.85 ounce duck, FWWMR, OD and is issued in combinations of end and intermediate sections. There are two end sections and three intermediate sections issued for the basic tent.

(3) *Doors.* The tent has a vehicle door and a personnel door at each end.


(a) *Vehicle doors.* The vehicle doors, in conjunction with portions of the frame, operate on a venetian blind principle. When closed, the doors are secured by means of J-hooks and lacing lines.

(b) *Personnel doors.* The personnel door, at each end of the tent, is a curved slide fastener opening, 89 inches long. When closed, the doors are secured with toggle chapes and wood toggles.

(4) *Windows.* Each tent intermediate section contains a window assembly consisting of a cloth netting screen, a plastic windowpane with slide fastener, and a blackout flap with tie tapes. The window screen is attached to the sidewall of the tent. The windowpane is attached at the top of the sidewall of the tent; it is secured at the bottom and two sides by a slide fastener which can be unfastened to allow the windowpane to be rolled up and tied at the top with tie tapes. When the blackout flap is in use, it is secured by tying tie tapes at the two sides and at the bottom; when not in use, it is rolled up and tied at the top with tie tapes.

(5) *Ventilation.* The tent is ventilated by two ventilators located near the top of each end section. Each ventilator assembly consists of a cloth netting insect screen, a hood with spring assembly, and a ventilator flap with tie tapes and D-ring chapes. The flaps should be closed when the tent is used at night under blackout conditions.

(6) *Heating.* The tent is heated by an external heater. Heater duct sleeves are located

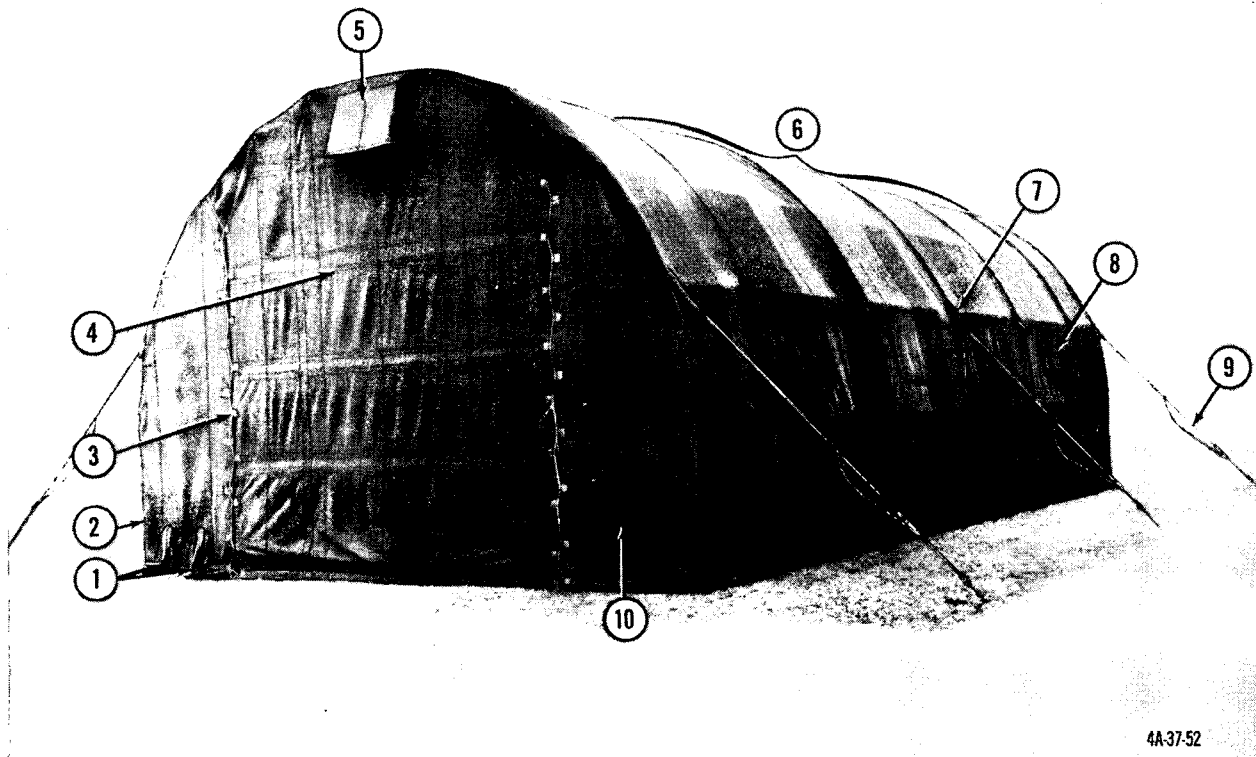

- | | |
|-----------------------|-------------------------|
| 1 Heater duct sleeves | 6 Intermediate sections |
| 2 End section | 7 Guy line sleeve |
| 3 Lacing line | 8 Window |
| 4 Vehicle door | 9 Guy line assembly |
| 5 Ventilator | 10 Personnel door |

Figure 48. Tent, frame-type, maintenance, medium light metal.

in each tent and section to accommodate the heater ducts.

(7) *Liner.* The tent liner is made of 8.5-ounce, natural color, corded sateen cloth that is fiberglass-insulated, and fire-and mildew-resistant treated. The liner consists of end sections and intermediate sections to match the net outer fabric. Each liner end section contains a personnel door, a vehicle door, ventilator flap, and heater duct sleeves. The end sections are marked A and B. The difference between them is the type of fastener provided for attachment to an intermediate liner section. Each liner intermediate section contains a plastic windowpane which must be aligned with the windowpane in each intermediate tent outer section. Liner sections are joined with becket lacing. Each liner section is supplied with nine aluminum arch pipes, an arch pipe rope, and S-hook and chain assemblies, which are used to secure the liner to the tent frame.

(8) *Covers.* The tent is provided with one tent cover for the two tent outer fabric end sections, one tent cover for each tent outer fabric intermediate section, and one tent cover

for each tent liner end section. A tent liner cover is provided for each tent liner intermediate section.

c. *Pitching.* The basic tent can be erected by eight men in approximately 4 hours.

(1) *Assembling arches* (fig 49).


(a) Lay out end arch segments on the ground in the proper order, with the heads of the captive hex bolts down. Insert joints of intermediate arch segments into lower arch segments; insert joints of upper arch segment into intermediate arch segments. Fasten segments together with eyebolt and chain assemblies. Place ends of transom chord and ends of transom chord struts over the capscrews protruding from the intermediate arch segments. Fasten with eye nut and chain assemblies.

(b) Lay out intermediate arch segments on the ground in the proper order. Join the segments as described in (a) above.

(2) *Assembling frame* (fig 50).

(a) Attach short purlins marked with a yellow band to captive hex bolts of an assembled end arch. Hand tighten hex bolts.

(b) Place an assembled intermediate arch on short purlins. Thread stud bolts of

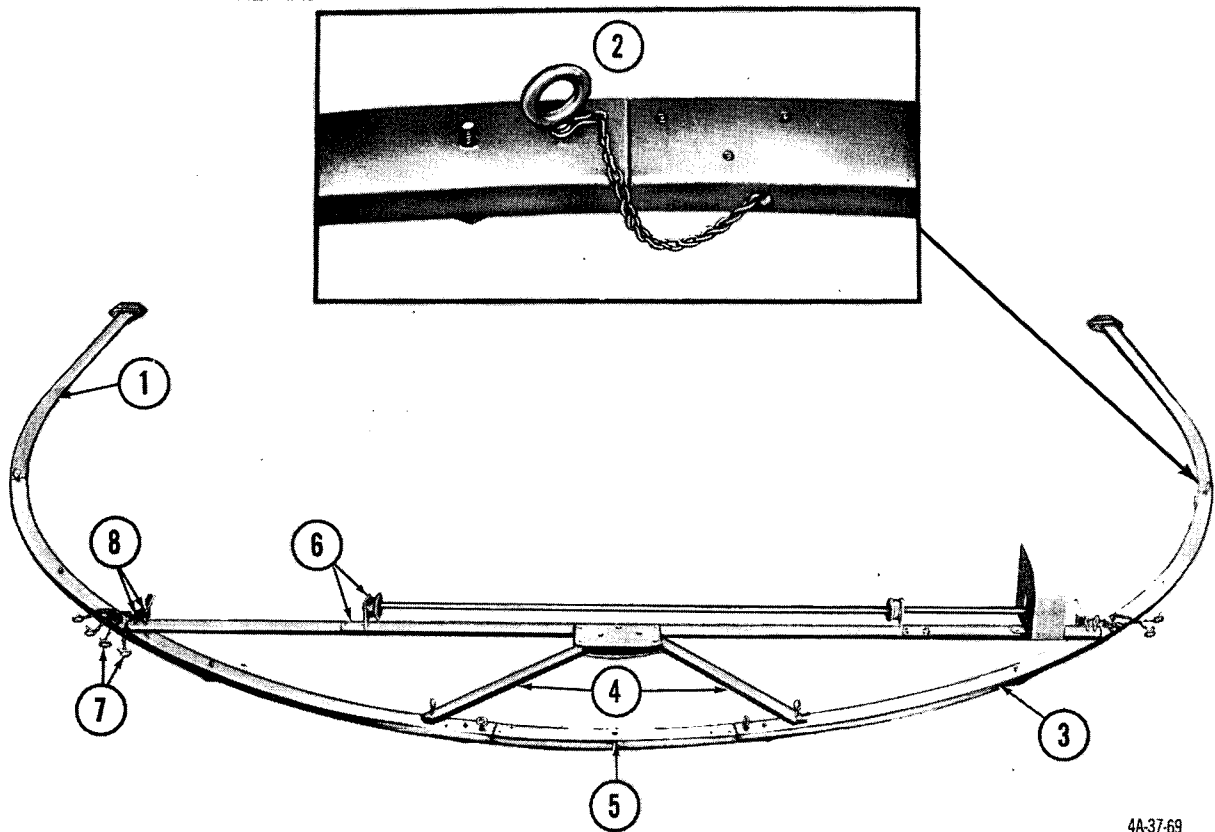

4A-37-69

- 1 Lower arch segment
- 2 Arch segments fastened together
- 3 Intermediate arch segment
- 4 Transom chord struts

- 5 Upper arch segment
- 6 Transom chord assembly
- 7 Eye nut and chain assemblies
- 8 Capscrews

Figure 49. Assembling arches of tent, frame-type, maintenance, medium light metal.

long purlins through holes in intermediate arch, into ends of short purlins marked with yellow bands. Hand-tighten all connections.

(c) Raise end arch and intermediate arch to an upright position.

(d) Attach another intermediate arch to long purlins protruding from erected section of frame. Thread stud belts of long purlins through holes in intermediate arch and into ends of purlins extending from partial frame. Hand-tighten all connections.

(e) Attach additional intermediate arches as described in (d) above. Last intermediate arch will be connected to partial frame with short purlins.

(f) Attach other end arch to short purlins extending from partial frame. Thread captive hex bolts of end arch into ends of short purlins and hand-tighten all bolts.

(3) *Alining and anchoring arches to the ground* (fig 51).

(a) Space ends of arches, using the arch spacer assembly. Adjust ends of each arch until arch spacer cable is tight.

(b) Aline ends of all arches and anchor arches to the ground with steel tent pins.

(4) *Attaching tent sections to frame* (fig 52).


(a) Raise a folded tent end section over end arch. Unfold tent end section so that vehicle door is in center of end arch and rear portion overlaps intermediate arch by approximately 6 inches.

(b) Secure arch hooks on inside of tent and section to the end arch (1).

(c) Pull sod cloth, at each side of end section, under lowest purlin of frame; wrap flap over purlin; and engage round rings of hem rope to J-hooks of tent end section (2). Tighten hem rope and secure ends of rope to end and intermediate arches (3). Pass ends of transverse line under lowest purlins, through transverse line loop eyes, and tighten and secure ends with a knot (3).

(d) Wrap transom chord securing straps around transom chord, and secure straps to D-rings (4).

(e) Place folded intermediate tent section on the ground next to portion of tent

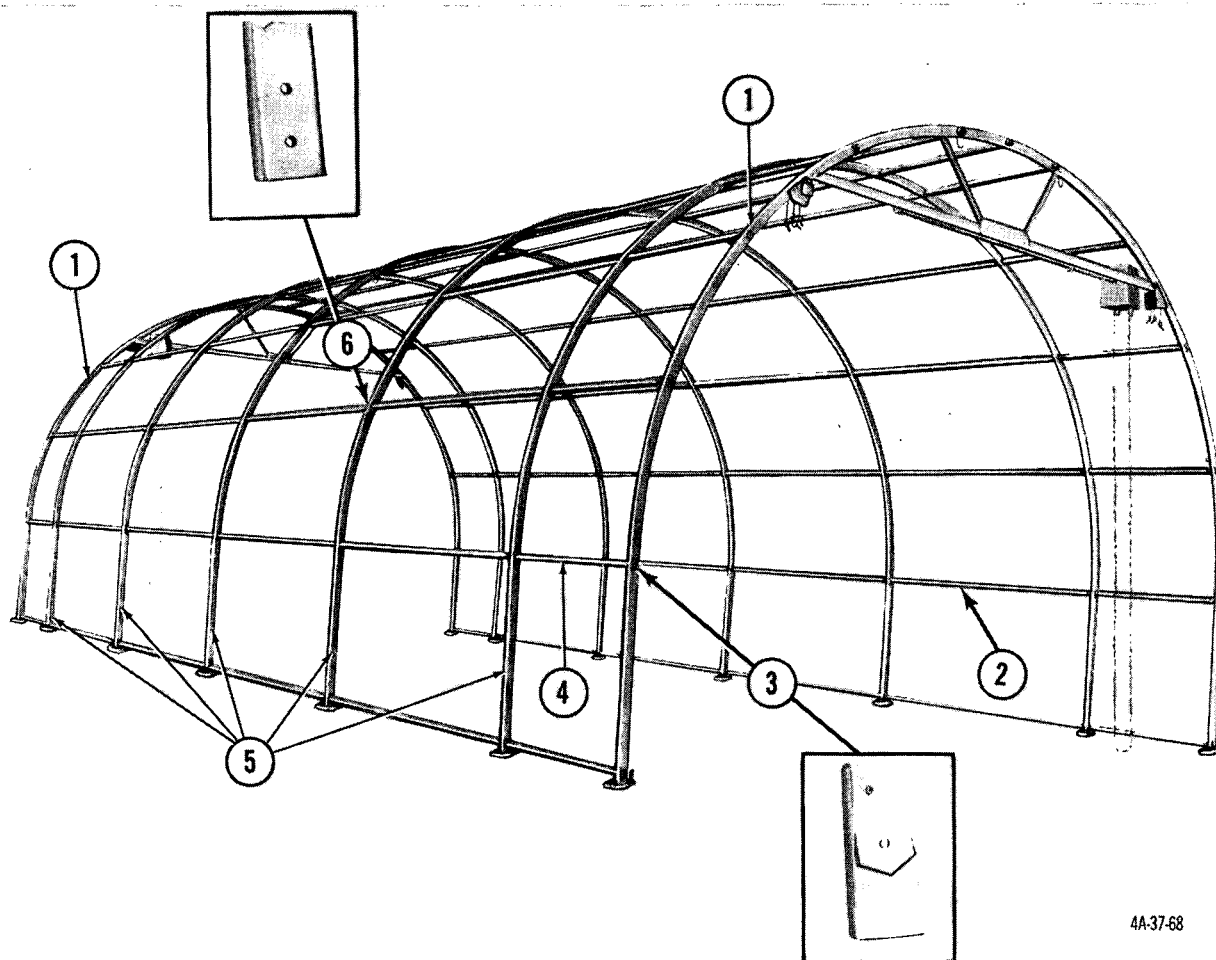

4A-37-68

- 1 End arches
- 2 Long purlin
- 3 Captive hex bolts

- 4 Short purlin
- 5 Intermediate arches
- 6 Purlin stud hole

Figure 50. Assembling frame of tent, frame-type, maintenance, medium light metal.

frame that is to be covered. Attach ropes to end of tent section, throw ropes over tent frame, and pull tent section over tent frame so that the tent fabric overlaps both intermediate arches by approximately 6 inches (5). Make sure windows of all intermediate tent sections are on same side of tent.

(f) Secure ends of tent intermediate section to tent frame as described in (c) above.

(g) Secure transverse line on exposed edge of tent intermediate section as described in (c) above.

(h) Pass transverse line and securing straps on overlapping edge of intermediate section through slits in bottom of tent section overlapped. Pass transverse line over next higher purlin, pull down to tighten, and secure with a knot. Pass securing strap across arch, and fasten and secure strap D-ring to nearest J-hook (6).

(i) Attach other tent end section as described in (a) through (c) above.

(j) Secure transverse lines and securing

straps as described in (h) above.

(k) Secure transom chord securing straps as described in (d) above.

(5) *Installing vehicle doors* (fig 53).

(a) Slide end wall stiffener of tent end section into receiving channel of doorpost (1), and raise doorpost assembly to an upright position.


(b) Secure doorpost assembly to movable socket of end arch with eyebolt and eyepin and chain assemblies (2).

(c) Insert door control arm into doorpost gusset.

(d) Attach diagonal door control arm to control arm and to top post bracket on the doorpost with the toggle pin and chain assemblies (3).

(e) Install opposite doorpost assembly in same manner.

(f) Slide three door spars into bottom three door spar pockets of each vehicle door. Insert winch assembly hoisting cables of each vehicle door through a fourth door spar, and

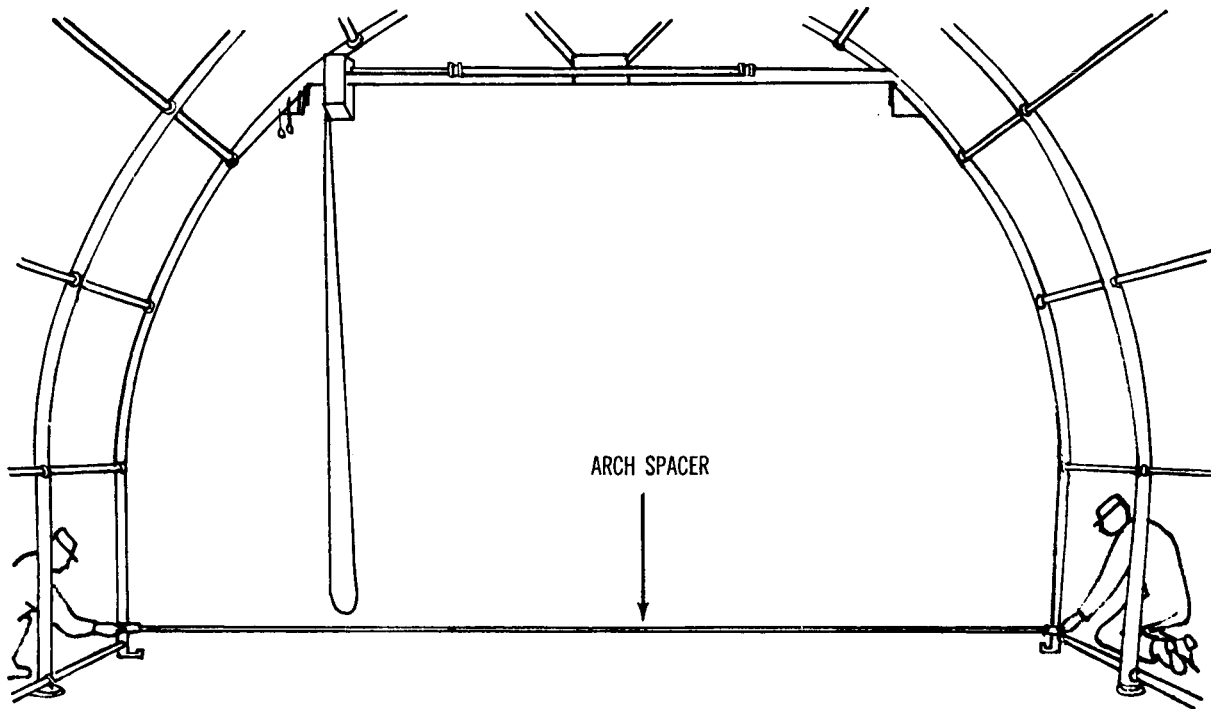

4A-37-53

Figure 51. Alining and anchoring arches of tent, frame-type, maintenance, medium light metal.

alternately through vehicle door D-rings and installed door spars. Lock cable toggles under bottom door spar (4).

(g) Open doorpost top assemblies, pull hoist chain to raise vehicle doors, and insert door spar rollers in channels of doorpost (5). Close doorpost top assemblies, lower vehicle doors, lift top door spars to spar pockets, and button pocket flaps over door spars.

(h) With doors closed, adjust the hoist cables to eliminate all slack on winch drums.

(6) *Installing end arch purlins and securing end walls (fig 45).*

(a) Attach one end of end arch purlin to captive hex bolt near bottom of each doorpost assembly. Handtighten the connection.

(b) Thread adjustment shaft and clevis assembly into other end of end arch purlin, fit clevis to bracket of end arch anchor assembly, and secure clevis to bracket with toggle pin and chain assembly.

(c) Anchor doorpost to the ground with steel pins.

(d) Secure end walls to tent frame as described in (4) (c) above.

(7) *Securing tent to ground (fig 55).*

(a) Install anchors on each side of the tent; one in line with the guy-line sleeve at each end arch, and one at each intermediate

arch. Use dacron guy lines at all other intermediate arches.

(b) Slip loop and toggle bar of each guy assembly through a tent guy-line sleeve, pass loop around arch and over purlin inside of tent, and slip toggle bar through loop to secure guy line to tent frame (1).

(c) Attach guy assembly S-hook to ground anchor loop, adjust guy assembly for proper tension, and close guy assembly toggle (2).

(8) *Attaching tent liner to inside of tent (fig 56).*

(a) Determine the end of tent to which each tent liner end section is to be attached, so that the windows of intermediate liner sections correspond with the windows of the erected tent.

(b) Release doorpost top assemblies, raise vehicle doors, and lock hoist chain in chain retainer. Pull down on door control arm ropes, and lock door control arms in door control arm locks.

(c) Pass arch pipe rope of liner end section over top purlin of frame end section, pull down on rope, and raise liner end section to top of tent (1).

(d) Secure center arch pipe of liner end section to top purlin of frame end section with S-hook and chain assemblies (2). Secure re-

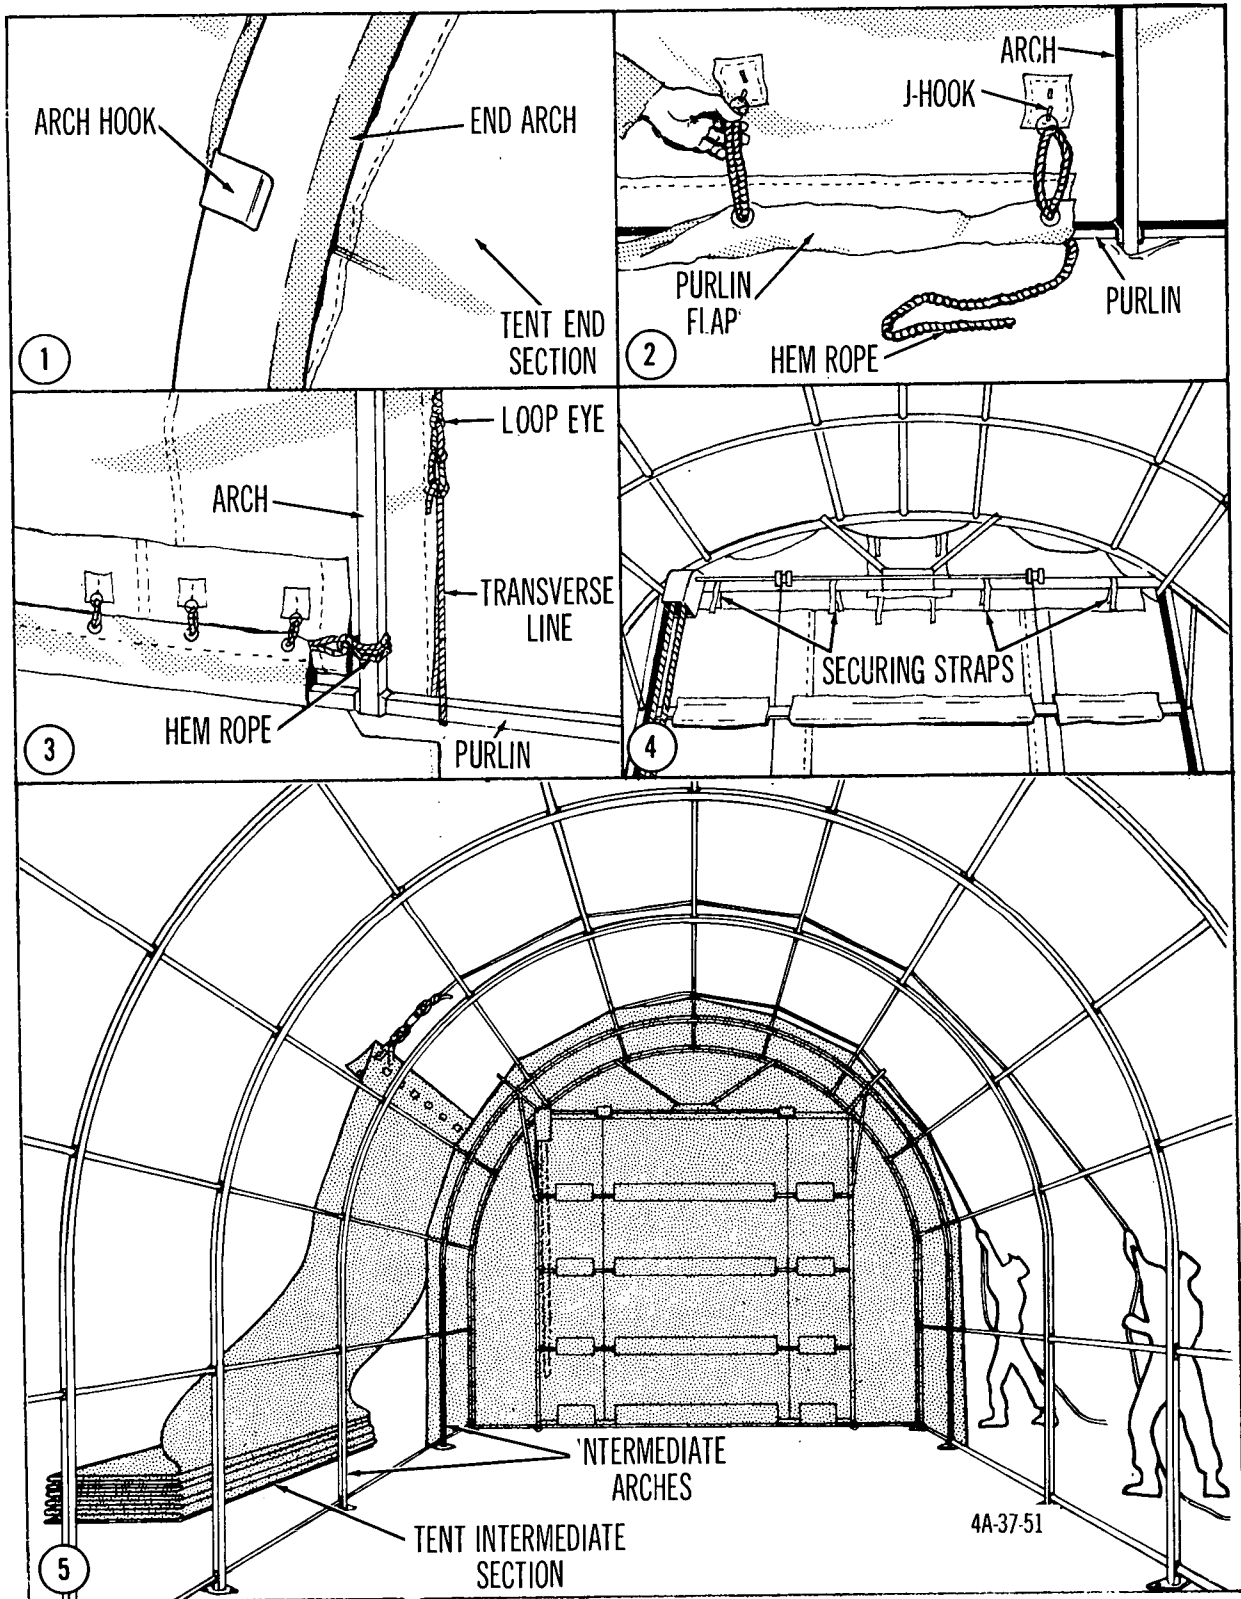


Figure 52. Attaching tent sections to frame of tent, frame-type, maintenance, medium light metal.

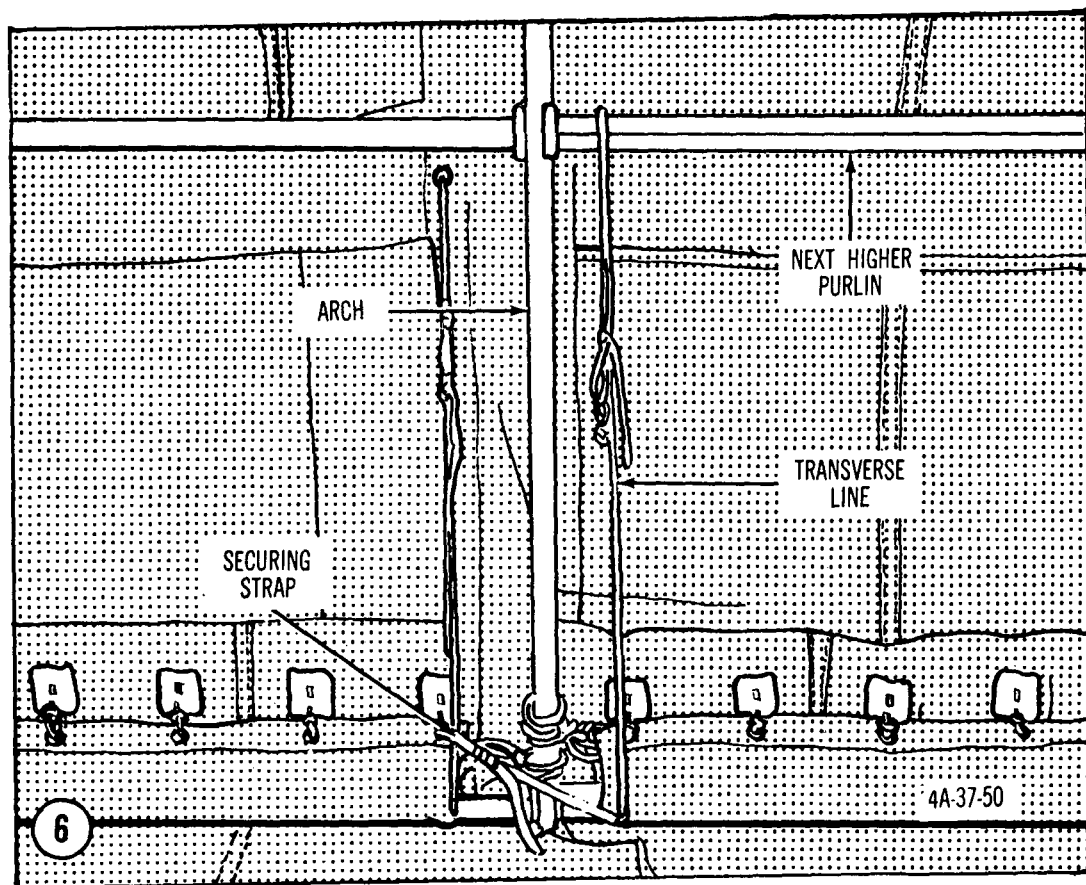


Figure 52—Continued.

maining arch pipes to frame purlins on each side of tent in a similar manner.

(e) Secure tie tapes of liner end walls to D-rings of tent end walls (3).

(f) Close vehicle door, and secure liner vehicle door to tent vehicle door with tie tapes and D-rings (4).

(g) Raise and secure intermediate liner section as described in (c) and (d) above.

(h) Fasten liner sections together with beackets of one section laced through grommets of adjacent section, and chain-lace the beackets (fig 57). Begin lacing at bottom of one side of liner and continue until bottom of other side is reached. Secure last lacing with a knot.

(9) *Installing wiring harness assembly* (fig 58).

(a) Mount circuit breaker to bracket on door control arm lock.

(b) Secure long cord assemblies to tent liner arch pipes on each side of tent with hanger hooks, or to tent purlins if liner is not installed.

(c) Connect lighting and outlet assemblies to long cord assemblies, and secure assemblies to liner arch pipes or to tent purlins.

(d) Attach 6-foot cord from the circuit breaker to an appropriate power source.

d. *Striking*. The basic tent can be struck by four men in approximately 3 hours.

(1) *Removing wiring harness assembly*.

(a) Disconnect cord connected to power source.

(b) Disconnect lighting and outlet assemblies from long cord assemblies and from liner arch pipes or tent purlins.

(c) Unhook long cord assemblies from arch pipes or tent purlins, and remove circuit breaker from mounting bracket.

(2) *Removing tent liner*.

(a) Untie liner end section tie tapes from D-rings of tent vehicle door and end walls.

(b) Separate liner sections by unlacing becket lacing.

(c) Remove arch pipe S-hooks and chain assemblies of each liner section from tent purlins, and remove liner sections.

(3) *Removing guy-assemblies*. Remove all guy assemblies from ground anchors and from tent frame do not retrieve ground anchors.

(4) *Disassembling vehicle doors*.

(a) Unlock toggles of hoisting cables from bottom door spars and remove all door spars.

(b) Untie and release tent end wall hem ropes from end wall J-hooks.

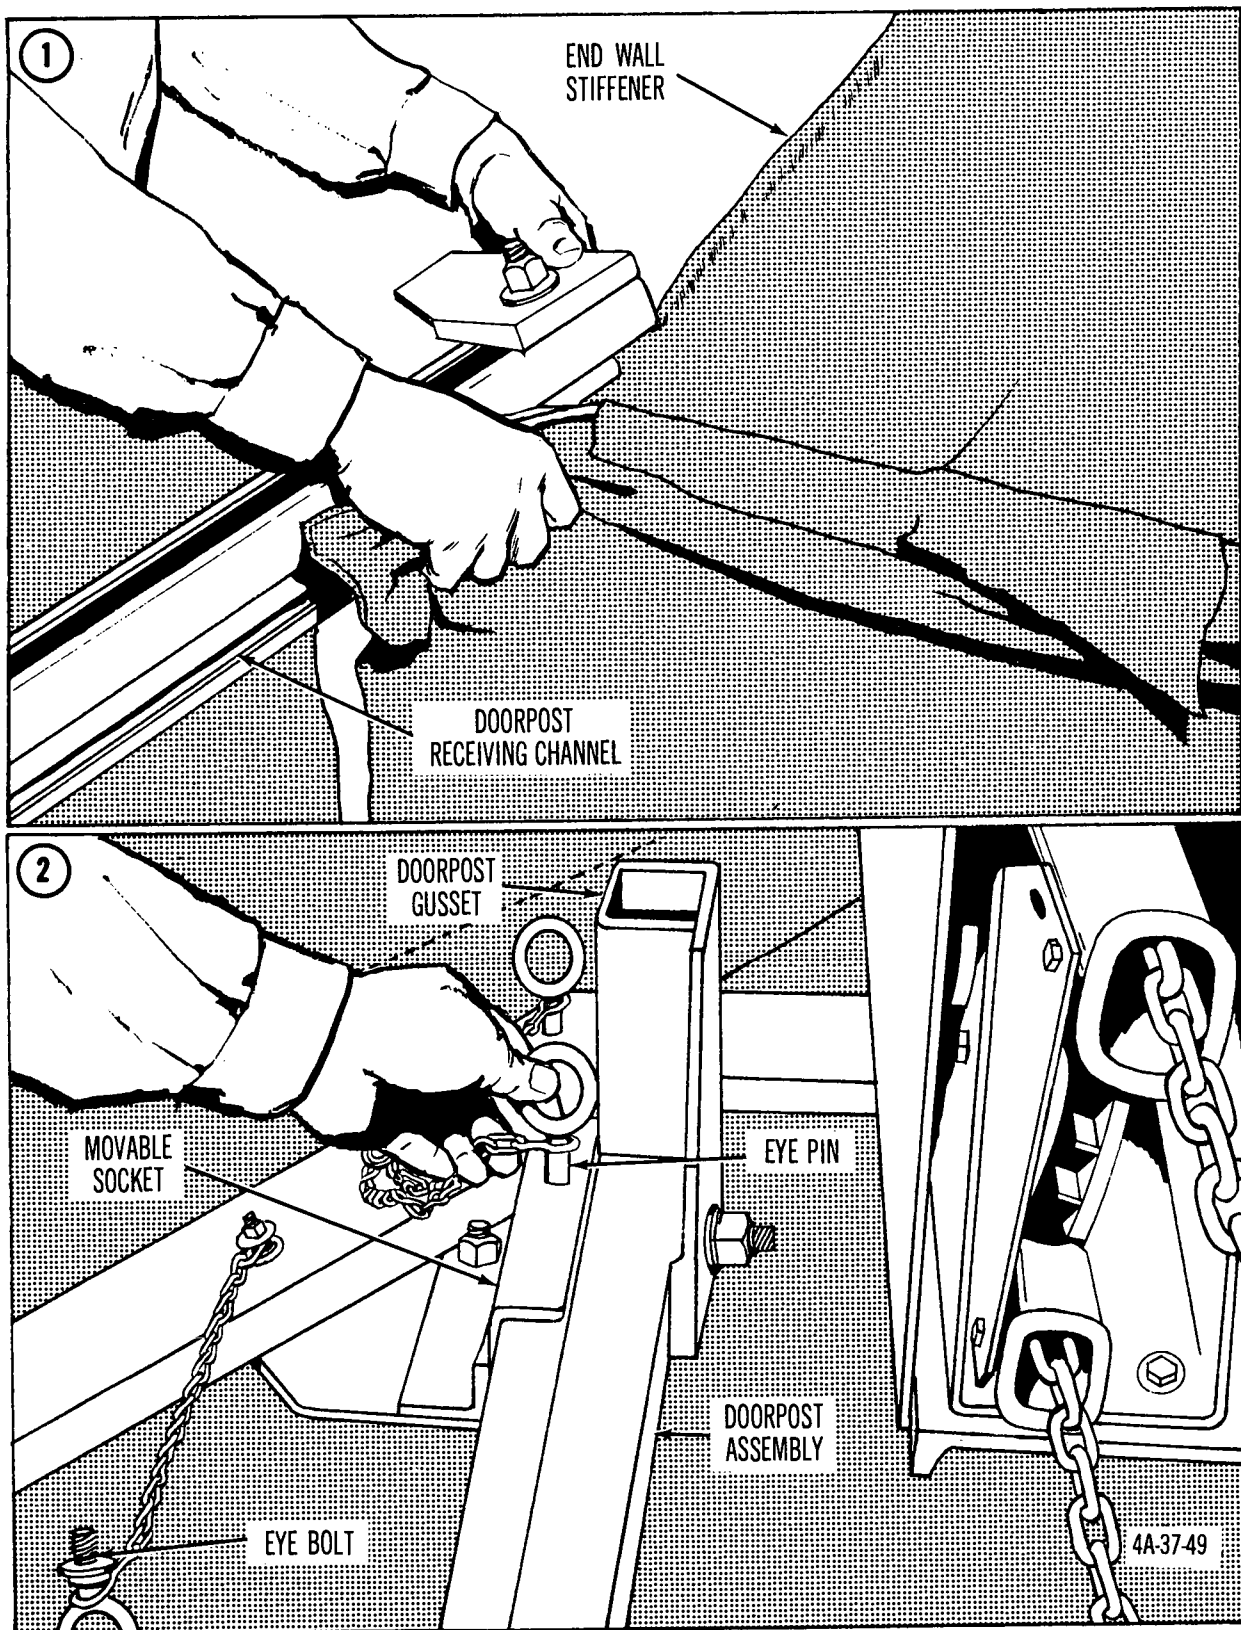


Figure 53. Installing vehicle doors of tent, frame-type, maintenance, medium light metal.

- (c) Remove each end arch purlin from end arches and assemblies.
- (d) Remove diagonal door control arms from doorposts and door control arms.
- (e) Remove door control arms from doorposts.

- (f) Remove steel tent pins from doorpost anchors.
- (g) Disassemble doorposts from movable sockets on end arches.
- (h) Remove doorposts from tent end wall stiffeners.

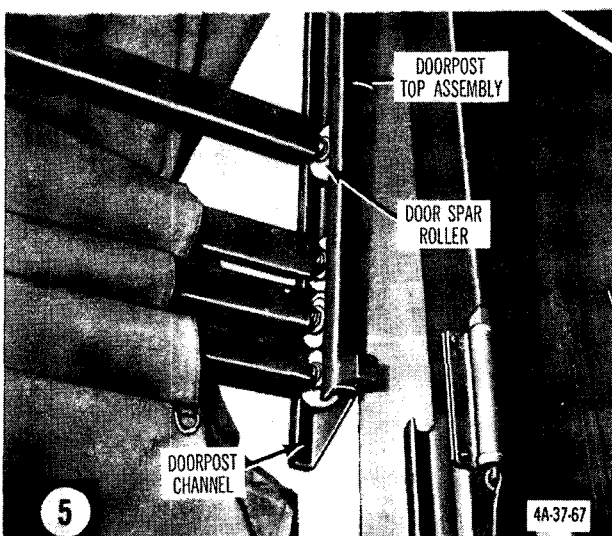
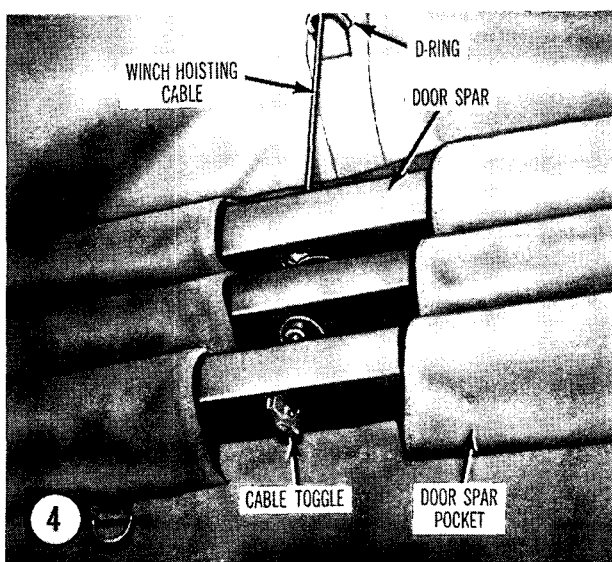
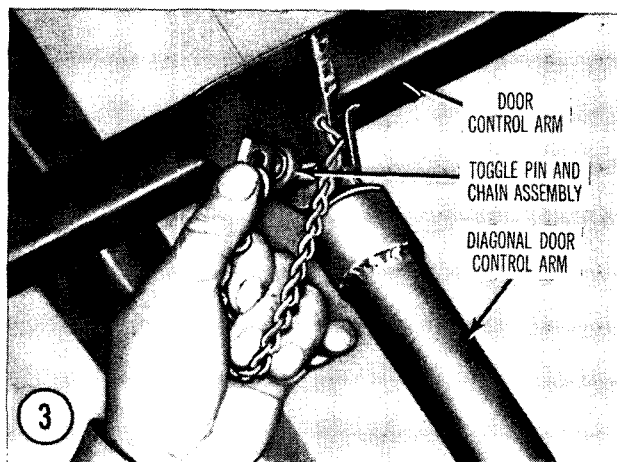


Figure 53—Continued.

(5) *Removing tent end sections.*

(a) Untie and remove transverse lines from eye loops and purlins, and remove securing straps from adjacent tent sections.

(b) Untie and remove hem ropes from J-hooks.

(c) Unhook arch hooks from end arch assembly.

(d) Remove tent end section from tent frame.

(6) *Removing outer fabric intermediate sections.*

(a) Close and secure windowpanes and blackout flaps.

(b) Untie and remove transverse lines from eye loops and purlins, and remove securing straps from adjacent tent section.

(c) Untie and remove hem ropes from J-hooks.

(d) Pull tent section from one side of tent so that section folds in 5-foot pleats accordion fashion. Do not fold window assembly.

(7) *Disassembling tent frame.*

(a) Remove steel tent pins from anchor assemblies of all arches.

(b) Unscrew hex bolts of either end arch from purlins, and lower end arch to the ground.

(c) Unscrew purlins from intermediate arches, and lower arches to the ground.

(d) Lower last end arch to the ground, and remove purlins.

(e) Remove door winch and transom chord assemblies from end arches.

(f) Remove eyebolt at each segment of each arch, and pull arch segments apart.

e. Folding.

(1) *Folding tent liner end sections* (fig 59).

(a) Lay out liner end section (1), arch pipes up, and fold end walls and vehicle door over arch pipes. Coil arch pipe rope and place it on top of liner section (2).

(b) Fold sides of section toward center, making 5-foot folds; and then fold one side of folded section over the other (3), and place folded liner section on its cover (4). Close and secure cover.

(2) *Folding tent liner intermediate sections* (fig 60).

(a) Lay out intermediate liner section, arch pipes up, and fold liner section in half. Coil center arch pipe rope and place it on top of liner section (1).

(b) Roll liner section from folded edge toward open ends, and place rolled section on its cover (2).

(c) Fold ends of cover over rolled liner section and tie, through the grommets, the two cover tie lines provided (3).

(d) Wrap sides of cover over rolled section and engage S-hooks in grommets. Tighten roll with hem rope and secure rope with a knot (3).

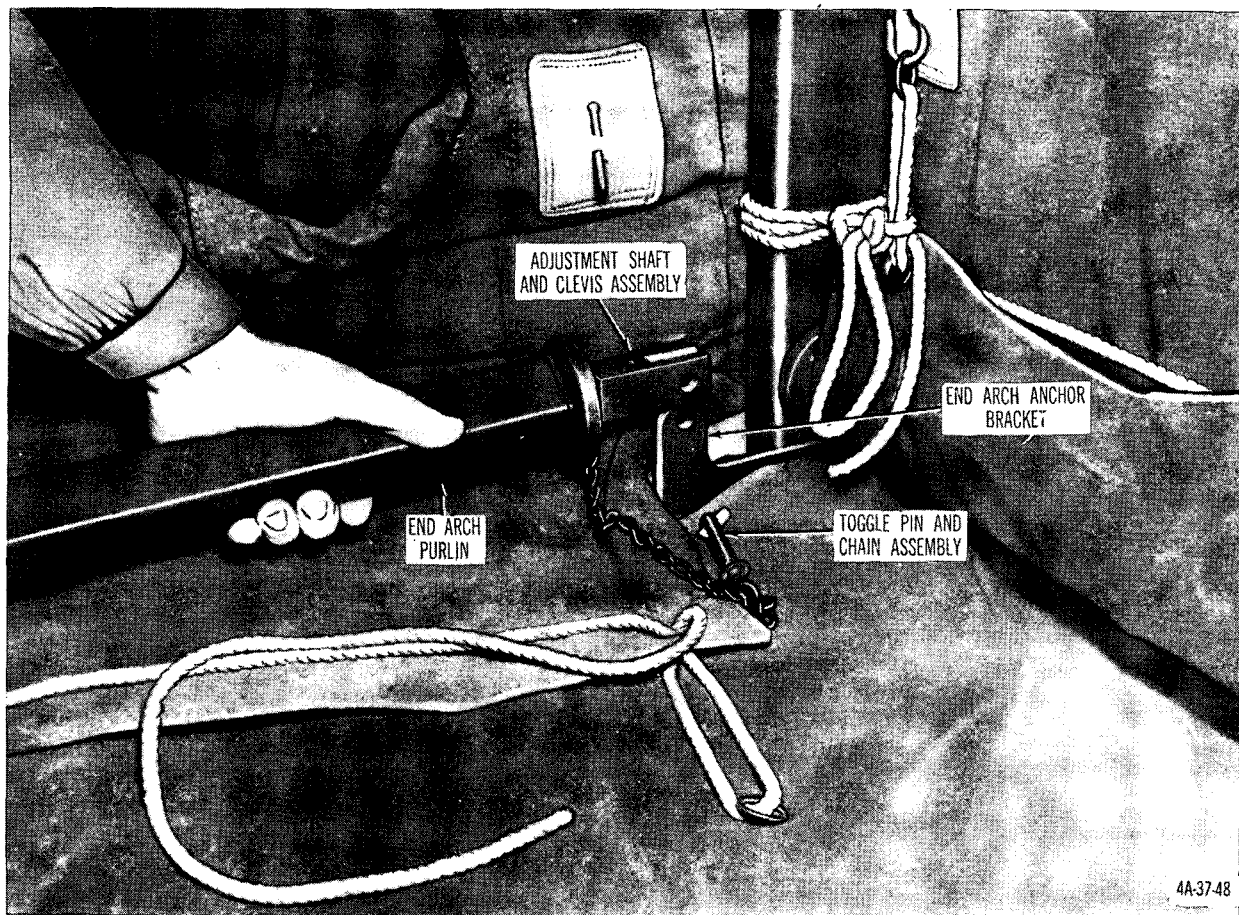


Figure 54. Installing end arch purlin of tent, frame-type, maintenance, medium light metal.

(3) *Folding outer fabric and sections* (fig 61).

(a) Lay out each tent end section, inside up (1), and fold vehicle door and end wall over end section (2).

(b) Fold sides of section toward center, making 5-foot folds (3). Fold one side of folded section over the other (3). Place end sections, one on top of the other, on cover (4). Close and secure cover (4).

(4) *Folding outer fabric intermediate sections* (fig 62).

(a) Refer to d (6) (d) above, fold ends of folded section toward each other, and place folded section on its cover.

(b) Close and secure cover.

14. Tent, Frame-Type, Insulated, Sectional

a. Use. The tent, frame-type, insulated, sectional, fire- and mildew-resistant, OD, complete with frame and floor (fig 63), is designed to be used as a general purpose tent, or as a personnel shelter in cold climates.

b. Description. The tent is rectangular shaped with an arched top. A door is provided

at each end of the tent. A vestibule is also provided and may be attached to either end of the tent.

(1) *Tabulated data.*

Height: tent, 8 feet; vestibule, 6 feet 6 inches.

Length: tent, 16 feet; vestibule, 3 feet 10 inches.

Width: tent, 16 feet; vestibule 3 feet 1 inch.

Weight: tent, with one vestibule, 2,410 pounds.

Cube: 259.5 cubic feet.

Floorspace: tent, 256 square feet; vestibule, 11 square feet.

(2) *Material.* The outside fabric of the tent is made of 14.5-ounce cotton duck, OD in color. The inside fabric is made of 14.5-ounce cotton duck, light green in color. Fiberglass insulation, 1 inch thick, is sandwiched between the two layers of fabric. The fabric is issued in blanket assemblies, two blanket end assemblies, and four blanket roof assemblies.

(3) *Doors.* The tent has two doors, one in each blanket end assembly of the tent. Each door is 6.5 feet high and 2 feet 9 inches wide.

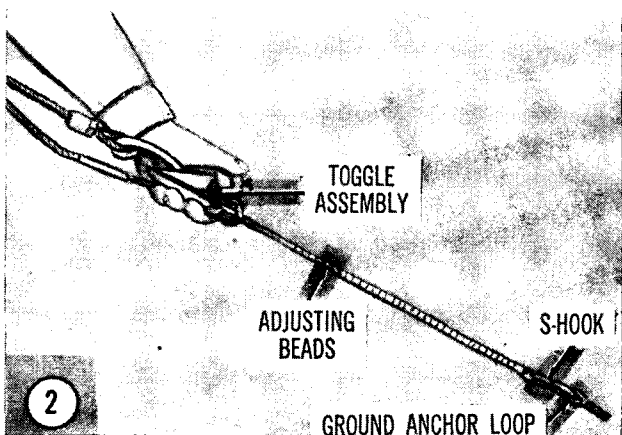
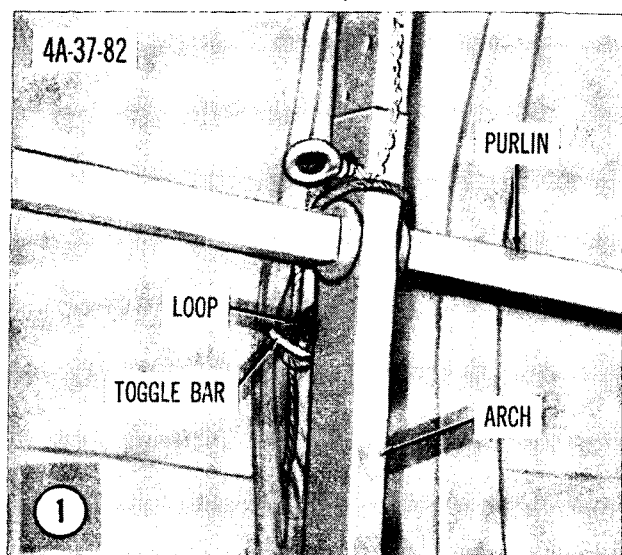


Figure 55. Securing tent, frame-type, maintenance, medium light metal, to ground.

The doors are made of plywood with fiberglass insulation. Each door has a door latch.

(4) *Transoms.* Above each tent door is a transom consisting of a wire reinforced windowpane, a stovepipe opening, a locking strap, and blackout flap with tie tapes. The window is hinged at the bottom and may be opened to one of four positions and held in place by the locking strap. When the window is closed, the locking strap is dropped over the window and locked in place. The stovepipe opening is a sheet metal plate with a round disk that may be removed so that a stovepipe may protrude through the plate. The blackout flap is located on the inside of the transom window and, when in use, is secured by tying tie tapes at the bottom; when not in use, it is rolled up and tied at the top with tie tapes.

(5) *Windows.* Each tent end blanket contains two window assemblies each consisting of a wood frame, wire reinforced plastic windowpanes, a brass window screen, and a blackout flap with tie tapes. The bottom window sash may be raised and locked in position with

a hook and eye. When the blackout flap is in use, it is secured at the bottom with tie tapes; when not in use, it is rolled up and tied at the top with tie tapes.

(6) *Heating.* The tent can be heated by one or two M-1941 tent stoves.

(7) *Ventilation.*

(a) Ventilation may be obtained by rolling up the window blackout flaps and opening the lower sash of the windows.

(b) Additional ventilation can be obtained by opening the transoms.

(c) When stoves are not being used, the stovepipe openings can be used as ventilators.

(d) The door can be opened for additional ventilation.

c. *Pitching.* Eight men can pitch the tent in approximately 49 minutes.

(1) *Assembling tent floor and tent frame.*

(a) Open packing cases with key provided on each case.

(b) Remove floor runners and place them on the pitching site (fig 64).

(c) Place floor units (packing case tops and bottoms) on floor runners so that blanket fastening holes will be on the outside of the assembled floor, and hook floor units together (fig 64).

(d) Unfold each arch and lock the hinged joints with the attached pins.

(e) Place assembled arches over each end of the floor and at each junction of floor sections. Slide arch clips over wingnut bolts and tighten wingnuts (fig 65).

(f) Install roof purlins between arches by inserting purlin tongues into purlin slots on the arches (fig 66).

(g) Drive tent pins through chain foot-stops located at the ends of each arch (fig 65).

(2) *Attaching end blankets to tent frame.*

(a) Place fixed connectors at bottom of door frame in slots at end of tent floor.

(b) Slide adjustable door connectors at top of door frame over bolts at top of end arch, and tighten connector wingnuts (fig 67).

(c) Pull blanket hem over end arch, and attach blanket fabric to end arch with buckle chapes (fig 67).

(d) Pull blanket hem rope tight, and tie hem rope ends to collars located at ends of arch and facing sides of tent floor (fig 68).

(e) Fasten chape hooks at bottom edges of end blanket to blanket fastening holes in tent floor. Tighten hook chapes.

(f) Attach end purlins between end arch and door frame. Tie end blanket to purlins (fig 67).

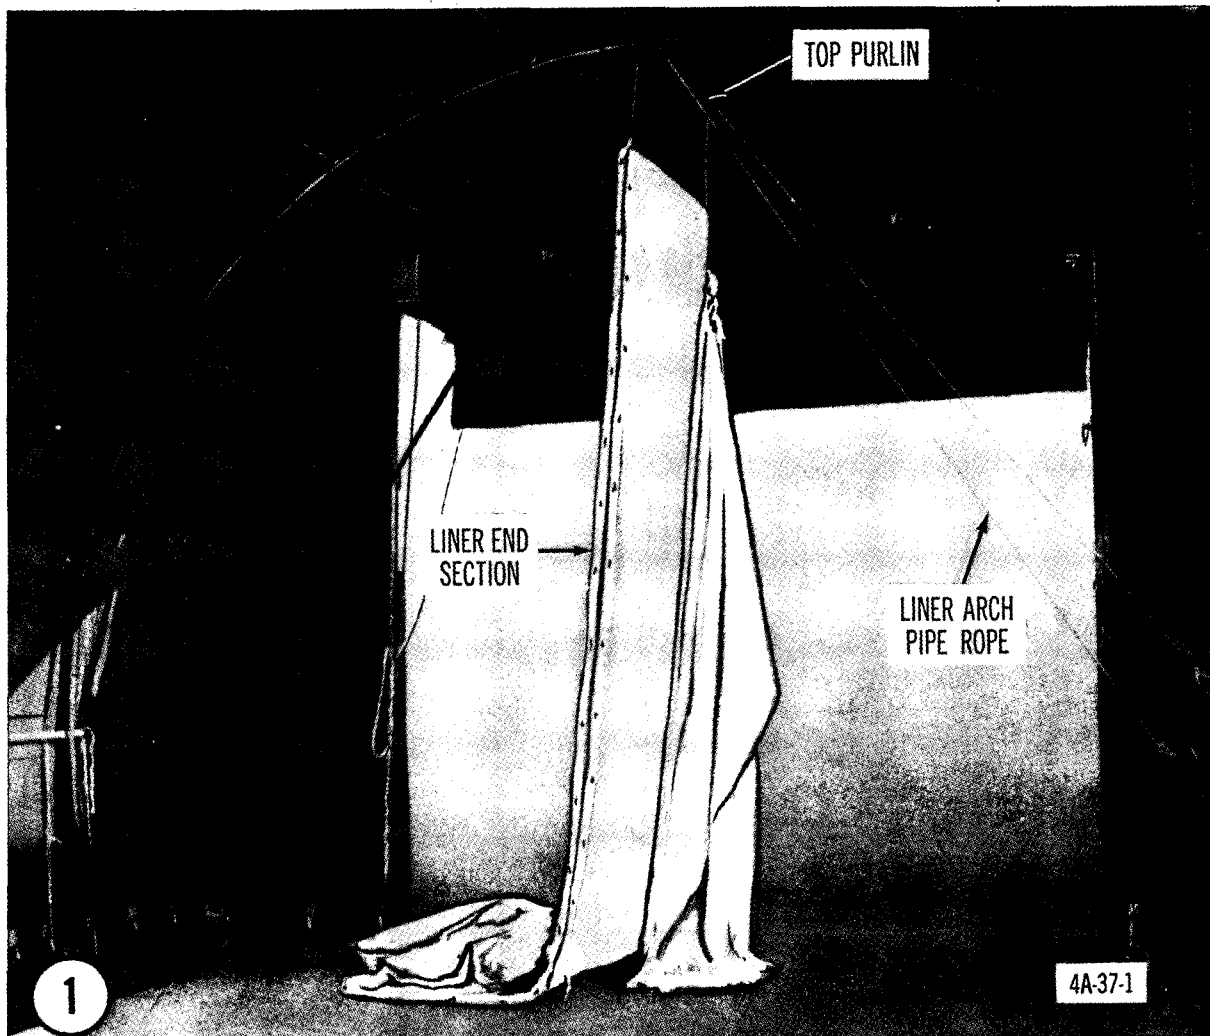


Figure 56. Attaching tent liner to inside of tent, frame-type, maintenance, medium light metal.

(g) Insert tent pins through chain foot-stops at bottom of door frames. Drive tent pins into the ground.

(3) *Attaching roof blankets and roof guy bands* (fig 69).

(a) Place a roof blanket over tent frame between an end arch and an intermediate arch, and tie inside of blanket to top purlin of frame (1).

(b) Fasten chape hooks at bottom edges of intermediate blanket to blanket fastening holes in tent floor (3).

(c) Place blanket hems over end and intermediate arches, pull hem ropes tight, and secure ends of hem ropes to collars located at ends of arches (2).

(d) Tighten hook chapes at bottom edges of intermediate blanket.

(e) Attach remaining intermediate blankets as described in (a) through (d) above.

(f) Place roof guy bands over intermediate archs, insert chape hooks in nearest blan-

ket fastening holes, and tighten hook chapes (3).

(4) *Securing tent to ground* (fig 70).

(a) Drive 10 tent pins into ground as indicated.

(b) Fasten roof guy band guy lines to tent pins, and tighten guy lines by adjusting tent slips.

(c) Attach end guy-line snap fasteners to eyebolts on door frame. Attach other end of guy lines to tent pins, and tighten guy lines by adjusting tent slips.

(5) *Attaching electrical outlet and switch assembly* (fig 71).

(a) Attach switch bracket to bolt in door-frame above latch keeper, and tighten wing-nut.

(b) Attach cord clip to upper bolt at left of transom.

(c) Extend cord from transom to roof, and attach cord and light sockets at desired locations with cord and outlet hangers.

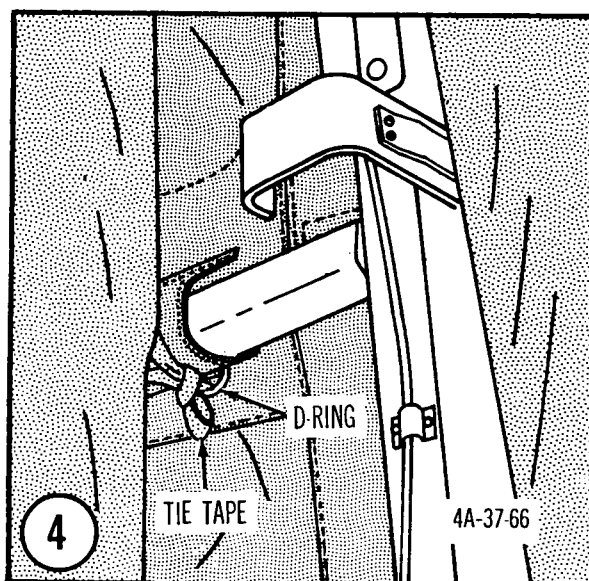
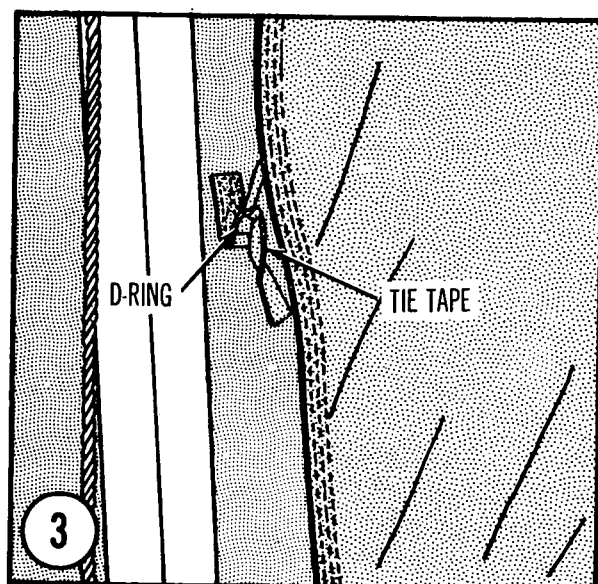
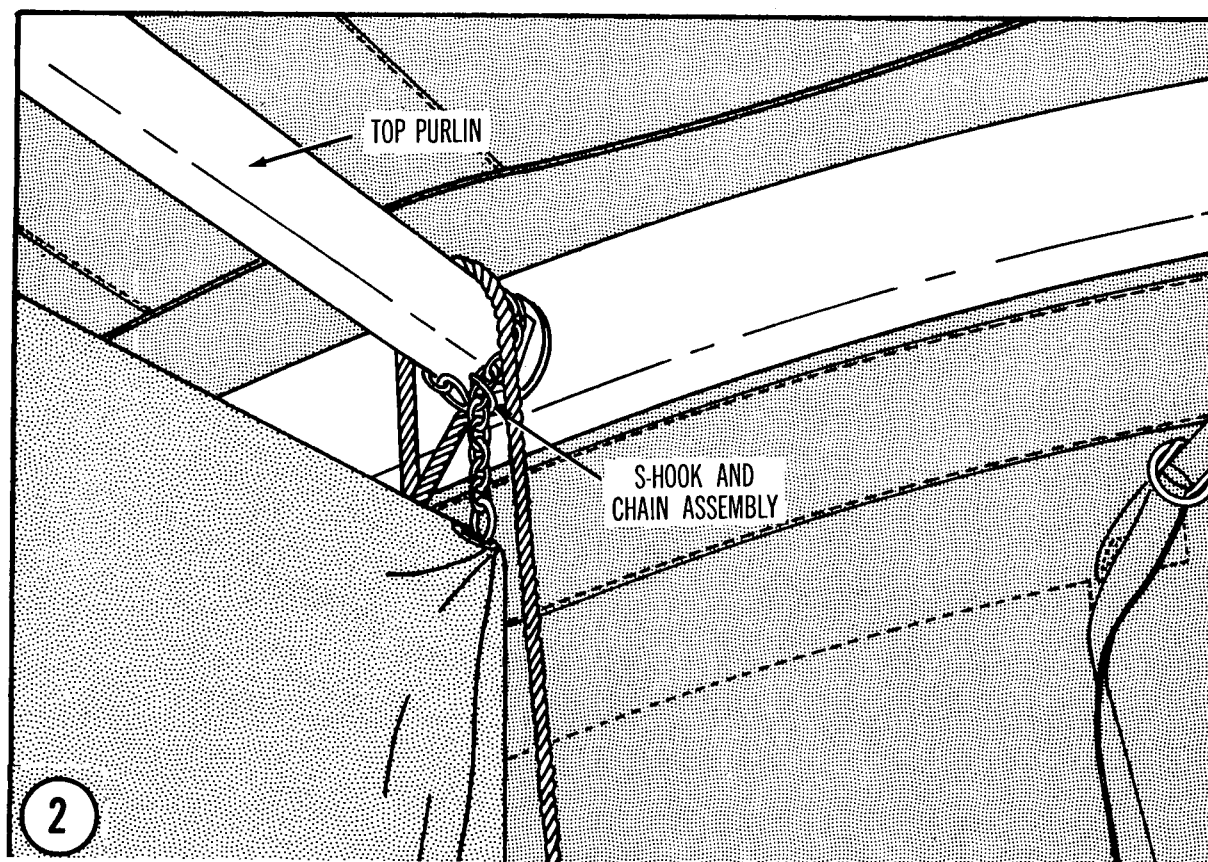


Figure 56—Continued.

(d) Attach switch assembly to suitable power source.

(6) *Attaching vestibule* (Fig 72).

(a) Place vestibule floor section on the ground and fit it beneath the doorsill of the tent so that blanket fastening holes will face away from the tent (1).

(b) Stand vestibule side panel and door panel on vestibule floor so that side panel is to the left and door panel is to the right when

facing the end of the tent. Loosen retainer strips on sides of tent doorframe, slip panel angle iron strips behind retainer strips and tighten retainer strip wingnuts.

(c) Install vestibule end purlin between vestibule panels by inserting purlin tongues into purlin slots on vestibule panels (1).

(d) Install vestibule tie angle between vestibule panels by sliding tie angle bolt slots

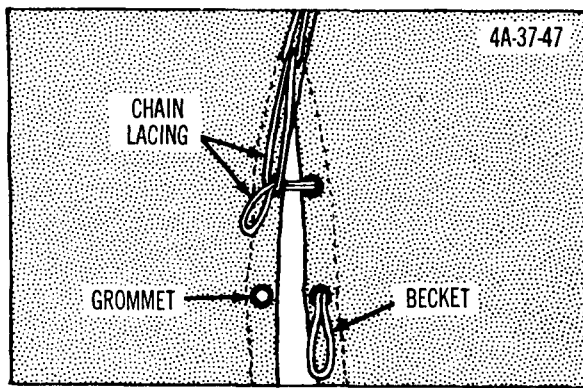


Figure 57. Becket lacing and grommets.

over bolts at bottom of panels. Tighten wingnuts to hold tie angle in place (1).

(e) Install vestibule end cover retainer by slipping slots in retainer gussets (2) over bolts in side panel gusset connector brackets (1). Tighten wingnuts to hold end cover retainer in place.

(f) Install vestibule top purlin by inserting purlin tongues into purlin slots in middle of shelter door lintel and end cover retainer (2).

(g) Fasten chape hooks of vestibule end

cover in blanket fastening holes in vestibule panels and floor (1). Tighten hook chapes.

(h) Place vestibule top cover over vestibule top purlin so that hems overlap front and rear edges of vestibule, tie ends of hem ropes to line cleats located on side panels (1), insert chape hooks in blanket fastening holes on side panels (1), and tighten hook chapes.

d. Striking.

(1) Vestibule.

(a) Remove vestibule top cover.

(b) Remove end cover from vestibule frame.

(c) Remove top purlin from end cover retainer and door lintel.

(d) Remove end purlin from vestibule panels.

(e) Loosen wingnuts and remove end cover retainer from bolts in panel gusset connector brackets.

(f) Remove tie angle from vestibule floor.

(g) Loosen retainer strip wingnuts and remove vestibule side and door panels.

(h) Move vestibule floor away from the tent.

(2) Removing electrical outlet and switch assembly.

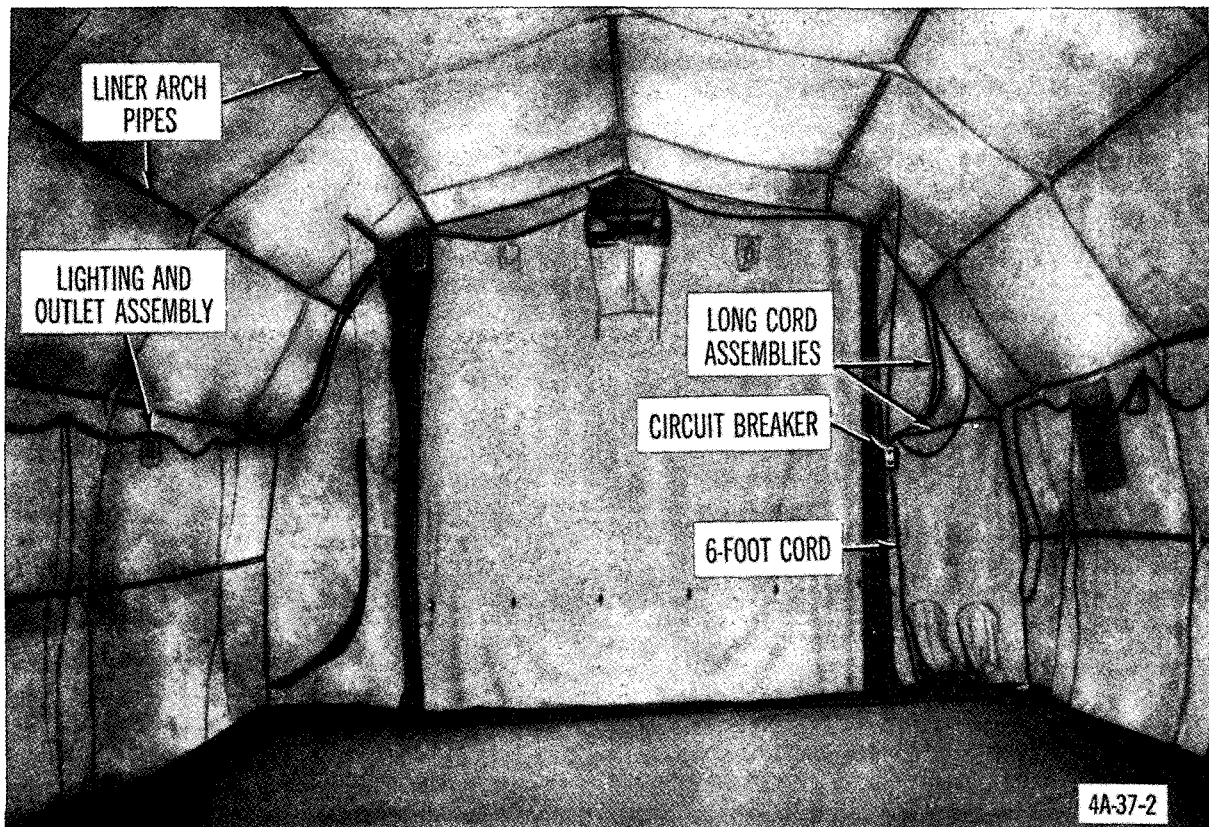


Figure 58. Installing wiring harness assembly in tent, frame-type, maintenance, medium light metal.

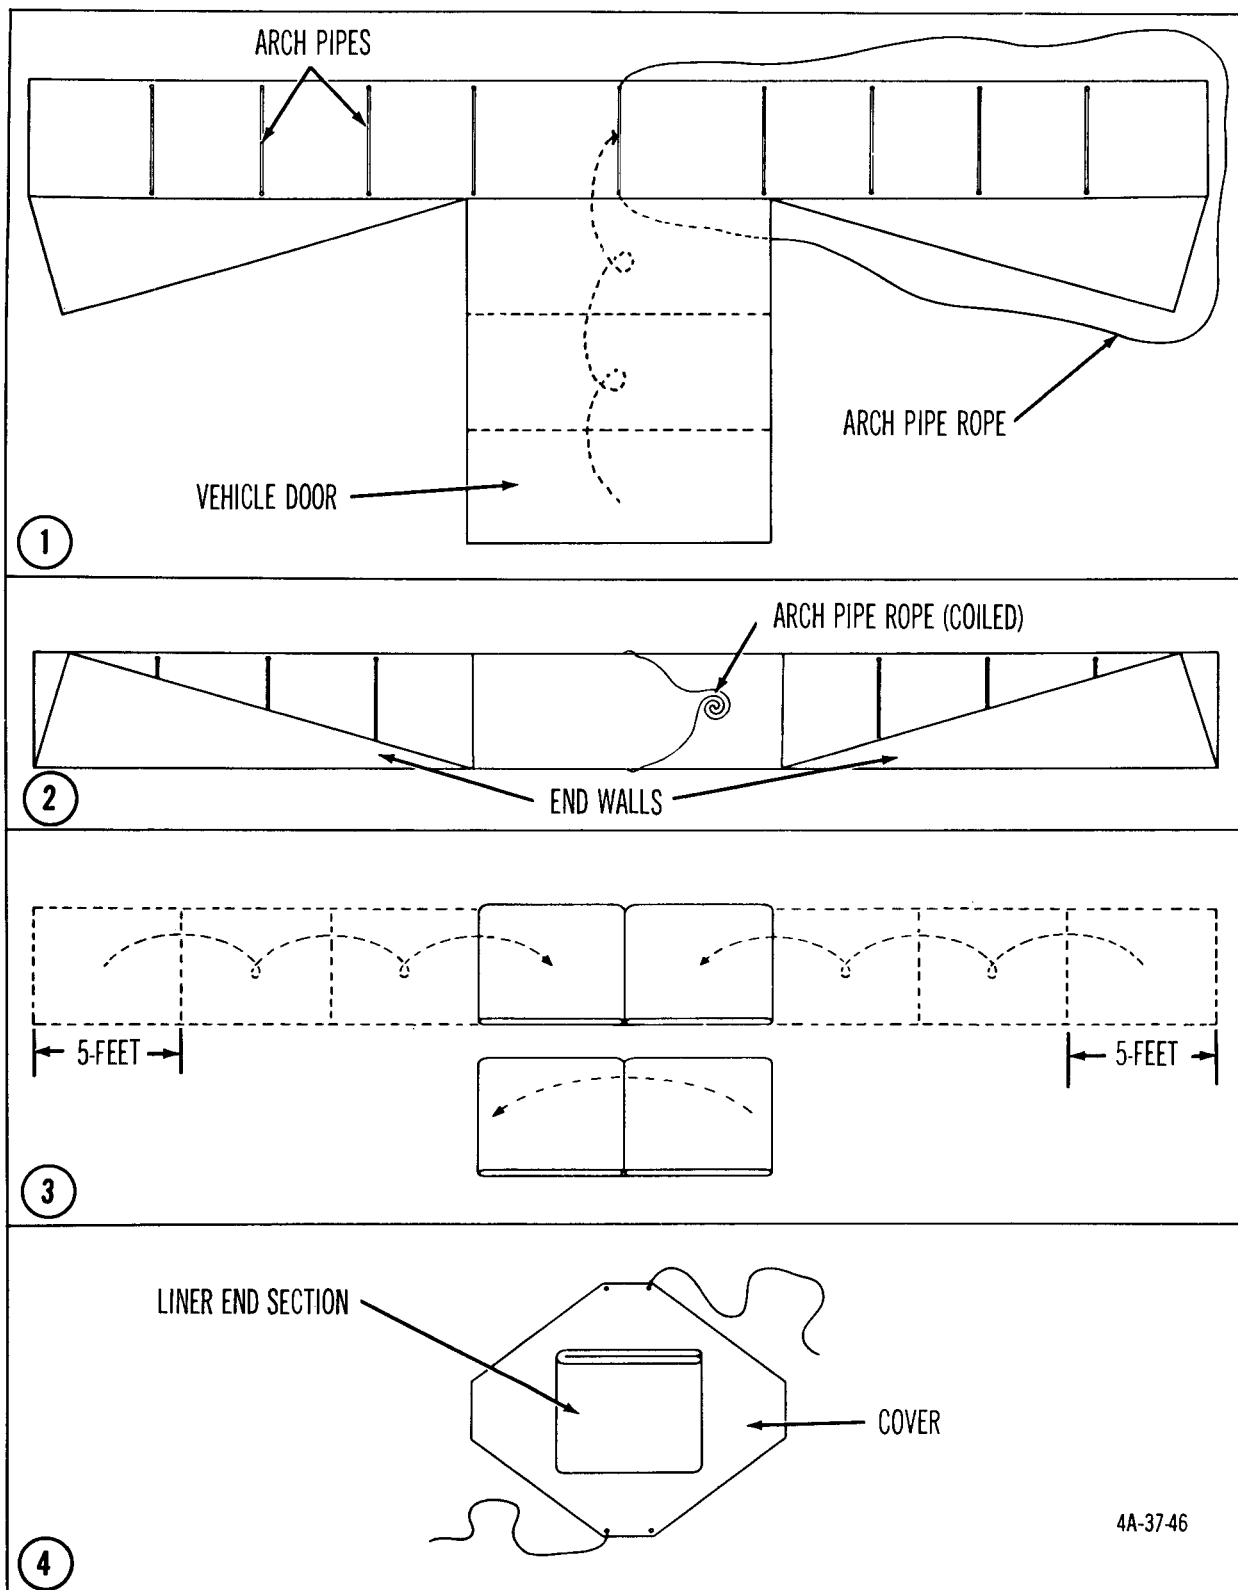


Figure 59. Folding and packing liner end section of tent, frame-type, maintenance, medium light metal.

(a) Disconnect switch assembly from power source.

(b) Unhook cord and outlet hangers from purlins, loosen wingnut and remove cord clip from end arch, and loosen wingnut and remove switch bracket from doorframe.

(3) *Removing end and roof blankets.*

(a) Loosen guy lines and remove lines from tent pins. Remove end guy lines from eyebolts on doorframes. Remove unused tent pins.

(b) Loosen guy band hook chapes, re-

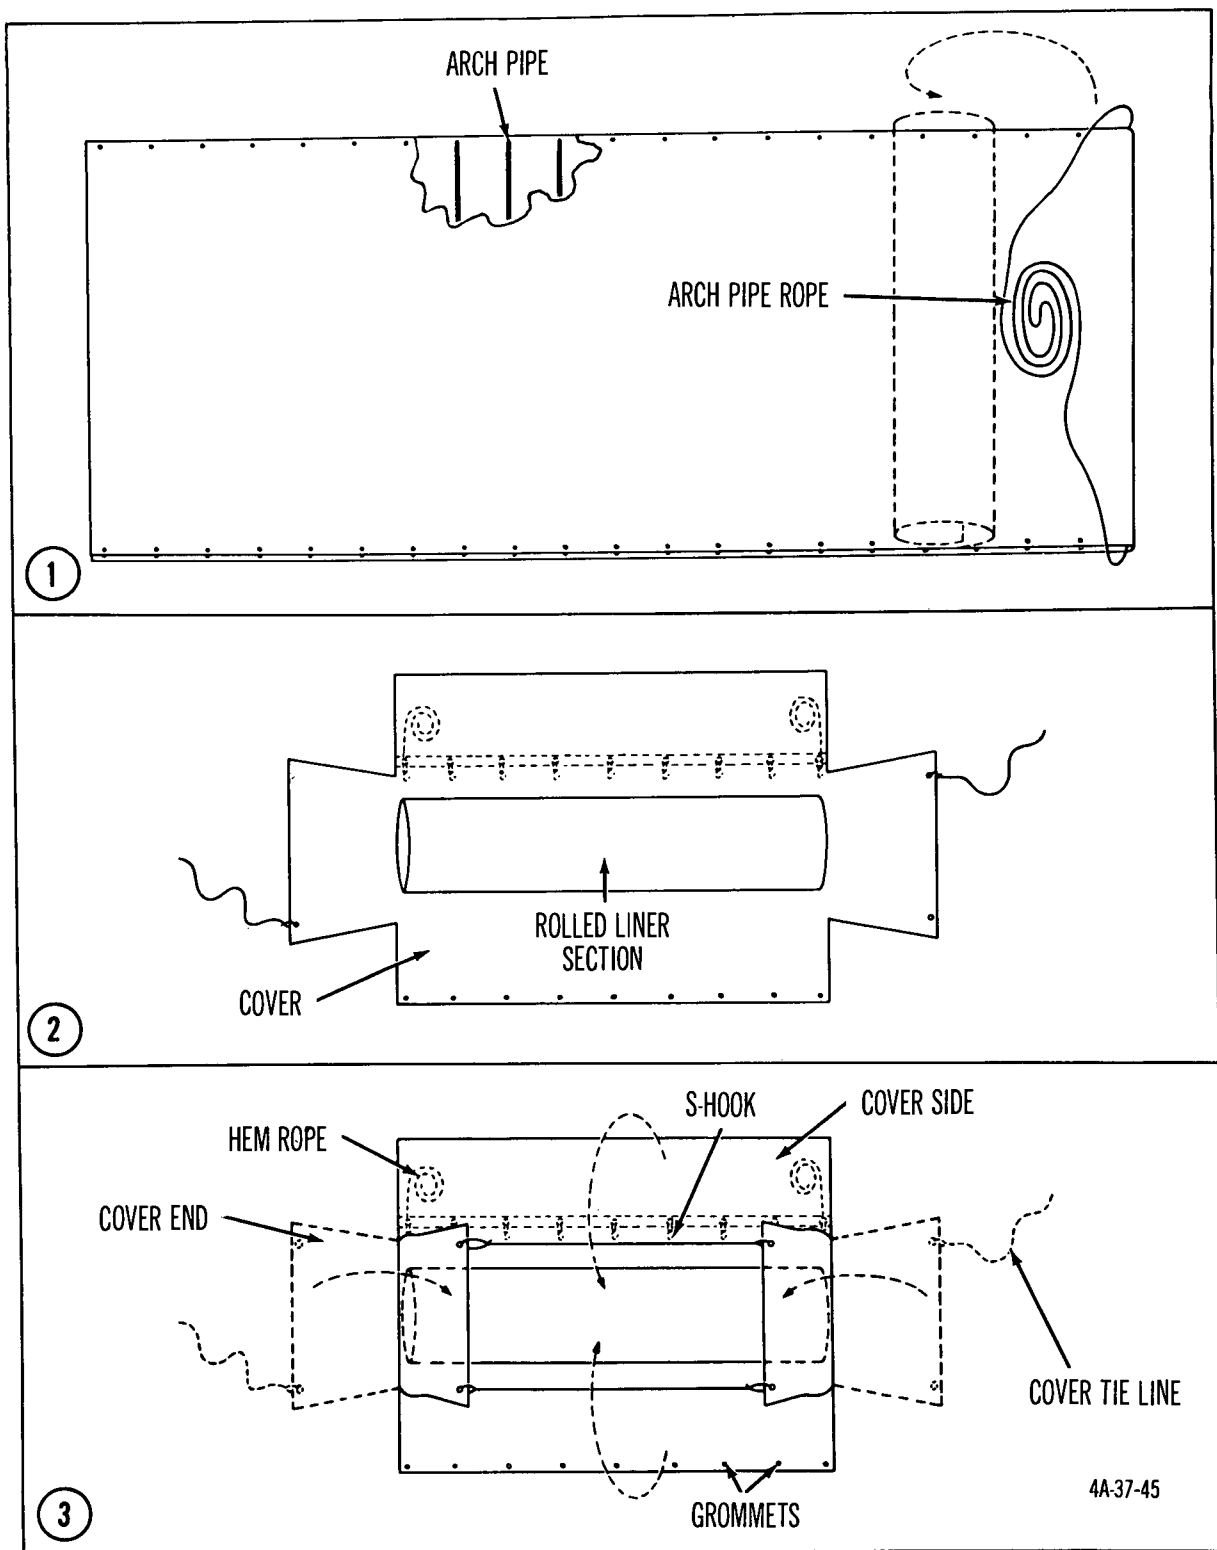


Figure 60. Rolling and packing liner intermediate section of tent, frame-type, maintenance, medium light metal.

move chape hooks from tent floor, and remove guy bands.

(c) Loosen roof blanket hook chapes, untie and remove roof blanket hem ropes from collars, remove chape hooks from tent floor, and remove roof blankets from tent frame.

(d) Remove end blanket hem ropes from collars, loosen hook chapes, and remove chape hooks from tent floor.

(e) Remove tent pins from chain foot-stops at bottom of doorframes.

(f) Untie end blankets from end purlins,

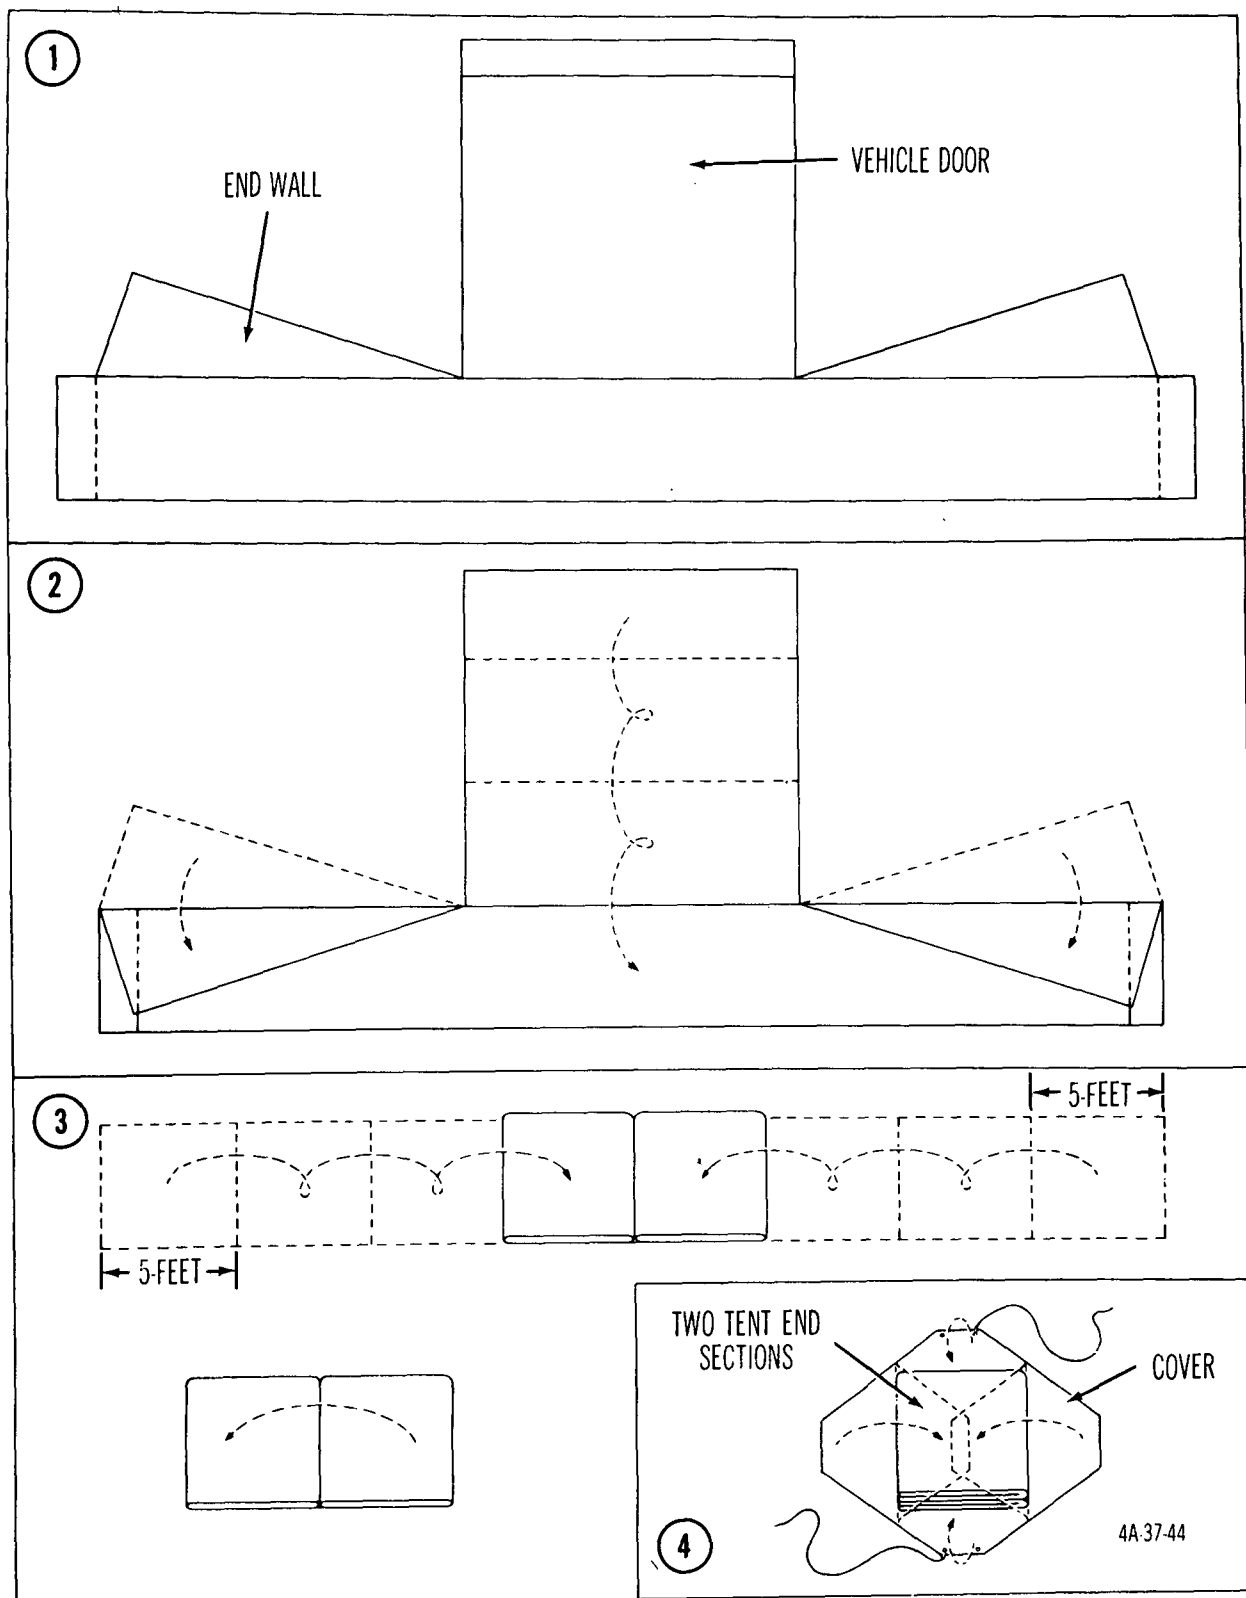


Figure 61. Folding and packing tent end sections of tent, frame-type, maintenance, medium light metal.

and remove purlins from end arches and door-frames.

(g) Unbuckle the buckle chapes from the end arches; loosen wingnuts, and remove the adjustable door connectors at top of door-frames from bolts on end arches.

(h) Lift end blanket assemblies, and remove fixed connectors at bottom of doorframes from slots in tent floor. Remove blanket assemblies from tent.

(4) *Disassembling tent frame and tent floor.*

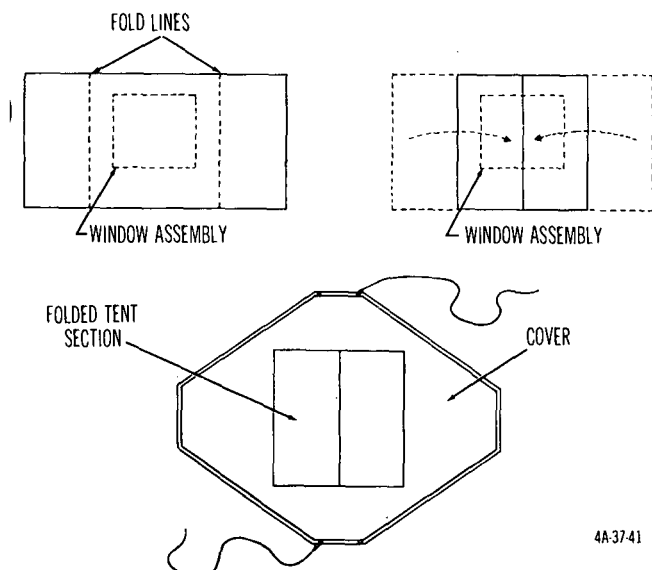


Figure 62. Folding and packing tent intermediate section of tent, frame-type, maintenance, medium light metal.

- (a) Remove tent pins from chain foot-stops at ends of each arch.
- (b) Remove purlins from arches.
- (c) Loosen wingnuts from arch clips, and remove arches from tent floor.
- (d) Remove pins from hinged joints on arches, and fold all arches.
- (e) Separate floor units by removing the floor locking hooks.

e. Packing and Crating Tent.

(1) Use the floor unit marked "end section complete" as a crate bottom. Fold and place an end blanket assembly in the crate bottom with the window assembly facing up. Place the two end purlins and four tent pins on top of the end blanket. Place an unmarked floor unit on top of the crate bottom, and lock the two floor units together with the locking tool. Pack and crate the other end blanket assembly in the same manner.

(2) Use floor unit marked "intermediate section" as a crate bottom. Fold and place two roof blankets in the crate bottom. Place 8 tent pins, 18 arch purlins, 2 guy band assemblies, and 8 floor runners on top of the roof blankets. Place an unmarked floor unit on top of the


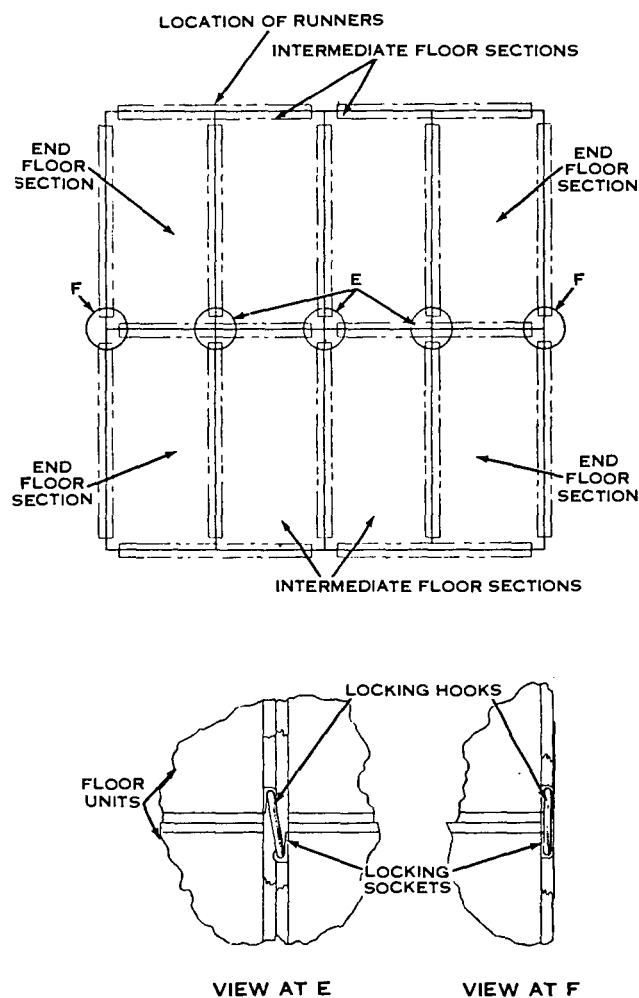


Figure 64. Layout and connections of floor for tent, frame-type, insulated, sectional.

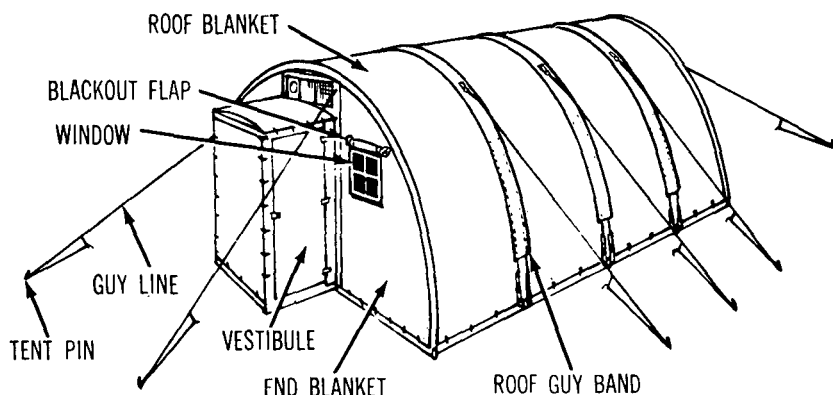

4A-37-40

Figure 63. Tent, frame-type, insulated, sectional.

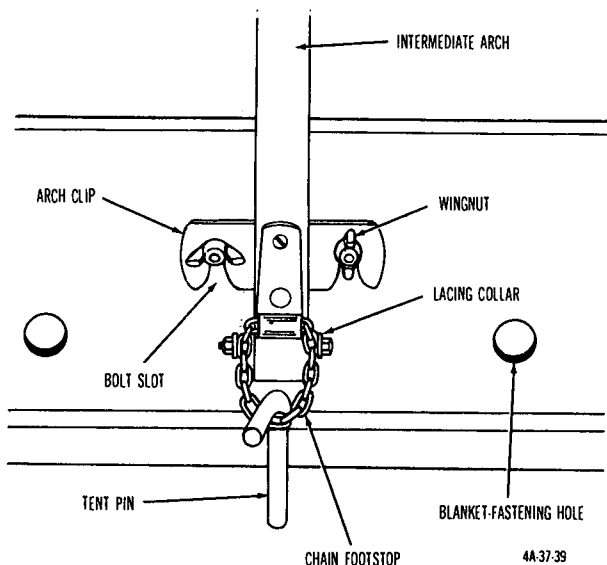


Figure 65. Attaching arches to floor of tent, frame-type, insulated, sectional.

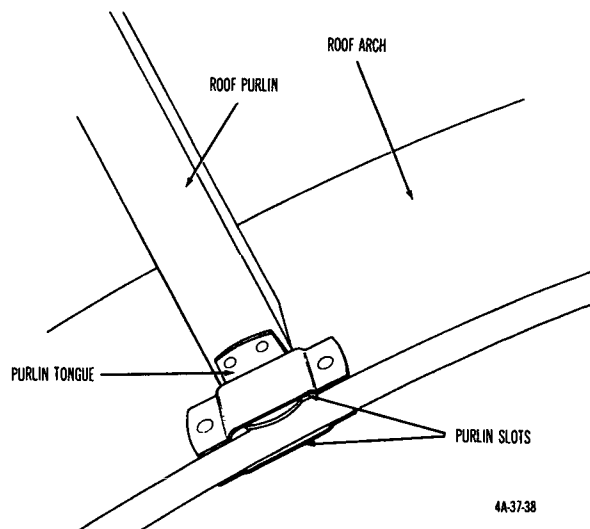


Figure 66. Installing roof purlins in tent, frame-type, insulated, sectional.

crate bottom, and lock the two floor units together with the locking tool. Pack and crate the other two roof blankets in the same manner.

(3) Place the vestibule door panel on top of the side panel. Place the vestibule end cover and top cover on the door panel. Place the tie

angle, electrical outlet and switch assembly, end purlin, top purlin, and end cover retainer on the top cover. Place vestibule floor over the end cover, and band vestibule components together.

(4) Band each folded arch at the ends and in the middle to prevent it from unfolding during transit.

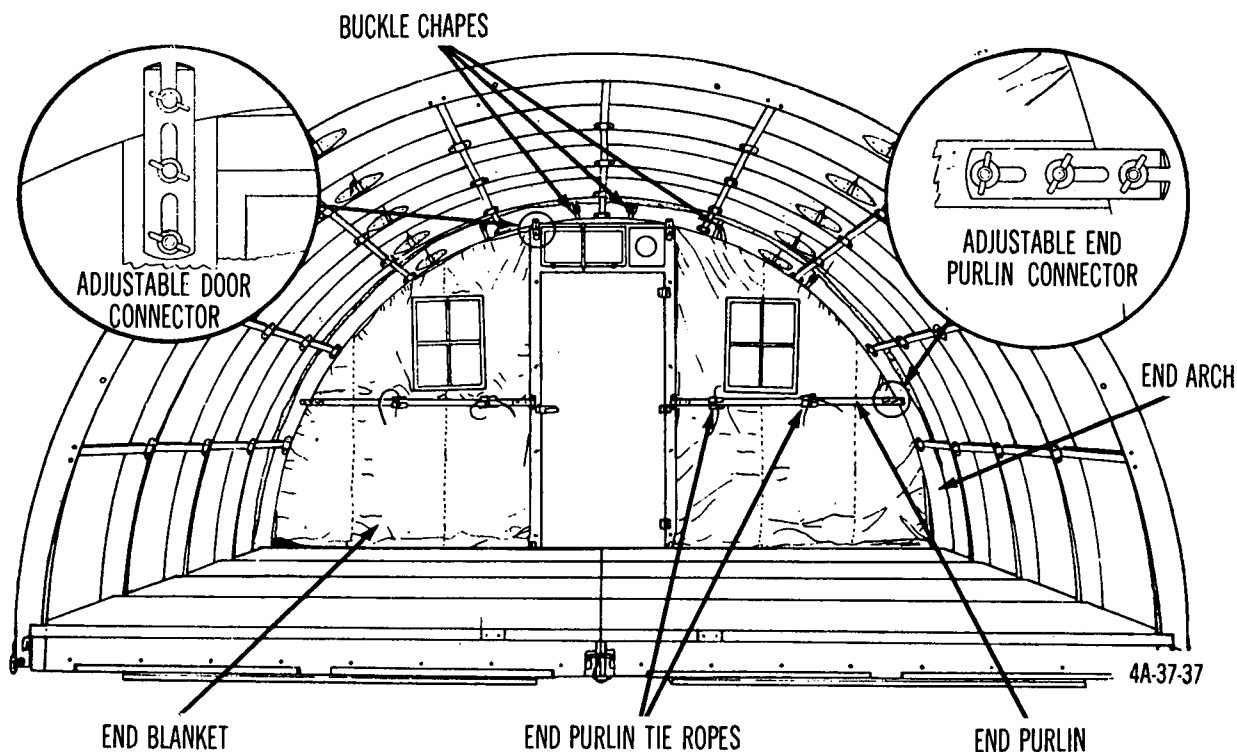


Figure 67. Attaching end blanket to frame of tent, frame-type, insulated, sectional (inside view).

Section II. SPECIAL PURPOSE TENTS

15. Tent, Maintenance, Shelter

a. *Use.* The tent, maintenance shelter, FMWWR, OD, complete with frame and pins (fig 73), is designed to furnish shelter for tank and truck maintenance crews and their equipment.

b. *Description.* The tent is an A-shaped, rectangular, square-end tent, and is erected over a box steel frame.

(1) *Tabulated data.*

Height: 13 feet 11-7/16 inches at the ridge; sidewall height, 5 feet 8-5/8 inches.

Length: 26 feet 9-1/2 inches.

Width: 18 feet 2-1/4 inches.

Weight: tent, 400 pounds; frame, 755 pounds.

Cube: 84 cubic feet.

Floorspace: 486.8 square feet.

(2) *Materials.* The top, sidewalls, and all reinforcements are made of 9.85-ounce duck. The sod cloth, which is 29-1/2 inches wide, is also made of 9.85-ounce duck. There are six ground cloths, measuring 4 by 12 feet each, provided with each tent to form a floor. The ground cloths are made of No. 6 duck.

(3) *Ventilation.* The tent is equipped with two canvas ventilators, one at each end of the tent near the ridge.

(4) *Heating.* The tent can be heated by an external gasoline tent heater. There are four heater duct sleeves. Two duct sleeves are located at the rear bottom corner of each of the two sides of the tent. When the duct sleeves are not in use, they can be covered by canvas heater duct flaps.

(5) *Cover.* The tent is provided with a cover for use when it is in storage or is being transported.

c. *Pitching.* The tent, including the steel frame, can be pitched by 10 men in approximately 75 minutes.

(1) *Attaching truss braces to truss assemblies* (1, fig 74). Lay out the three truss and wall post assemblies flat on the ground, with wall posts bent inward. Attach a truss brace to the support brackets on sides of each truss. At this point, each truss and wall post assembly will have an A-shaped appearance.

(2) *Attaching ridge assembly to truss assemblies* (2, fig 74). Extend ridge assembly, opened out, over top of truss and wall post assemblies. Raise trusses at a slight angle and attach to ridge assembly by placing spindles of truss and wall post assemblies through holes in ridge assembly.

(3) *Attaching tent to top of tent frame* (3, fig 74). Spread tent over top of frame, with truss and wall post assemblies of frame at an angle. Place spindles at top of frame through grommets in tent ridge. Attach guy lines to spindles at front and rear ridge of tent.


(4) *Attaching ridge knee braces* (4, fig 74). Push frame into an upright position, with wall posts still bent inward. At the same time, place bolts in center of each truss brace into hole at end of each ridge knee brace.

(5) *Rolling and tying tent walls* (5, fig 74). Roll up and tie side and front walls of tent. Close upper portion of door openings by lacing a door opening lacing line through grommets on sides of each door opening.

(6) *Raising and securing tent frame* (6, fig 74).

(a) With two men at each of the three wall posts, raise one side of tent frame, making sure bolt on each truss assembly is securely inserted in slot of hinge plate on wall post. Then raise other side and lock bolts to hinge plates.


(b) Attach eave struts into position by fastening hangers at ends of eave struts around hanger brackets of truss and wall post assemblies.

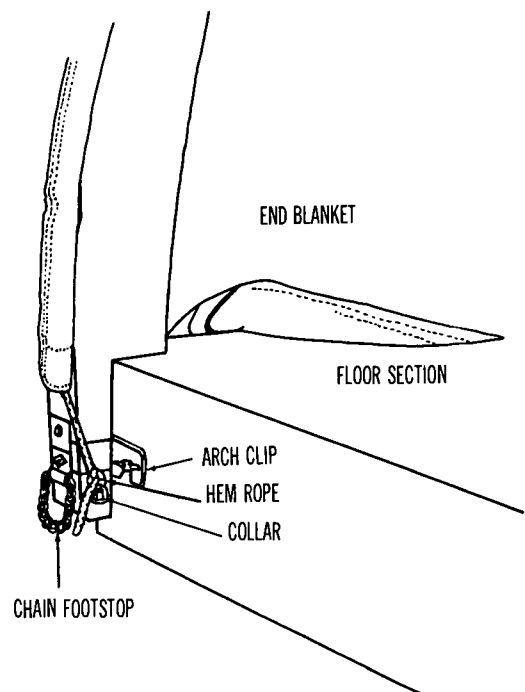


4A-37-18

Figure 68. End blanket tied to collar (tent frame-type, insulated, sectional).

①

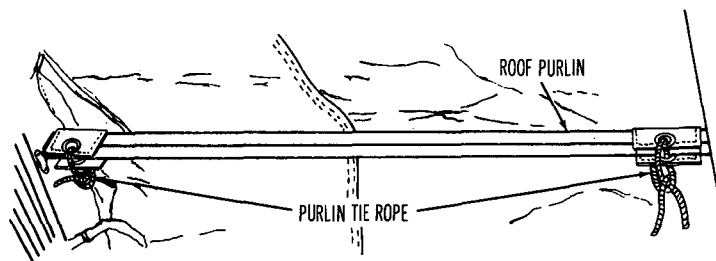

②

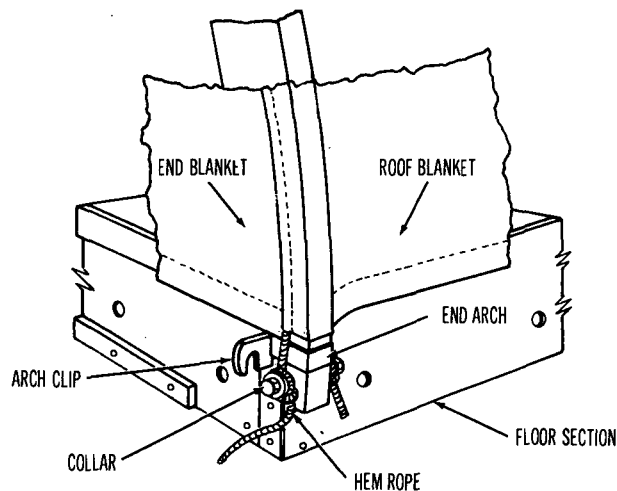

③


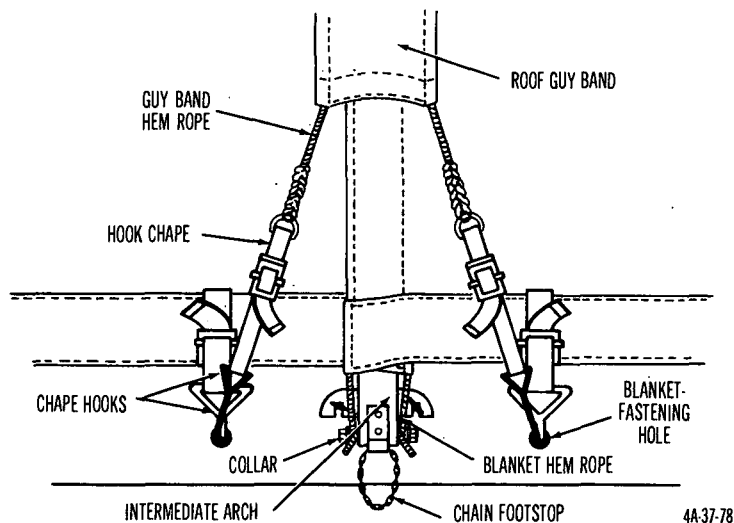


Figure 69. Attaching roof blankets and roof guy bands to frame of tent, frame-type, insulated, sectional.

(c) Fasten side knee braces of eave struts to wall posts of truss and wall post assemblies by placing bolt on angle clip of each wall post through hole at end of each side knee brace and tightening nut.

(7) Placing ground cloths (7, fig 74). Spread ground cloths, three wide and two deep.

(8) Securing tent walls and tent wall corners (8, fig 74).

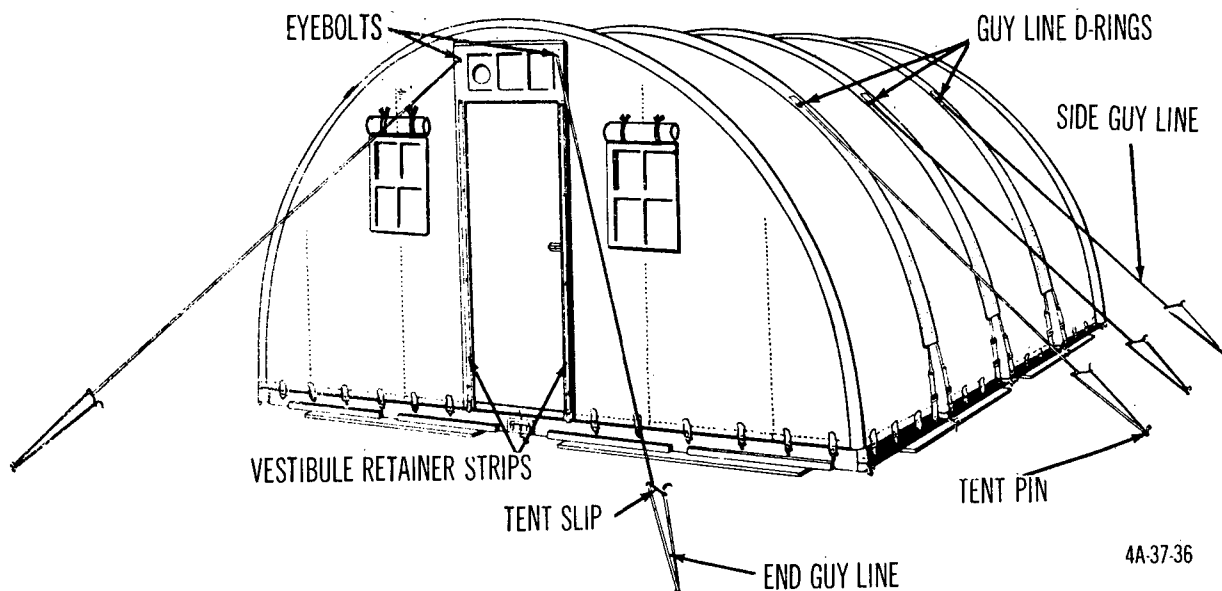

4A-37-36

Figure 70. Securing tent, frame-type, insulated, sectional, to the ground.

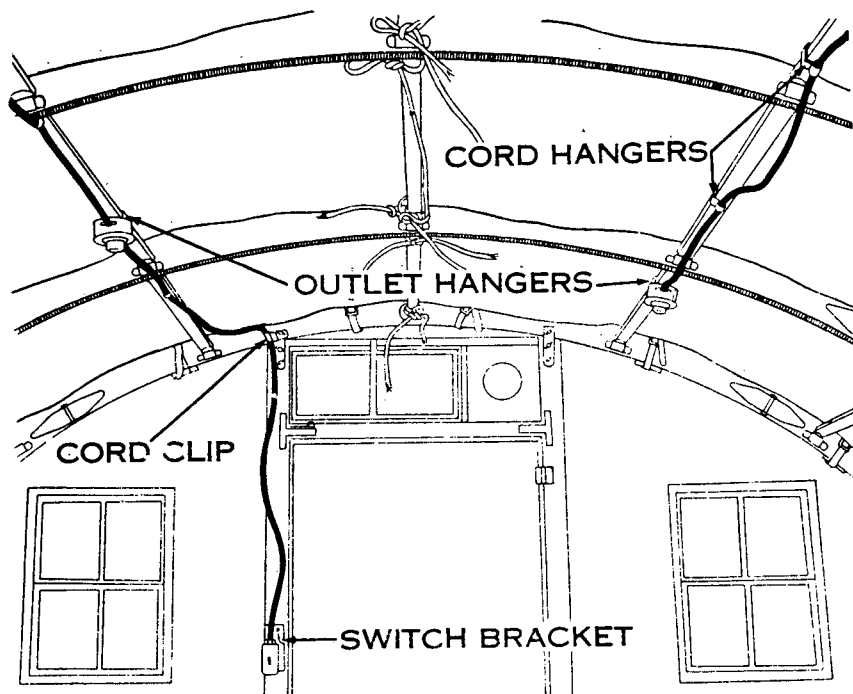


Figure 71. Attaching electrical outlet and switch assembly to the inside of tent, frame-type, insulated, sectional.

(a) Untie and roll down side and front walls of tent.

(b) Close corners of tent by lacing a side-wall lacing line through grommets on each side of wall corners.

(c) Drive 16-inch pins and attach footstops.

(9) *Securing eave lines and guy lines* (9, fig 74). Stake out eave and guy lines with 24-inch pins. Adjust and tighten lines.

16. Tent, Frame-Type, Expandable, 16 FT by 16 FT.

a. Use. The Tent, Frame-Type, Expandable, 16 ft by 16 ft is designed for use by airmobile divisions. It provides a highly mobile tent suitable for use as a division tactical (fig 75) operations and plan center, as a communication center, and as a briefing tent.

b. Description. The tent consists of an outer fabric, or skin, with attached ridge and eave guy lines and footstops, and a sectionalized

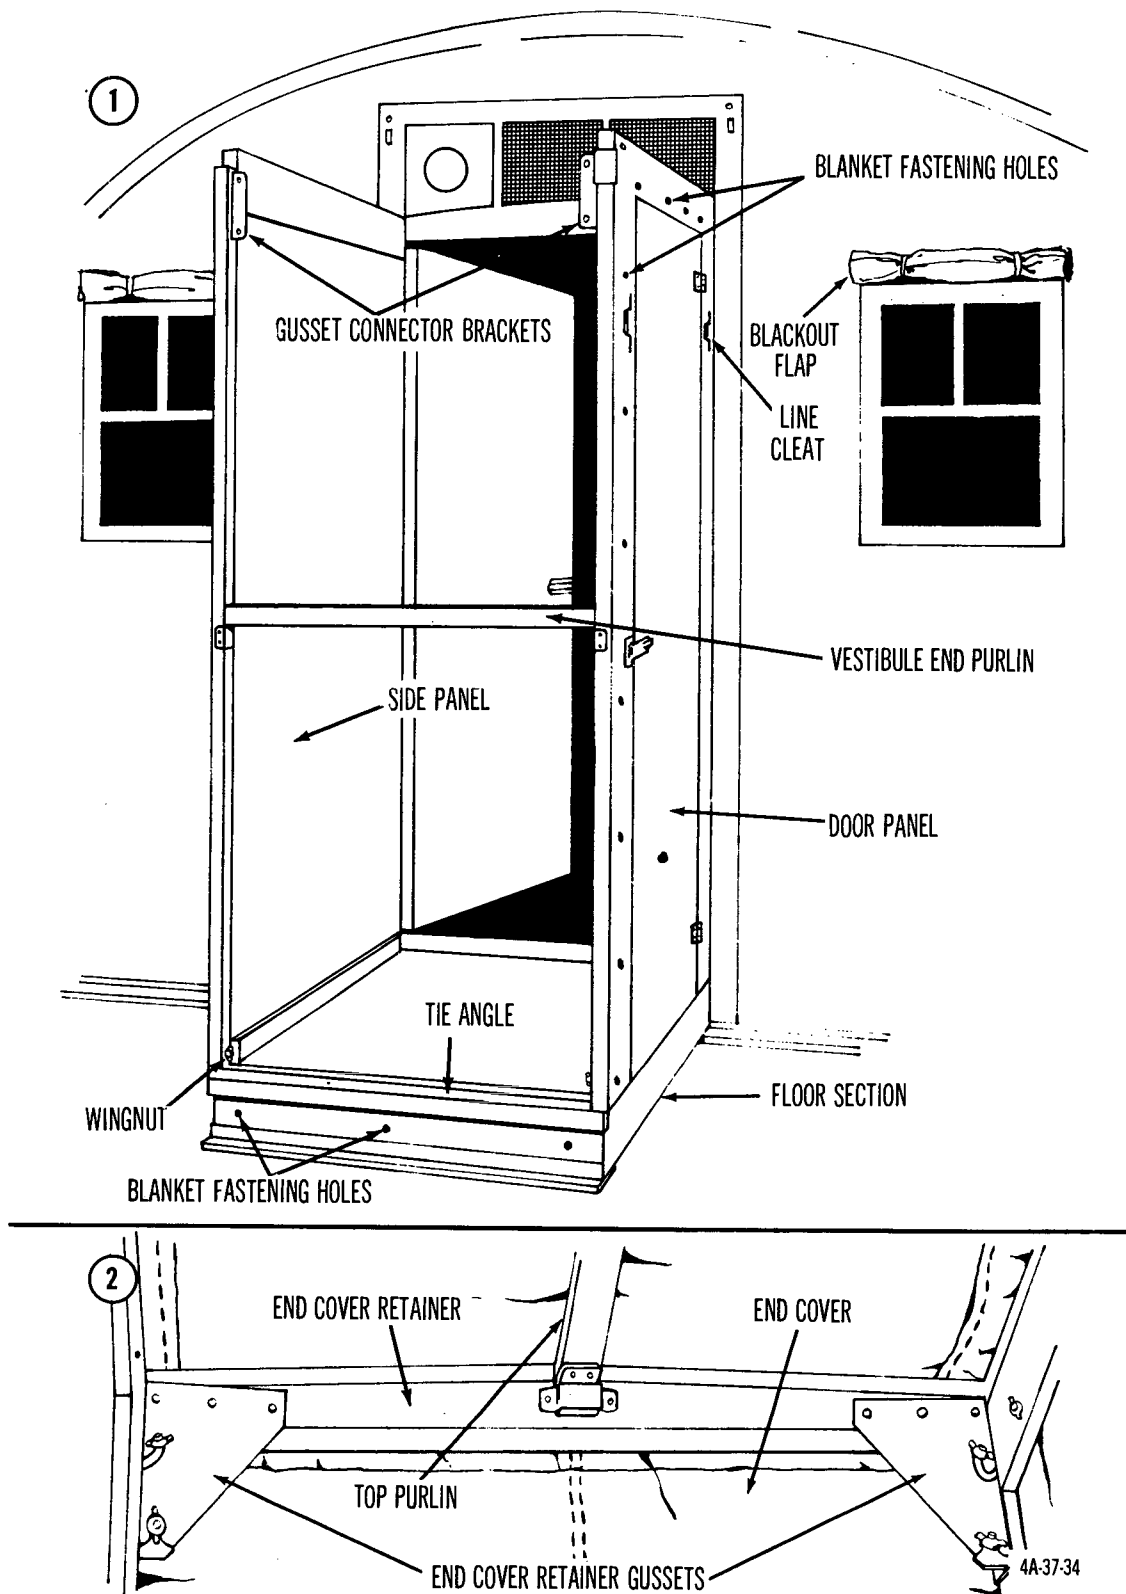


Figure 72. Attaching vestibule to tent, frame-type, insulated, sectional.

aluminum frame assembly. The tent can be heated by a 150,000 BTU portable heater or M-1941 tent stove.

(1) *Tabulated data.*

Height: 8 feet 6 inches at the ridge;
6 feet at the sidewall.


Length: 16 feet.

Width: 16 feet.

Weight: frame, 221 pounds; tent 146 pounds.

Cube: 60 cubic feet.

Floorspace: 256 square feet.

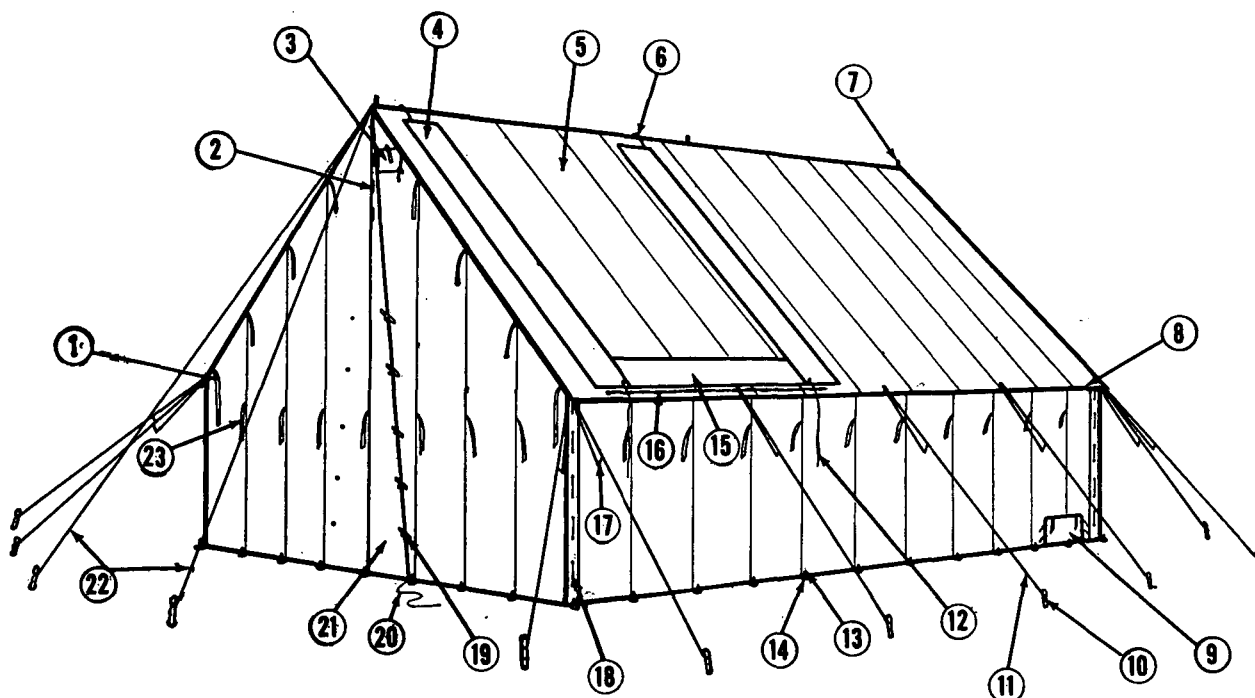

- | | | | |
|---------------------|-------------------------|---------------------------------|----------------------|
| 1 40-inch wall line | 5 Eave | 9 16-inch wood tent pin | 13 Door fastener |
| 2 Door lacing line | 6 Heater duct flap | 10 Footstop | 14 Door flap line |
| 3 Ventilator | 7 24-inch wood tent pin | 11 Tent slip | 15 Door flap |
| 4 Tent frame | 8 Eave line | 12 Side wall corner lacing line | 16 Guy line |
| | | | 17 30-inch wall line |

Figure 73. Tent, maintenance, shelter.

(2) *Materials.* The outer fabric of the tent is made of 8.5 ounce olive green, cotton, wind-resistant sateen, FMWWR treated. The outer fabric is issued in three sections consisting of two identical end sections and one middle body section.

(3) *Doors.* The tent has a personnel door at each end. The doors, when closed, are secured by slide fasteners. When open, the doors are rolled up and secured by tie tapes. Each door is provided with a blackout flap.

(4) *Heating.* Heater duct sleeves are located in the tent so that the tent can be heated by an external heater. A stovepipe outlet is also provided in the roof of the tent to allow heating by the M-1941 tent stove.

(5) *Ventilation.* Each end section of the tent contains a ventilator and large screened window. The intermediate section of the tent contains two roof ventilators and four large screened windows.

(6) *Covers.* The tent is provided with a cover for the outer fabric and two carrying covers for the frame. Erection instructions are attached to the inside of one of the covers.

c. *Ground Plan.* Before pitching the tent, study the ground plan carefully (fig 76).

d. *Pitching.* The tent can be pitched by four men in approximately 30 minutes (fig 77).

(1) *Assembling frame components.*

(a) Lay out all frame components in area selected for erection of the tent.

(b) Unbuckle arch binding straps and open all arch assemblies (1). Raise center joint of each arch assembly and lock roof segments in position with quick-release pin and chain assemblies (Inset, 1).

(c) Install an arch header assembly on each arch assembly just above the eave joints (2) with the quick-release pin and chain assemblies (Inset C, 2).

(d) Raise peaks of two arch assemblies and insert end studs of a purlin assembly in arch key lock slots near peak of arches (Inset B, 2). Turn purlin approximately one-fourth of a turn and insert studs of captive diagonal braces into slots of arch assemblies (Inset A, 2). Turn shackles at ends of braces, one-fourth of a turn to the right, and press down or up against frame arch member to lock them in place.

(e) Install purlin assemblies at eaves and bases of arch assemblies as described in (d) above.

(f) Install remaining purlin assemblies on remaining arch as described in (d) and (e) above.

(2) *Installing tent outer fabric on frame assembly.*

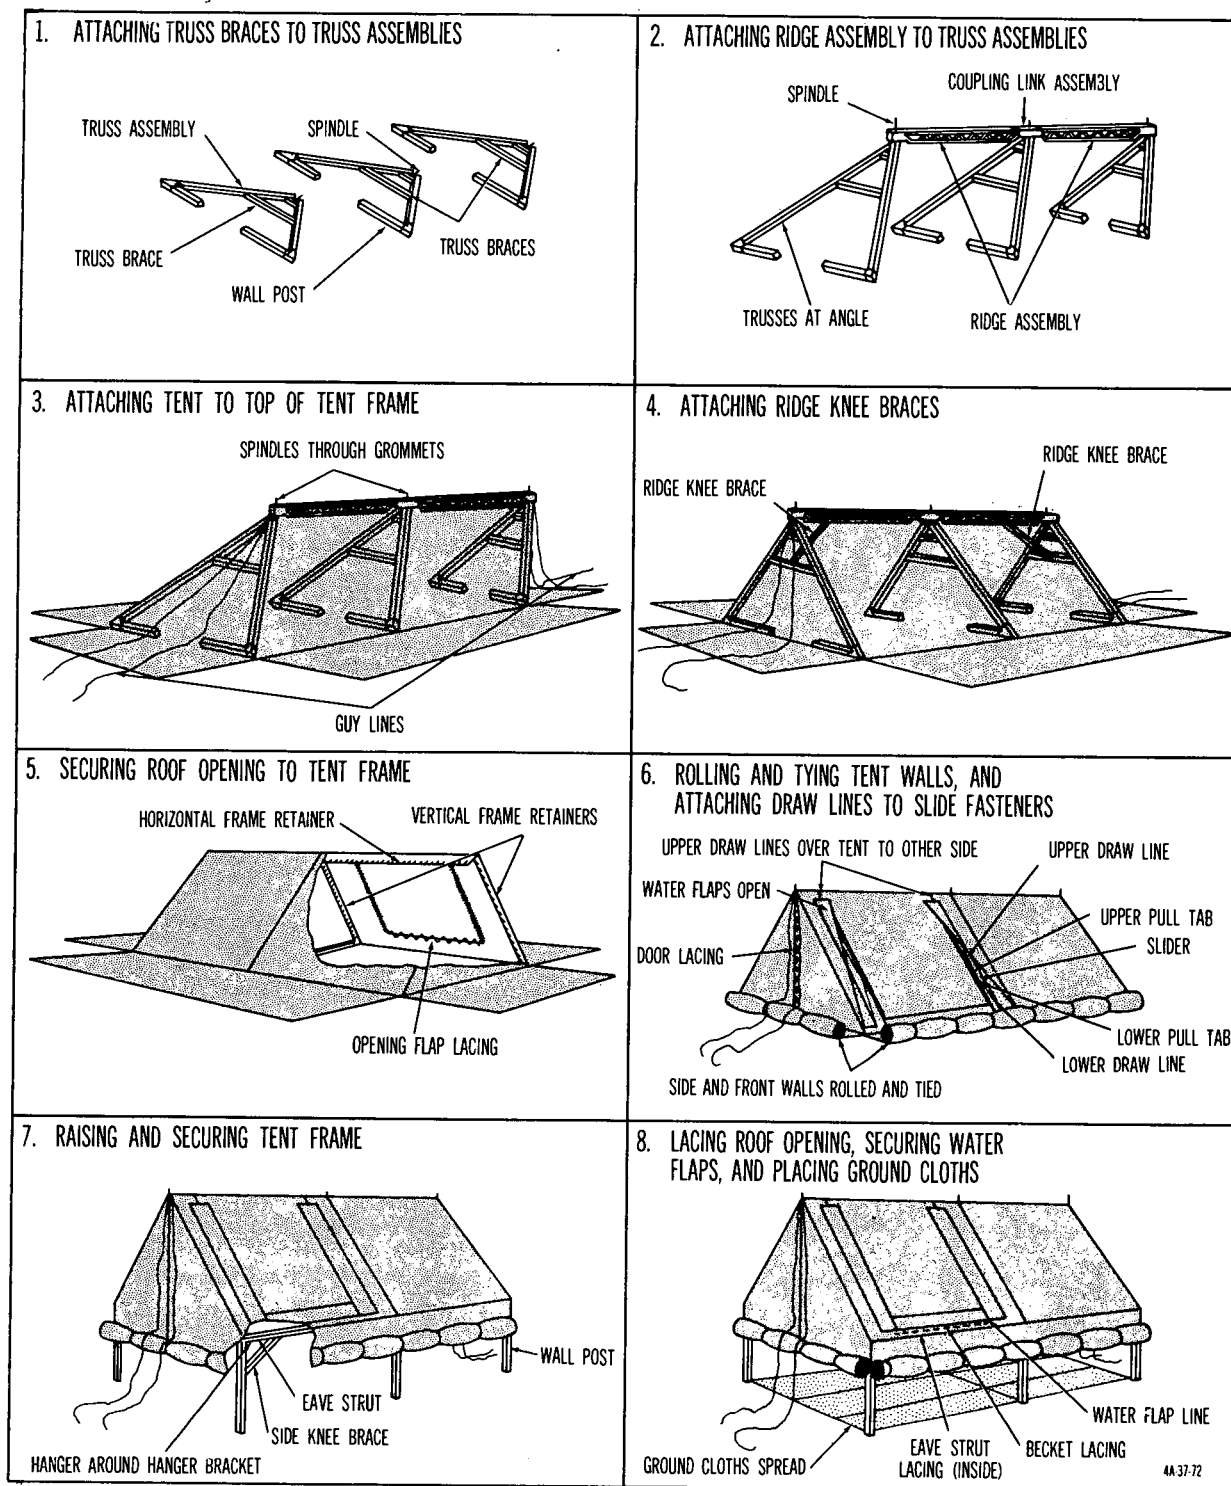


Figure 74. Steps in pitching tent, maintenance, shelter.

(a) The end sections are interchangeable. Take one end section and place the ridge and eave grommets over the frame posts. Repeat this procedure at other end of tent frame.

(b) Place the wall section over frame and place grommets over frame posts. Becket end section to wall section at both ends of tent from ridge to eaves (3). Secure flaps with toggles (Inset, 3).

(c) Raise one side of frame at eave joint


and lock joints in place with quick-release pin and chain assemblies (4).

(d) Raise opposite side of frame at eave joint and lock joints in place with quick-release pin and chain assemblies.


(e) Complete becket lacing of end sections to wall section from the eaves to ground line. Tie off with long loop and secure flaps with toggles.

(f) Tuck sod cloths under purlin assem-

9. SECURING TENT WALLS AND TENT WALL CORNERS

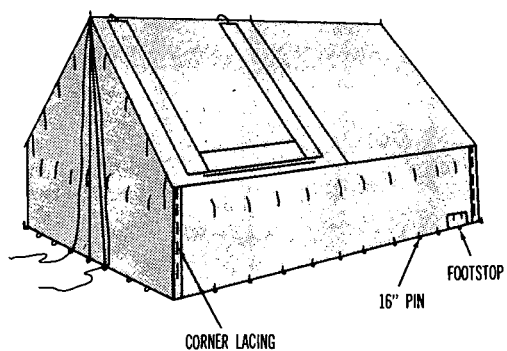


10. SECURING EAVE LINES AND GUY LINES

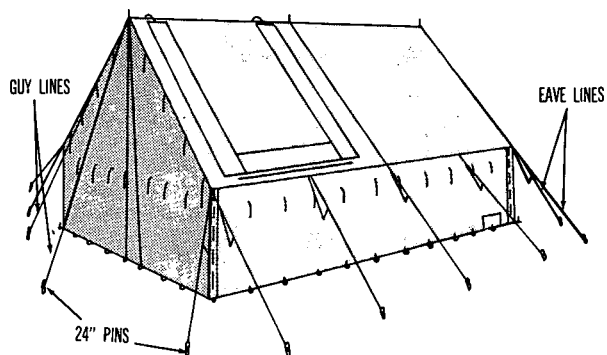

44-3735

Figure 74—Continued.

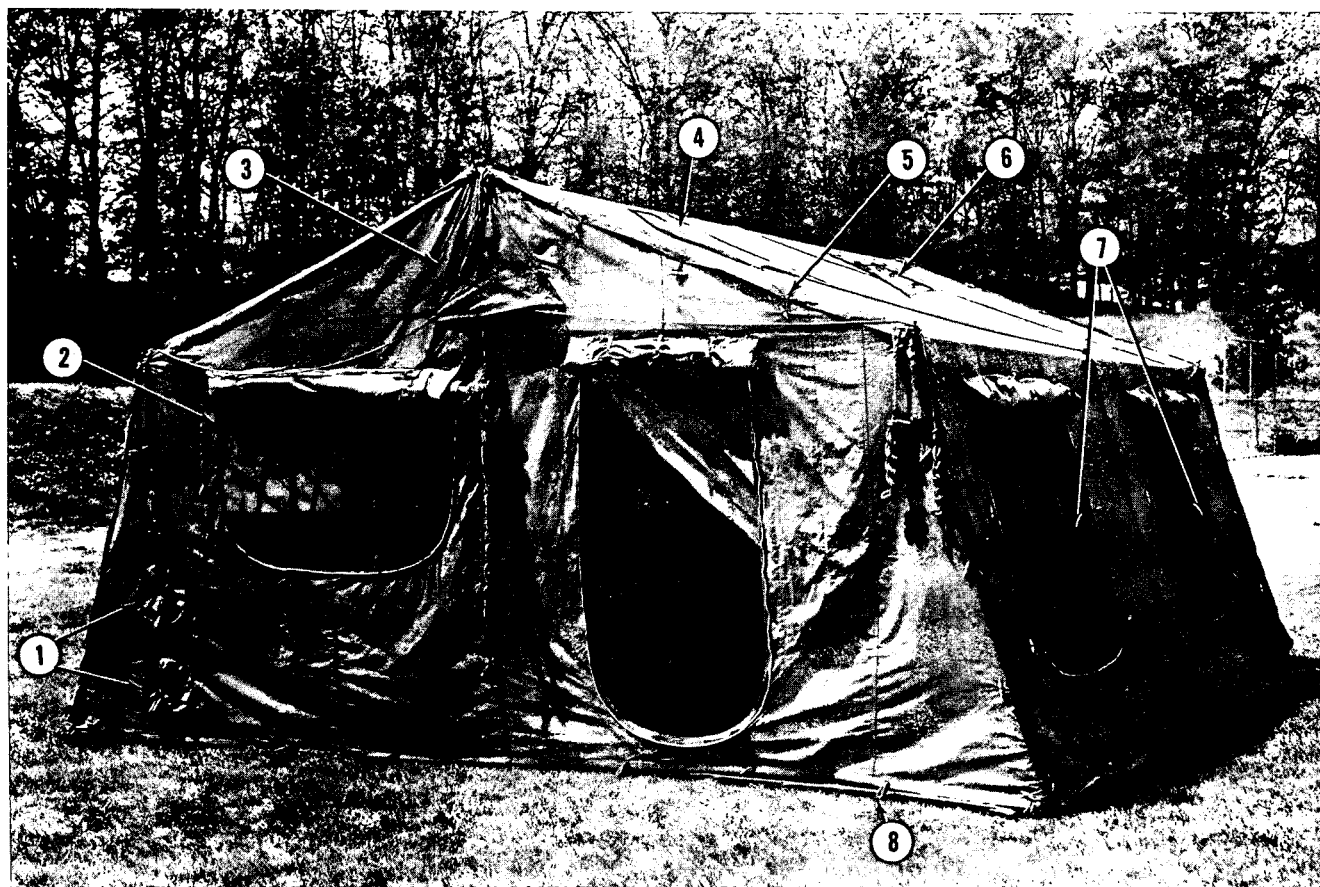

- | | |
|-----------------------|--------------------|
| 1 Heater duct sleeves | 5 Toggle |
| 2 Screened window | 6 Stovepipe outlet |
| 3 Ventilator | 7 Screened window |
| 4 Roof ventilator | 8 Footstop |

Figure 75. Tent, frame-type, expandable, 16 ft by 16 ft.

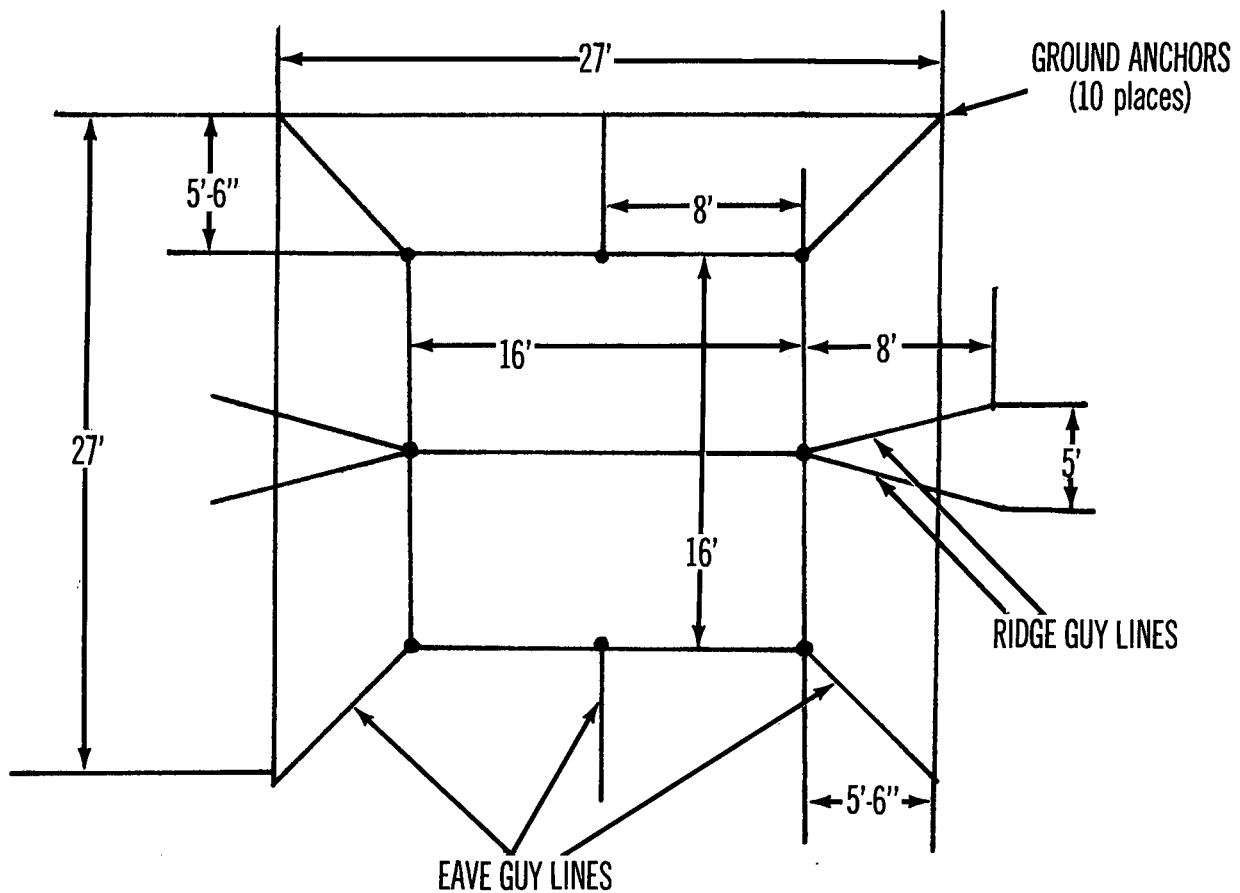


Figure 76. Ground plan for tent, frame-type, expandable, 16 ft by 16 ft.

blies at base of frame. Loop ridge guy lines over end ridge posts of frame assembly.

(g) Inside the tent, wrap lower attaching flaps around ground purlins and loop and secure lines to S-hooks attached to upper side flaps (5).

(h) Anchor arches to the ground with steel tent pins and drive pins through footstops at bottom edges of tent end section (6).

(i) Drive guy-line pins into ground according to ground plan (fig 76). Secure ridge and eave guy lines to pins (6, fig 77).

(j) Keep ventilator flaps and screened windows open or closed by tying flap lines to a convenient post or guy line (6).

e. Striking.

(1) *Removing tent outer fabric sections from frame assembly.*

(a) Untie and remove the inside bottom attaching flaps from upper side flaps.

(b) Remove footstops from steel pins, and remove footstop pins and pins securing arch assemblies to the ground. Remove guy lines from guy-line pins, and remove guy-line pins.

(c) Untie flaps and becket lacings which connect end sections to wall section from ground line to eaves.

(d) Remove pin and chain assemblies from eave joints on one side of frame and lower side of frame to the ground. Lower other side of frame in the same manner.

(e) Remove wall section and end sections from frame. Spread on ground ready for folding and packing.

(2) *Disassembling sectionalized frame.*

(a) Remove purlin assemblies attached at ridge, eaves, and base of frame assembly.

(b) Remove arch header assemblies from arches, and remove pin and chain assemblies at peak of arches.

f. Folding and Packing.

(1) *Packing sectionalized frame.*

(a) Fold and secure the arch assembly with the strap provided.

(b) Fold the diagonal braces on the purlin assemblies toward each other.

(c) Make sure the pins on each header assembly are in place.

(d) Make two stacks of the frame assembly. One stack consists of ten purlins and three header assemblies. The other stack consists of the three header assemblies.

(e) Fit each of the appropriate carrying covers over the ends of each stack and secure by means of the buckles. Place the tent pins in the pouches provided (A & B, fig 78).

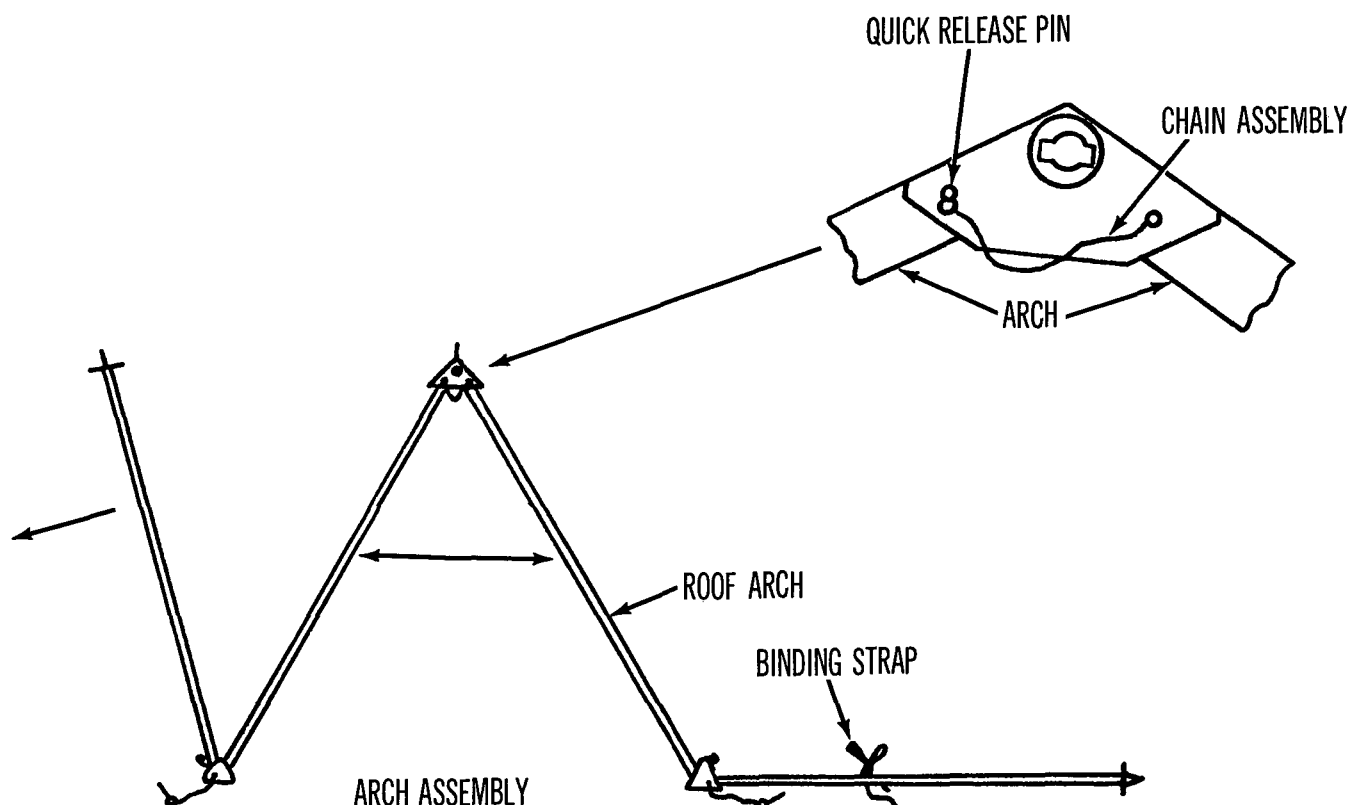


Figure 77. Pitching tent, frame-type, expandable, 16 ft by 16 ft.

(2) *Packing tent wall and ends.*

(a) Close all window fasteners on the wall section and all window and door fasteners on the end sections.

(b) Fold the tent sections so that they measure approximately 34 inches by 42 inches.

(c) Place all lines within the folds.

(d) Place the three tent sections within the cover provided and close with the securing straps (C, fig 78).

Length: 26 feet.

Width: 25 feet, 6 inches.

Weight: 100 pounds.

Cube: 15 cubic feet.

(b) *Frame.*

Height: adjustable from 5 feet, 4 inches to 8 feet, 8 inches.

Width: Adjustable from 5 feet to 8 feet, 8 inches.

Weight: 80 pounds.

Cube: 2 cubic feet.

17. Tent, Vehicle Maintenance

a. *Use.* The Tent, Vehicle Maintenance, Complete with A-Frame (fig 79), is used to provide adequate cover to personnel while repairing wheeled and tracked vehicles in the field under temperate and tropical weather conditions.

b. *Description.* The tent is a paulin supported by an adjustable aluminum A-frame which is adjustable in height and width. Ropes, threaded through D-rings sewed along the edges, are used to tighten the cover around such areas as tank turrets, tank tracks, and truck cabs. Guy lines are provided approximately 3 feet apart along the cover edges to facilitate securing of the cover in any position.

(1) *Tabulated data.*

(a) *Paulin.*

Height: Adjustable with frame.

(2) *Materials.* The tent paulin is made of 9.85-ounce cotton duck, FMWWR; the frame is made of aluminum.

(3) *Tent paulin.* The paulin (fig 80) is approximately square. A D-ring (14) is attached at each corner with chapes (13) and reinforcement (15). Eight small D-rings (11) are attached at evenly spaced locations along each side of the paulin. Four securing lines (7) are installed through the D-rings to secure the tent when erected. A loop (10) and reinforcement (12) are attached along the edge of the paulin at each small D-ring location. Seven strips of reinforcement (6) are attached to the center of the paulin. A tiedown strap (3), used to secure the paulin to the tent support, is located where each of the center reinforcements cross. The guy lines (9) are 13 feet long and have one end sewed with an eye splice at the other end. The tent slips (8) are flat, 4 inches long, and have a magnesium base.

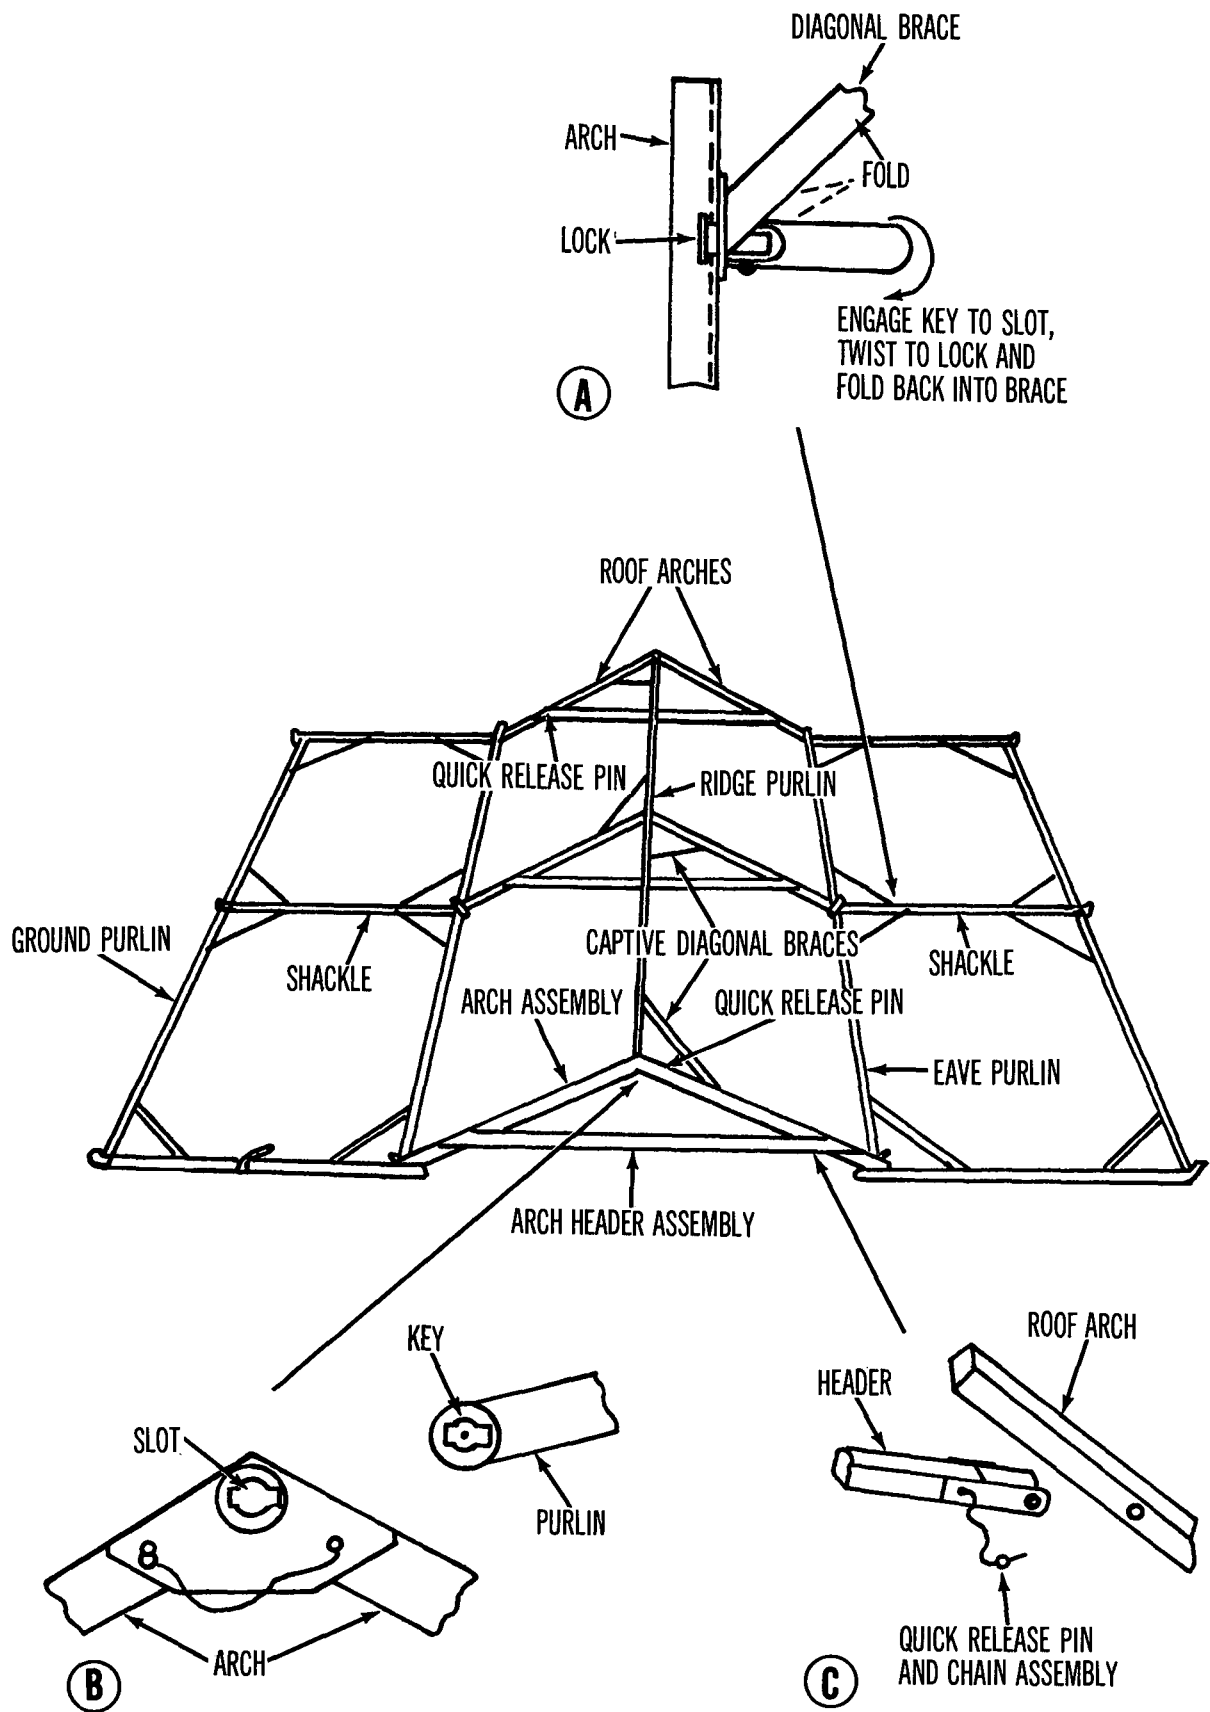


Figure 77—Continued.

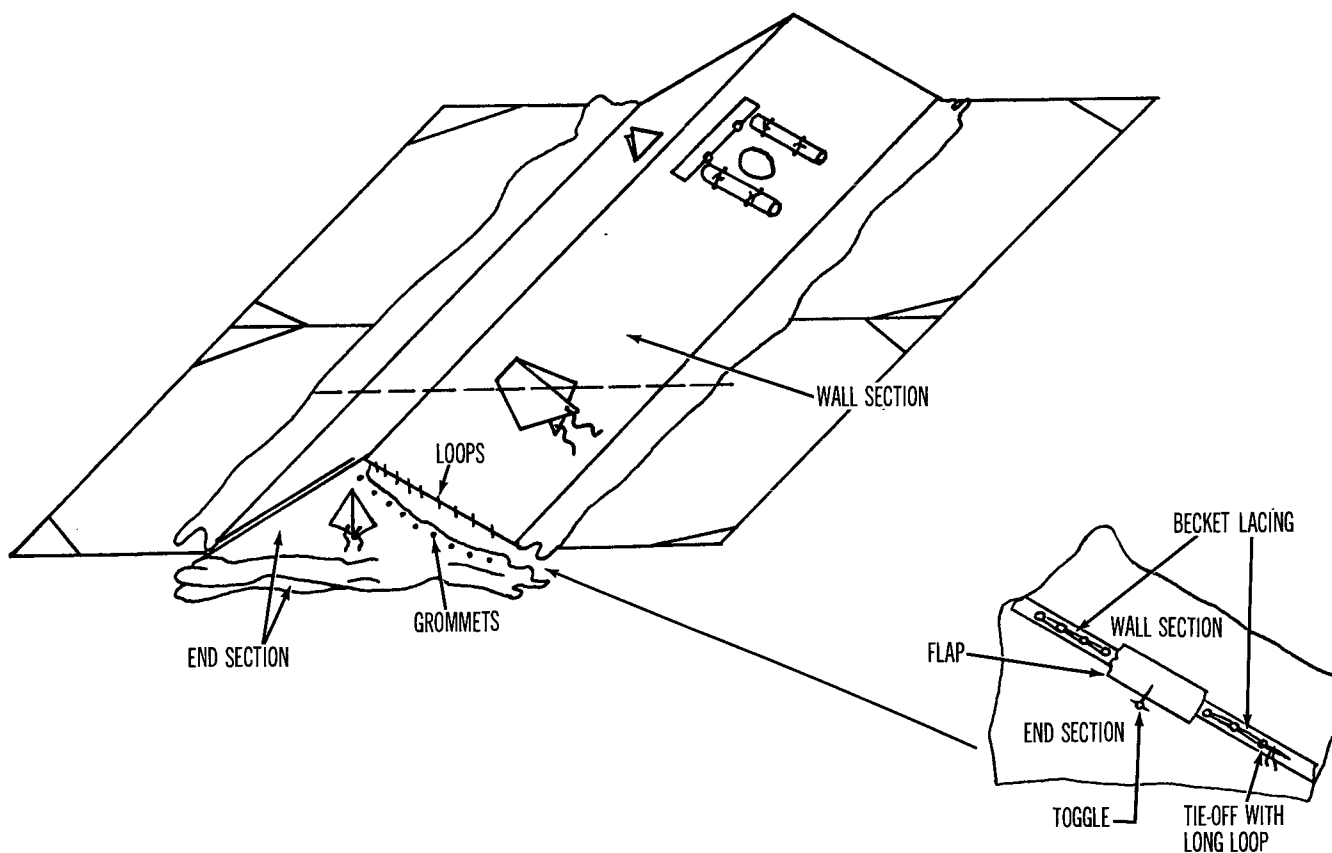


Figure 77—Continued.

(4) *Tent support.* An A-shaped, adjustable metal frame is used to support the tent when it is erected (fig 80). It is composed of two leg assemblies (1) and one ridge assembly (3) which are reinforced with braces (5 and 8) and held together with eyebolts (4 and 7). The ridge assembly and the leg assemblies are secured in their adjusted positions with toggle pins (2 and 9). The chain assemblies (6) are used.

(5) *Cover.* The tent is provided with a cover (fig 82) for use when it is in storage or is being transported. The cover is made of 9.85-ounce cotton duck and has an identification label and erection instructions sewn on the inside.

c. Accessories. The following tent pins are used with the vehicle maintenance tent.

- (1) Forty two 24-inch wood pins.
- (2) Forty two 12-inch steel pins.

d. Unpacking. Following are procedures for unpacking the tent.

(1) *Tent support.*

(a) Cut and remove the metal banding (1, fig 83) from the packing container (2).

(b) Remove the top from the container and remove the tent support components from the container.

(c) Remove the tops from the tent pin boxes and remove the tent pins.

(2) *Paulin and cover.*

(a) Remove the container (3, fig 83) from the tent and tent cover.

(b) Remove the paulin from the tent cover.

(c) Unfold the paulin.

e. Pitching. Although the time required to pitch the tent depends upon the item being covered, generally, the tent can be pitched by two men in approximately 30 minutes. The pitching instructions provided below are only those most commonly used; therefore, the user may choose other methods when they are more practicable for the immediate need.

(1) *Tent support.*

(a) Open the ridge assembly (1, fig 84) to the desired length, insert the toggle pins (4) in the proper holes and lock them.

(b) Open each leg assembly (1, fig 85) and secure each brace (6) between the legs with each eyebolt (14).

(c) Place each leg assembly in the upright position and install it on the ridge assembly. Lock in on the ridge assembly with the remaining toggle pins (4, fig 84).

(d) Secure each brace (5, fig 81) to the ridge assembly with each eyebolt (4).

(e) Adjust the tent support to the desired height, and lock the leg assemblies with

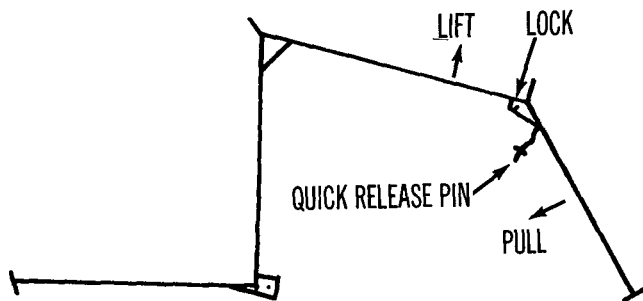


Figure 77—Continued.

the toggle pins (9). Adjust the chain assemblies (6) to the proper length.

(2) *Tent erected over front of shop truck (A, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent over the front of the truck.

(c) Assemble the tent support by following the instructions in (1) above.

(d) Place the tent support in front of the truck and drape the tent over it.

(e) Secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(f) Use the tent pins to stake the loops (10, fig 80) to the ground.

(3) *Tent erected over rear of shop truck (B, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent over the rear of the truck.

(c) Assemble the tent support by following the instructions in (1) above.

(d) Place the tent support to the rear of the truck to get the required working area, and drape the tent over the tent support.

(e) Secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(f) Use the tent pins to stake the loops (10, fig 80) to the ground.

(4) *Tent erected between two trucks (C, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent over the rear of the shop truck and the opposite end of the tent over the front end of another truck.

(c) Assemble the tent support by following the instructions in (1) above.

(d) Place the tent support between the two trucks, and secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(5) *Tent erected over jeep (D, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent over the rear of the shop truck.

(c) Assemble the tent support by following the instructions in (1) above.

(d) Place the tent support to the rear of the shop truck, and secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

SECURE ROPE TO
"S" HOOK WITH A
SLIP KNOT

GROUND PURLIN

KNOT ROPE ON
BOTH SIDES OF
GROMMET

WALL SECTION

"S" HOOKS

LOWER FLAP
(WRAP AROUND GROUND PURLIN)

SOD CLOTH
(SPREAD TO INSIDE)

SECURING WALL TO FRAME
(INSIDE VIEW)

Figure 77—Continued.

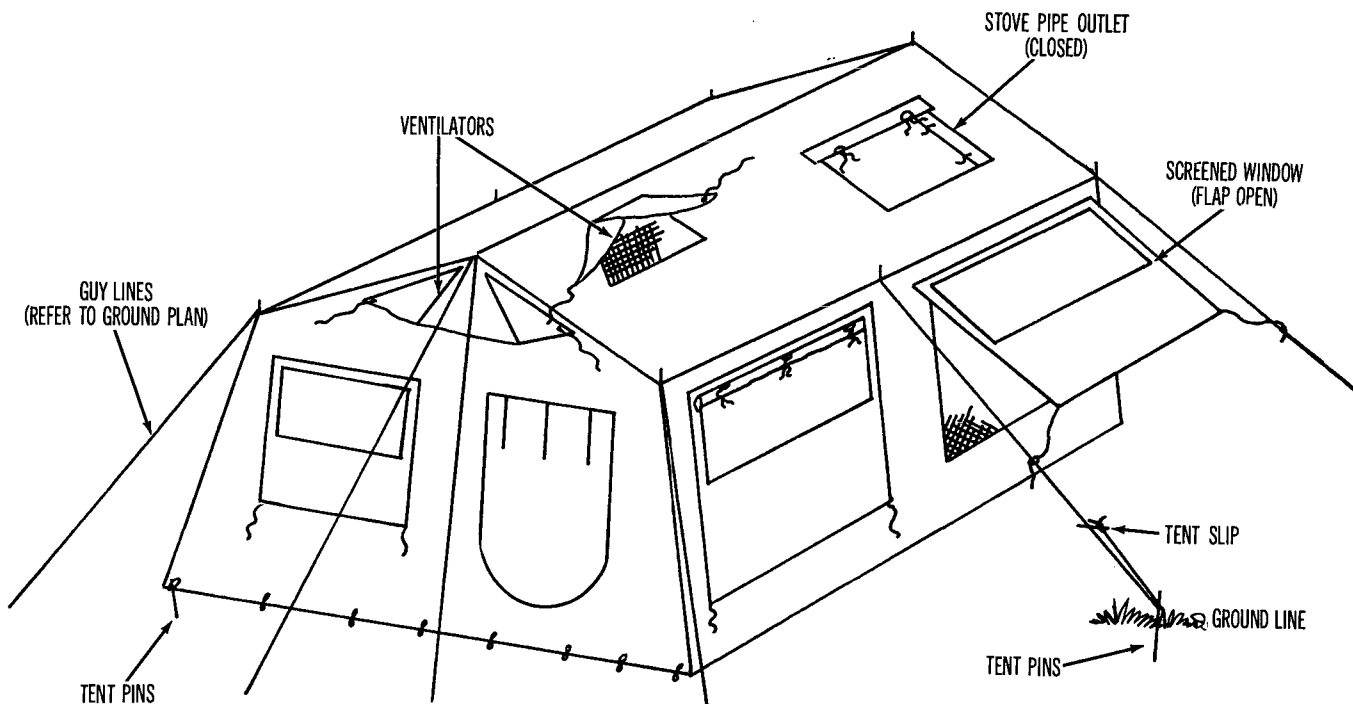


Figure 77—Continued.

(e) Using the tent pins, anchor the guy lines (9, fig 80) to the ground to form a shed-type shelter.

(6) *Tent erected over rear of tank and front of shop truck (E, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 4), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent over the turret and rear deck of the tank. Use the remaining securing lines to secure the opposite end of the tent over the rear of the shop truck.

(c) Assemble the tent support by following the instruction in (1) above.

(d) Place the tent support between the tank and the shop truck, and secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(e) Use the tent pins to anchor the loops (10, fig 80) to the ground.

(7) *Tent erected over tank track (F, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent along the side of the tank.

(c) Assemble the tent support by following the instruction in (1) above.

(d) Place the tent support away from the side of the tank and secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(e) Use the tent pins to stake the loops (10, fig 80) to the ground.

(8) *Tent erected over tank between two shop trucks (G, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82), and unfold the tent.

(b) Use the securing lines (7, fig 80) to secure one end of the tent over each truck.

(c) Assemble the tent support by following the instructions in (1) above.

(d) Place the tent support on the tank and truck so that two legs are resting on the tank and two legs are resting on the truck.

(e) Secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(9) *Tent Erected Over Tank (H, fig 86).*

(a) Remove the tent (5, fig 80) from the tent cover (1, fig 82) and unfold the tent.

(b) Assemble the tent support by following the instructions in (1) above.

(c) Place the tent support on the rear deck of the tank, and drape the tent over the tank turret and the rear deck.

(d) Secure the tent to the ridge assembly (3, fig 81) with the tiedown straps (3, fig 80).

(e) Use the securing lines (7, fig 80) to secure the tent around the tank.

f. *Striking.*

(1) *Tent anchored to ground*

(a) Remove the tent pins from the ground, and remove the loops (10, fig 80).

Note. If wood tent pins were used, remove the guy lines (9; fig 80) from the tent pins before removing them from the ground.

(b) Untie the securing lines (7) from the tank or truck, and remove the tiedown straps

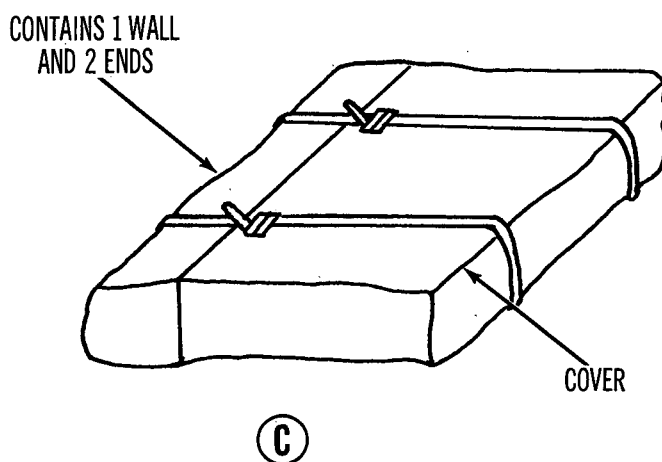
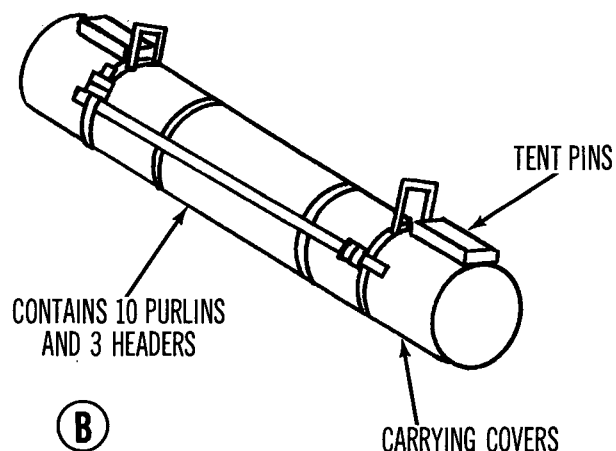
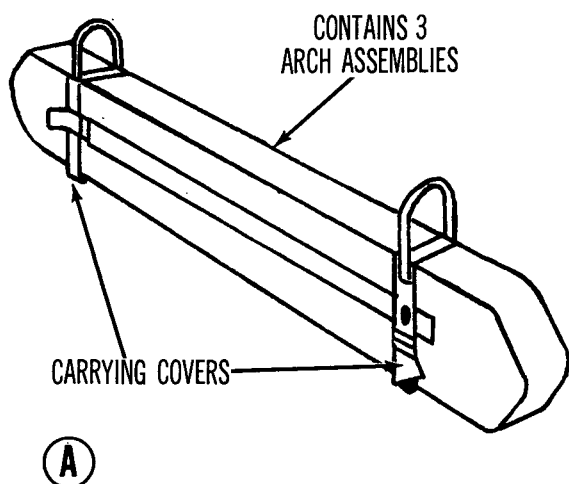


Figure 78. Packing, tent, frame-type, expandable, 16 ft by 16 ft.

(3) from the tent support. Remove the tent (5) from the tent support and the tank or truck.

(2) *Tent not anchored to ground.*

(a) Untie the securing lines (7, fig 80) from the tank or truck.

(b) Remove the tiedown straps (3) from the tent support.

(c) Remove the tent (5) from the tent support and the tank or truck.

(d) Remove the tent support from the tank.

g. Folding and Packing.

(1) *Paulin.*

(a) Spread the paulin on the ground with the outside placed down.

(b) Fold all guy lines (9, fig 80) on top of the paulin, and fold the paulin in half along the long sides.

(c) Fold each long side to the center of the previous fold.

(d) Fold the paulin in half again along the long sides, and fold each short side to the center by making folds of 3 feet.

(e) Fold the paulin folds together.

(f) Place the paulin on the tent cover (1, fig 82) and secure the cover around the paulin with the lines (2).

(2) *Support.*

(a) Remove the eyebolts (4, fig 81) from the braces (5).

(b) Remove the toggle pin from each leg assembly (1), and remove the leg assemblies from the ridge assembly (3).

(c) Remove the toggle pins (9) from the leg assemblies.

(d) Remove the eyebolts (7) from the braces (8).

(e) Fold the leg assemblies, and place them in the container (2, fig 83).



Figure 79. Tent, vehicle maintenance.

(f) Remove the toggle pins (2, fig 81) from the ridge assembly, close the ridge assembly, and place it in the container with the leg assemblies. Secure the top on the container.

(g) Place the tent pins in the appropriate box and secure the top.

18. Tent, Maintenance, Missile Test Shop, Hawk Missile System

a. *Use.* The tent, maintenance, missile test shop (fig 87), is designed to provide environmental protection to personnel during operations and maintenance of radar equipment related to the Hawk Missile System.

b. *Description.* The tent is supported by a lightweight aluminum tubular frame, which is attached to the trailer containing the electronic equipment. The tent is provided with two windows, a personnel access door, and two heater duct sleeves. Each side of the tent is designed for vertical adjustment to suit existing ground conditions.

(1) Tabulated data.

Height: front height, 5 feet; rear height, 8 feet 7 inches.

Length: 6 feet.

Width: 8 feet 10 inches.

Weight: 50 pounds.

Cube: 3 cubic feet.

Floorspace: 40 square feet.

(2) Material. The tent fabric is made of 9-

ounce olive green wind-resistant cotton sateen cloth, FWWMR treated.

(3) *Door.* The personnel access door is a curved slide fastener located at the right rear of the tent.

(4) *Windows.* A window assembly is located on each side of the tent.

(5) *Heating.* The tent is heated by an external heater. Heater duct sleeves are located in the rear of the tent to accommodate the heater ducts.

(6) *Cable socks.* Cable socks are provided at the top rear of the tent to accommodate the necessary electrical cables for the equipment.

(7) *Cover.* A cover is provided for the tent and frame.


c. *Pitching.* Level the test shop trailer, remove the necessary cables from the electrical equipment cabinet, and close the cabinet cover before pitching the tent.

(1) Attaching frame to missile test shop cabinet (fig 88).

(a) Insert tent inner top support in sleeve of tent, and bolt inner top support to the top of the electrical equipment cabinet.

(b) Fold the tent on top of the electrical equipment cabinet, and insert the end top supports into the inner top support elbows.

(c) Insert the free ends of the end top supports into the elbows of the outer top support.

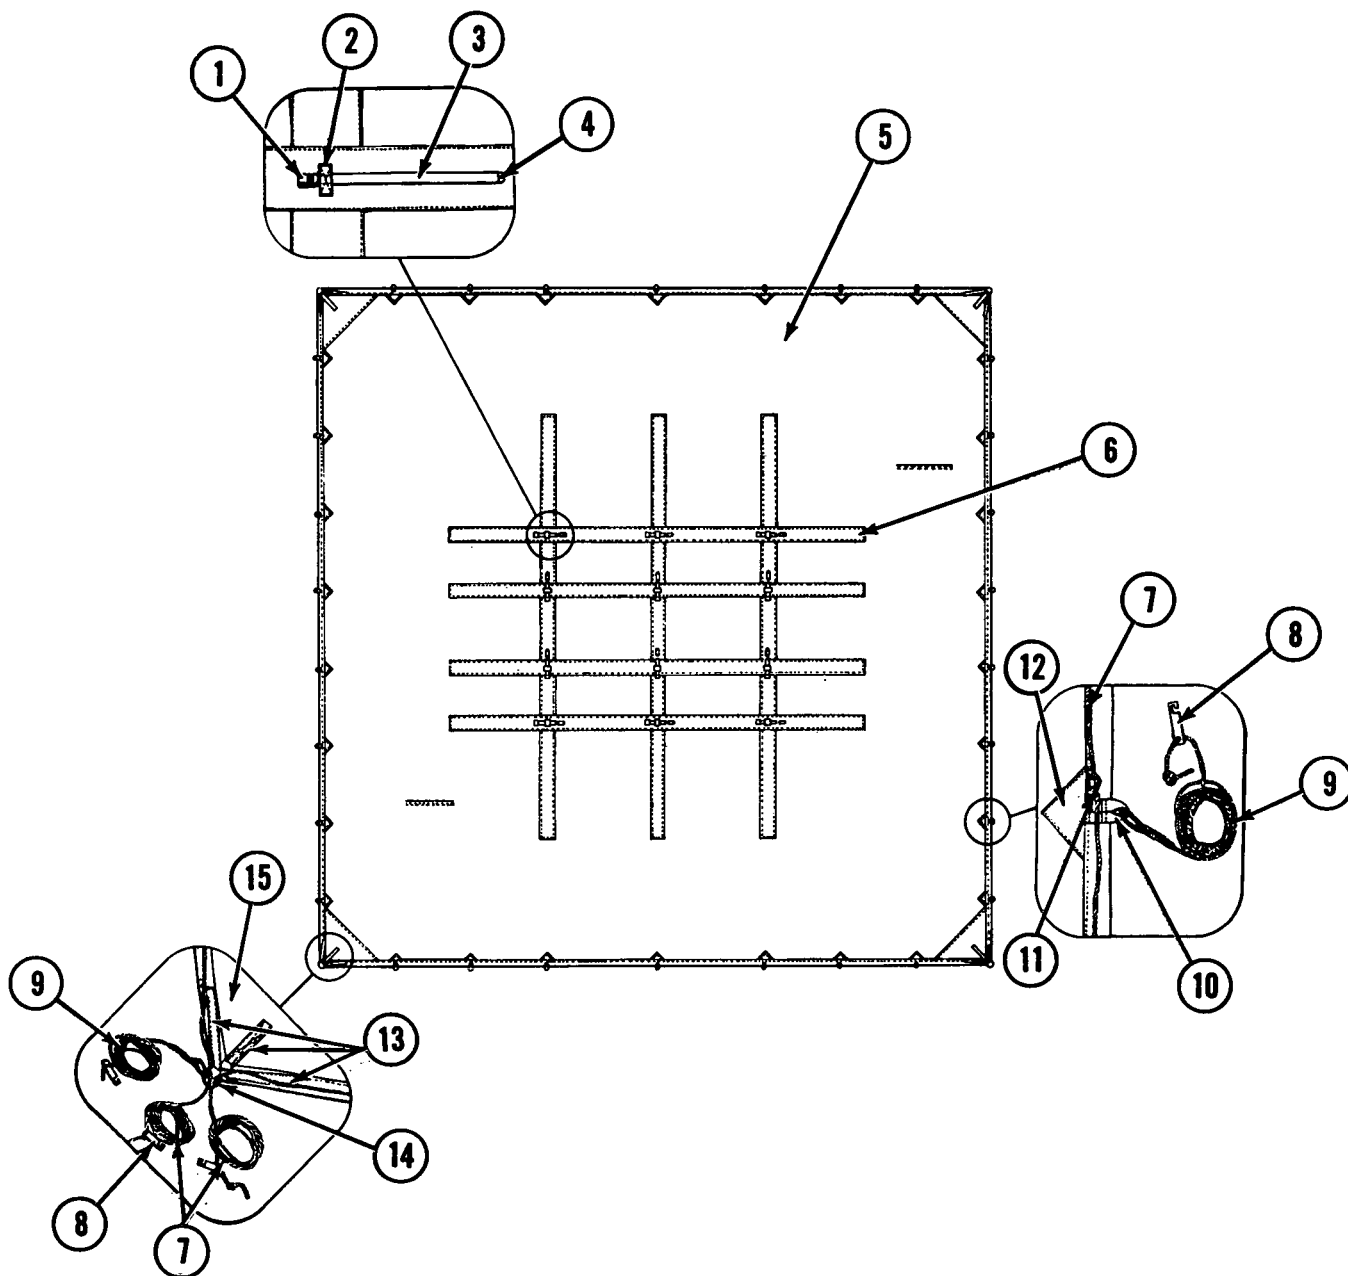

- | | | |
|--------------------------------|-------------------------|-------------------------------|
| 1 Buckle, tiedown strap | 6 Reinforcement, center | 11 Ring, D |
| 2 Reinforcement, tiedown strap | 7 Line, securing | 12 Reinforcement, loop |
| 3 Strap, tiedown | 8 Slip, tent | 13 Chapes, tent corner |
| 4 Clip, end | 9 Line, tent guy | 14 Ring, D |
| 5 Tent, vehicle maintenance | 10 Loop, tent guy line | 15 Reinforcement, tent corner |

Figure 80. Paulin, Tent, vehicle maintenance.

(d) Insert the diagonal end supports into the support brackets on the trailer, and insert the opposite ends of the diagonal end supports into the outer support "T" couplings.

(e) Tighten all screws in the tent frame.

(2) *Attaching tent to frame.*

(a) Place the tent over the frame, and secure it to the frame with the tiedown straps located on the inside of the tent.


(b) Attach the walls of the tent to the

turnlock fasteners on the electrical equipment cabinet and trailer.

(3) *Securing tent to the ground.*

(a) Drive footstop tent pins into the ground directly under the frame outer supports and the front of the electrical equipment cabinet.

(b) Secure tent footstops to footstop pins and adjust the ground-line adjusting lines (A, fig 86) for existing ground conditions.

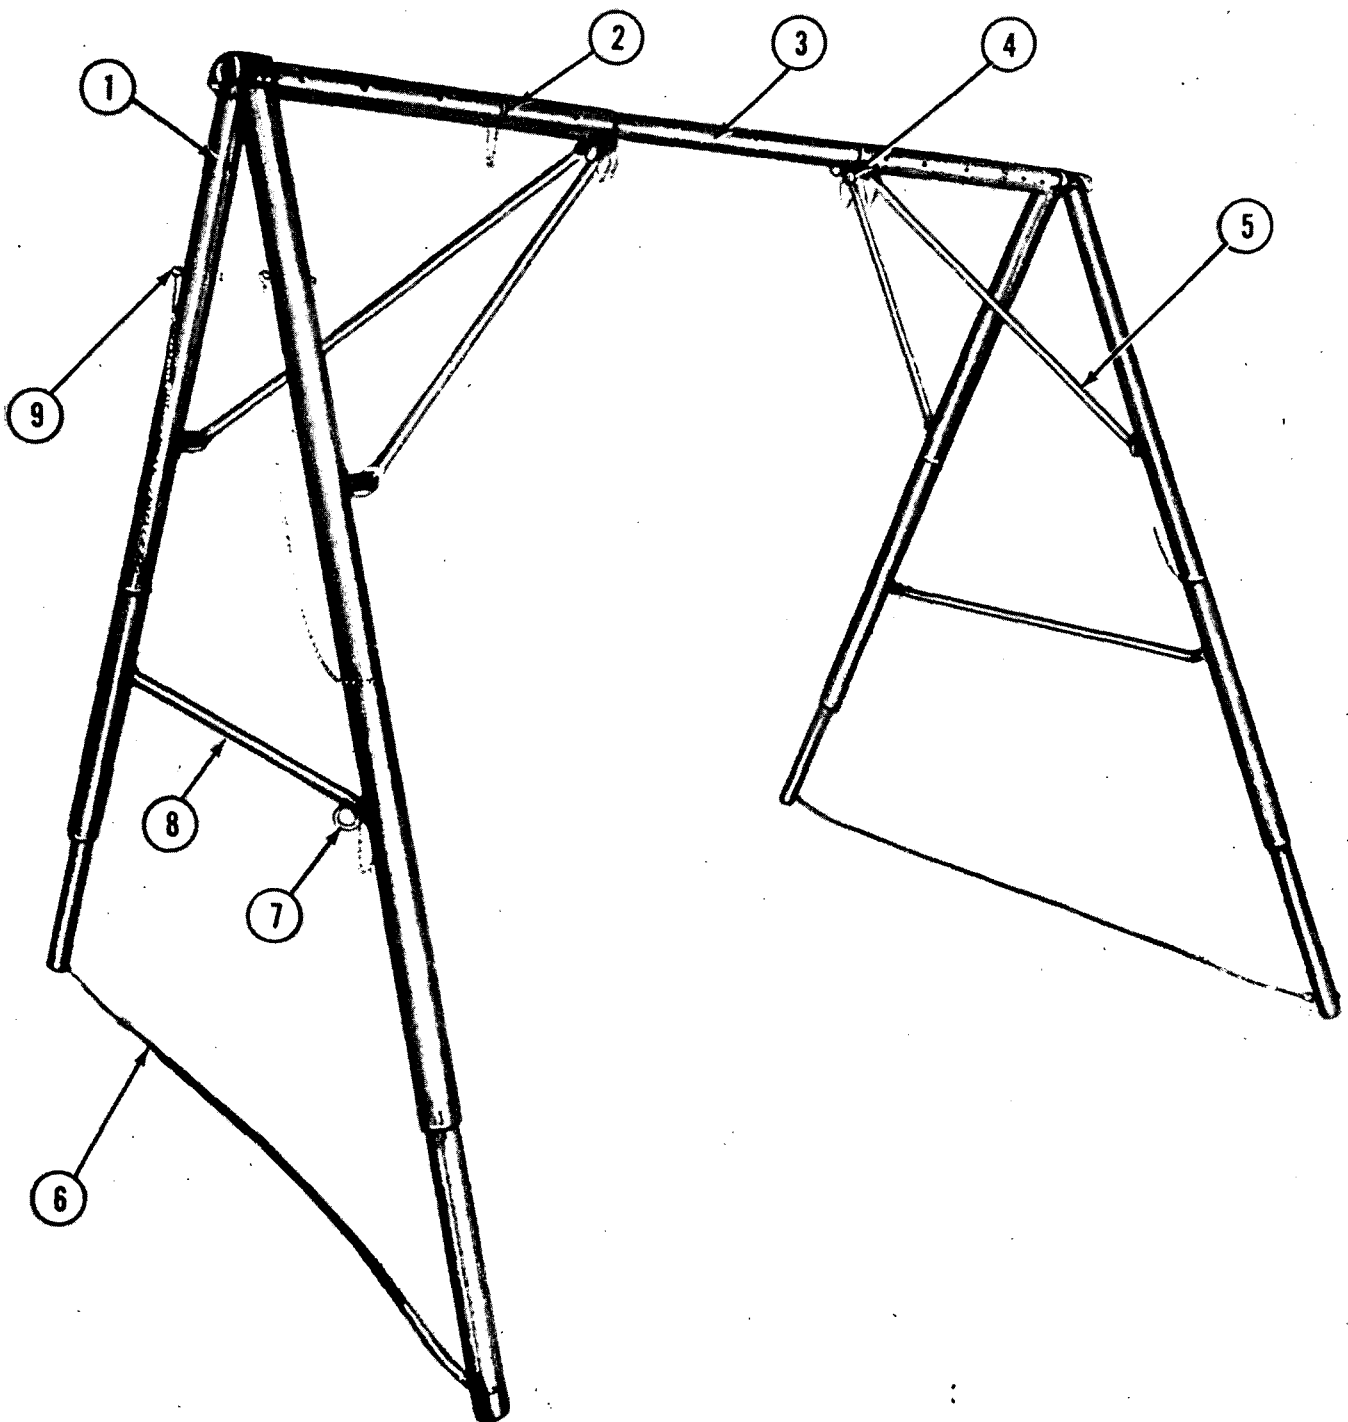

- | | | |
|------------------|---------------------------|---------------------|
| 1 Leg assembly | 4 Eyebolt | 7 Eyebolt |
| 2 Pin, toggle | 5 Brace, leg-to-ridge | 8 Brace, leg-to-leg |
| 3 Ridge assembly | 6 Chain assembly, spacing | 9 Pin, toggle |

Figure 81. Support, tent, vehicle maintenance.

(c) Pull sod cloth away from the tent, and weight the cloth down with rocks, dirt, snow, or other available material.


(d) Reinstall necessary cables through the tent cable socks (A, fig 87). Tighten cable sock drawstrings around cables.

d. Striking.

(1) Remove footstops from footstop pins, and remove all tent pins.

(2) Release the turnlock fasteners, and remove the walls of the tent from the electrical equipment cabinet and trailer.

(3) Remove the tent from the frame, and

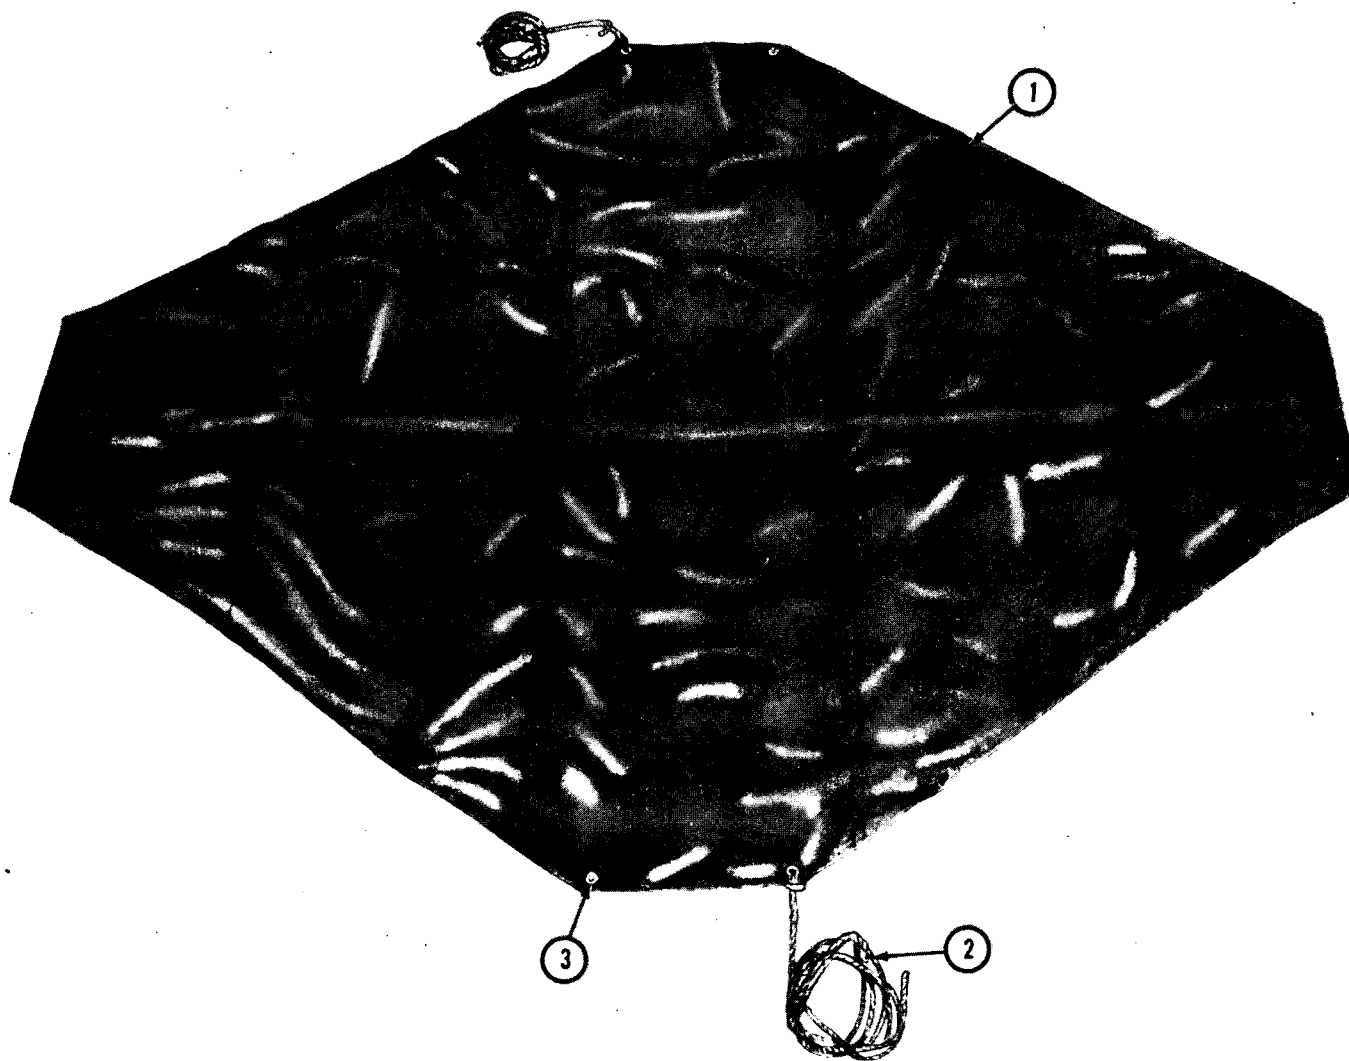

- 1 Cover, tent
- 2 Line, tent cover
- 3 Grommet, metallic

Figure 82. Cover, tent, vehicle maintenance.

fold the tent on top of the electrical equipment cabinet.

(4) Remove end top supports from the inner and outer top support elbows.

(5) Remove outer top support from diagonal end supports.

(6) Remove diagonal end supports from the support brackets on the trailer.

(7) Remove the tent inner top support from the top of the electrical equipment cabinet.

e. Folding (fig 89).

(1) Close personnel access door and lay tent out flat, inside up.

(2) Fold tent sides onto the tent, and roll tent toward inner top support. Insert a section of the frame with each roll. Insert the hardware bag before the last roll of the tent.

(3) Place rolled tent on cover, and secure cover with the provided ropes.

19. Tent, Pulse Acquisition Radar, Front, Hawk Missile System


a. Use. The tent, pulse acquisition radar, front (fig 90), is designed to provide environmental protection to personnel during operations and maintenance of radar equipment related to the Hawk Missile system.

b. Description. The tent is supported by a lightweight aluminum tubular frame, which is attached to the trailer containing the electronic equipment. The tent is provided with two windows, a personnel access door, and two heater duct sleeves. Adjusting lines are provided on all sides of the tent to adjust the tent to suit ground conditions.

(1) *Tabulated data.*

Height: front height, 6 feet 3 inches;
rear height, 7 feet 8 inches.

Length: 6 feet 8 inches.

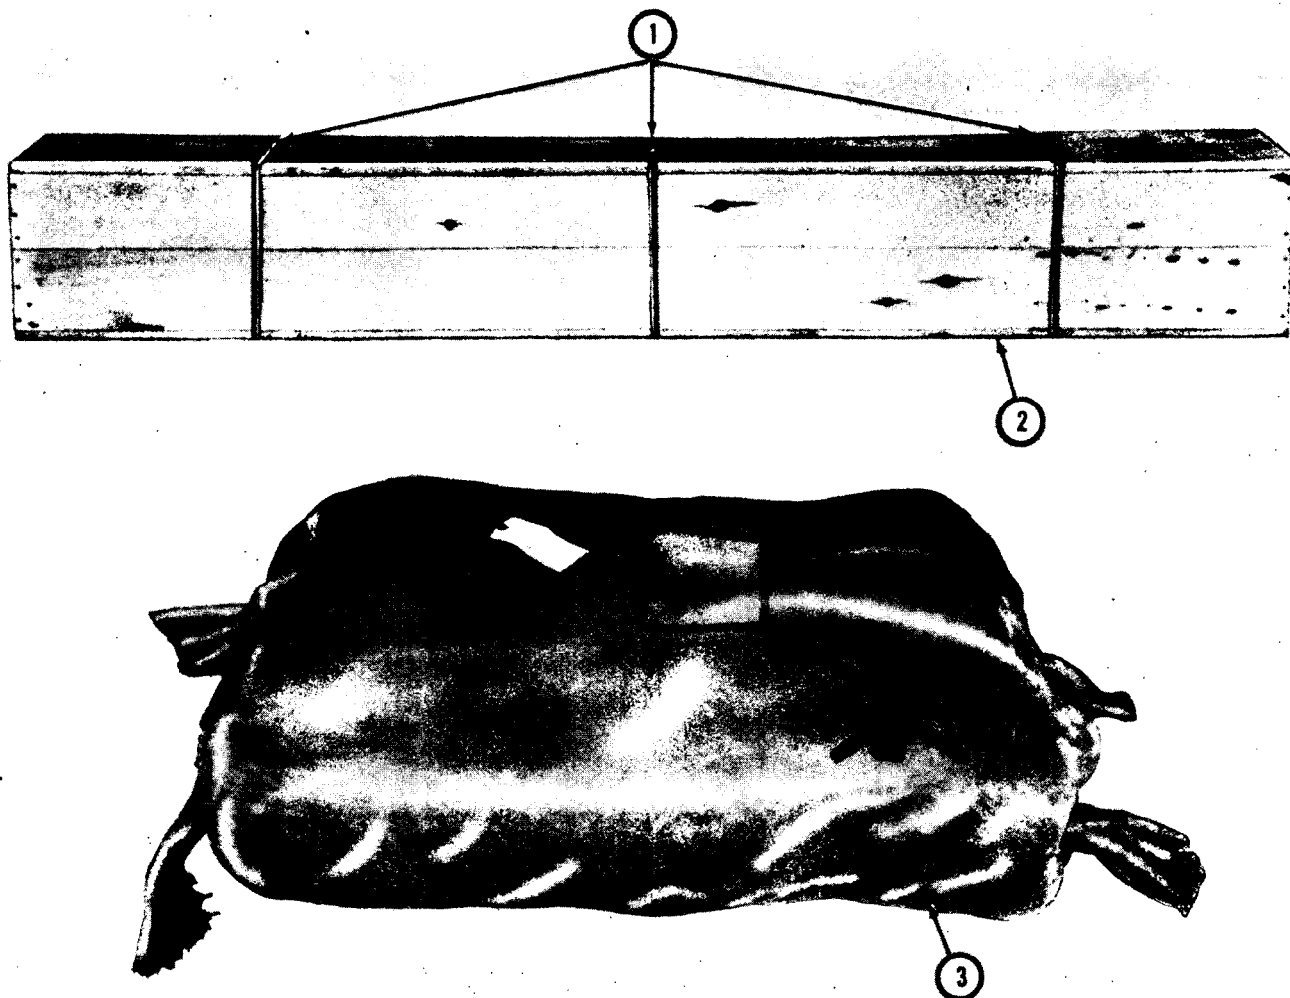

- 1 Building, metal
- 2 Container, tent support
- 3 Container, tent and tent cover

Figure 83. Tent packing containers.

Width: 8 feet.

Weight: 50 pounds.

Cube: 4 cubic feet.

Floorspace: 40 square feet.

(2) *Material.* The tent fabric is made of 9-ounce olive green wind-resistant cotton sateen cloth, FWWMR treated.

(3) *Door.* The personnel access door is a curved slide fastener located on one side of the tent.

(4) *Windows.* A window assembly is located on each side of the tent.

(5) *Heating.* The tent is heated by an external heater. Heater duct sleeves are located in the rear of the tent to accommodate the heater ducts.

(6) *Cover.* A cover is provided for the tent and frame.

c. *Pitching.* Before pitching the tent, level the radar trailer.

(1) *Attaching frame and tent to the radar and radar trailer (fig 91).*


(a) Bolt tent inner top support to the top of the receiver-transmitter cabinet.

(b) Attach the outer top support to the inside of the tent, using the tiedown tabs provided.

(c) Insert the lunette support into the outer support tee coupling.

(d) Hold the lunette support in a vertical position, and insert the spindle of each diagonal side support through the tent grommets and into the hole at the front of each U-channel of the trailer.

(e) Insert the free ends of the diagonal side supports into the elbows of the outer top support.

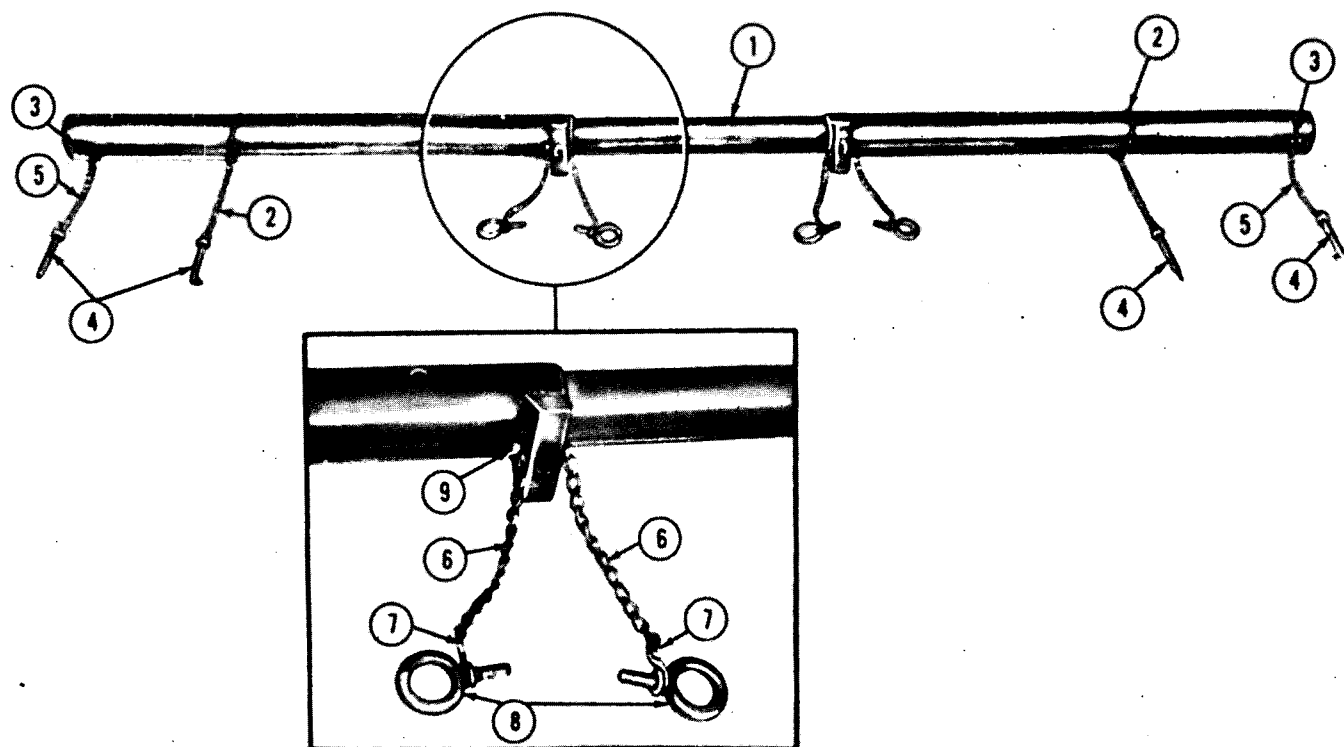

1 Ridge assembly
2 Chains, toggle pin
3 Screws, tapping

4 Pins, toggle
5 Chairs, toggle pin
6 Chairs, eyebolt

7 Hooks, chain
8 Eyebolts
9 Nut, plain, hexagon

Figure 84. Ridge assembly.

(f) Insert the free end of the lunette support into the lunette of the trailer until the stop pin rests on the lunette.

(g) Tighten all screws in the tent frame.

(h) Attach the short wall to the pallet, using the snap fasteners, and around each trailer drawbar, using the slide fasteners.

(i) Tighten tie tape drawstrings to openings in the leveling jacks.

(j) Attach the tent sidewalls to the receiver-transmitter cabinet turnlock fasteners.

(2) *Securing tent to the ground.*

(a) Drive footstop tent pins into the ground directly under the frame outer supports and the front of the receiver-transmitter cabinet, and secure tent footstops to footstop pins.

(b) Drive guy line tent pins into the ground, and attach and tighten guy lines to pins (fig 89).

(c) Pull sod cloth away from the tent, and weight the cloth down with rocks, dirt, snow, or other available material (fig 90).

(d) When the receiver-transmitter doors are opened, the door slide-in pockets, located above each tent window, receive the door slide

ends (B, fig 90).

d. Striking. Before striking the tent, make sure the receiver-transmitter door is closed.

(1) Remove footstops and guy lines from tent pins, and remove all tent pins from the ground.

(2) Release sidewall slide fasteners from around trailer drawbars.

(3) Untie and remove tie tape drawstrings from openings in leveling jacks.

(4) Remove tent sidewalls from radar cabinet turnlock fasteners.

(5) Remove lunette support from trailer lunette and from outer top support.

(6) Remove diagonal side supports from trailer U-channels and from outer top support.


(7) Unfasten tent tiedown tabs, and remove top outer support from the tent.

(8) Remove tent inner top support from the top of the radar set group cabinet, and remove the tent from the radar.

e. Folding (fig 89).

(1) Close all slide fasteners and lay tent out flat, inside up.

(2) Fold tent sides onto the tent, and roll tent toward inner top support. Insert a section

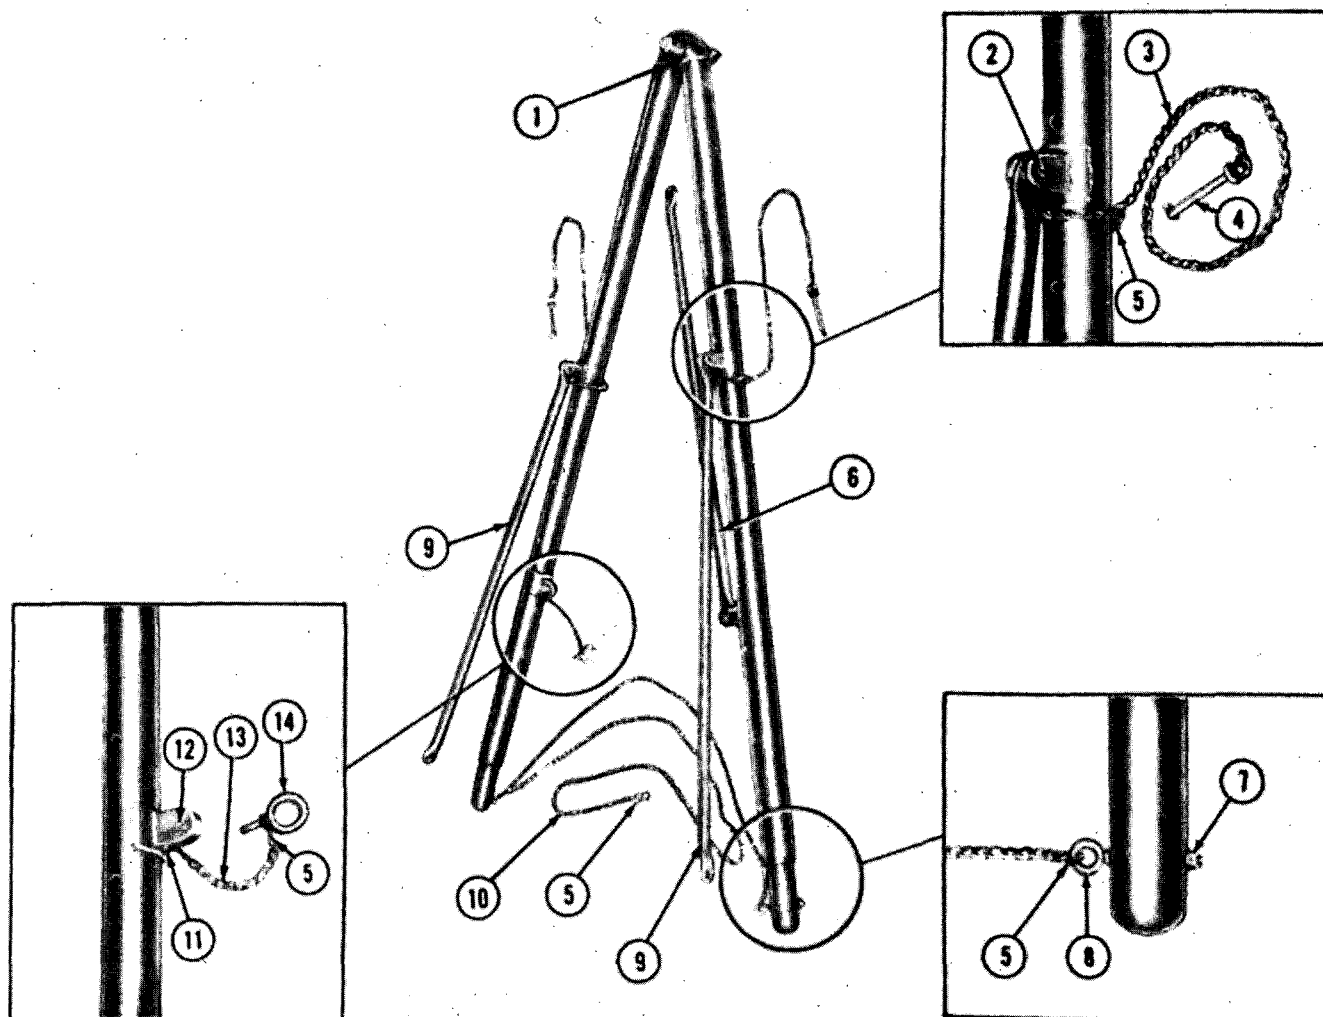

- 1 Leg assembly
- 2 Pin, spring
- 3 Chain, toggle pin
- 4 Pin, toggle
- 5 Hook, chain

- 6 Brace, leg-to-leg
- 7 Nut, self-locking
- 8 Eyebolt
- 9 Brace, leg-to-ridge
- 10 Chain, spacing

- 11 Screw, tapping
- 12 Insert, threaded
- 13 Chain, toggle pin
- 14 Eyebolt

Figure 85. Leg assembly.

of the frame with each roll. Insert the hardware bag before the last roll of the tent.

(3) Place rolled tent on cover and secure cover with the provided ropes.

20. Tent, Pulse Acquisition Radar, Aft, Hawk Missile System

a. Use. The tent, pulse acquisition radar, aft (fig 92), is designed to provide environmental protection to personnel during operations and maintenance of radar equipment related to the Hawk Missile system.

b. Description. The tent is supported by a lightweight aluminum tubular frame, which is attached to the trailer containing the electronic equipment. The tent is provided with two windows, a personnel access door, and two heater duct sleeves. Adjusting lines are pro-

vided on all sides of the tent to adjust the tent to suit ground conditions.

(1) *Tabulated data.*

Height: front height, 5 feet; rear height, 8 feet 7 inches.

Length: 4 feet.

Width: 8 feet.

Weight: 40 pounds.

Cube: 3.5 cubic feet.


Floorspace: 26 square feet.

(2) *Material.* The tent fabric is made of 9-ounce olive green wind-resistant cotton sateen cloth, FMWWR treated.

(3) *Door.* The personnel access door is a curved slide fastener located at the rear of the tent.

(4) *Windows.* A window assembly is located on each side of the tent.


(5) *Heating.* The tent is heated by an ex-

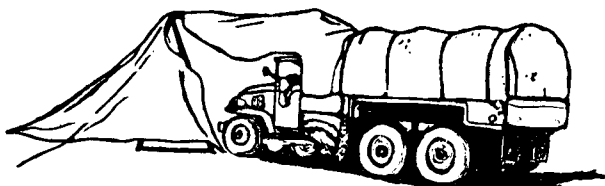


A




B

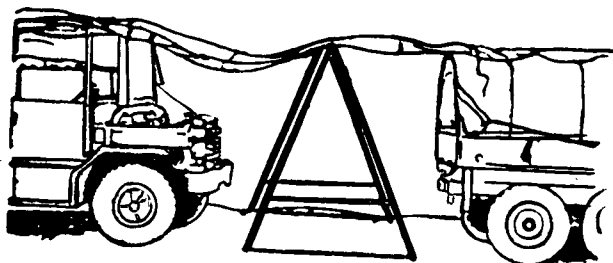

C

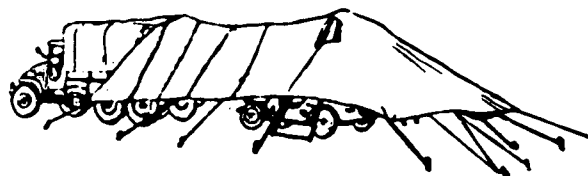


D

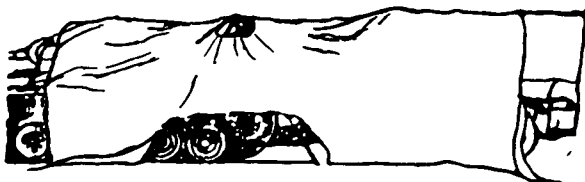


E



F

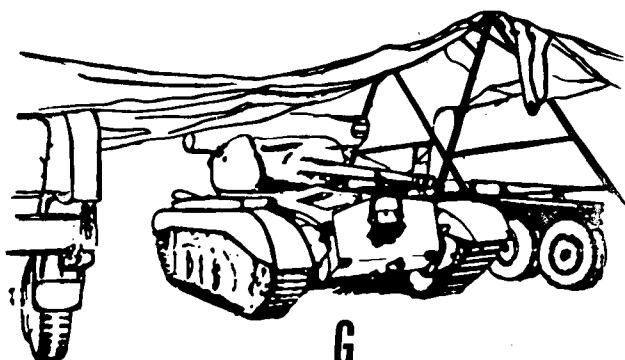

G

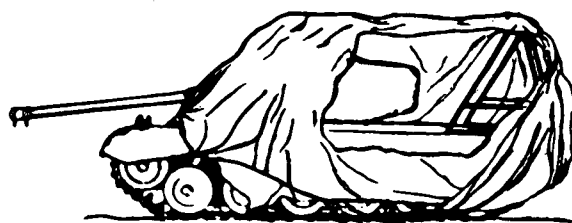


H

A—Tent erected over front of truck
B—Tent erected over rear of truck
C—Tent erected between two trucks
D—Tent erected over jeep

E—Tent erected over rear of tank and front of truck
F—Tent erected over tank track
G—Tent erected over tank between two trucks
H—Tent erected over tank

Figure 86. Uses of the tent.

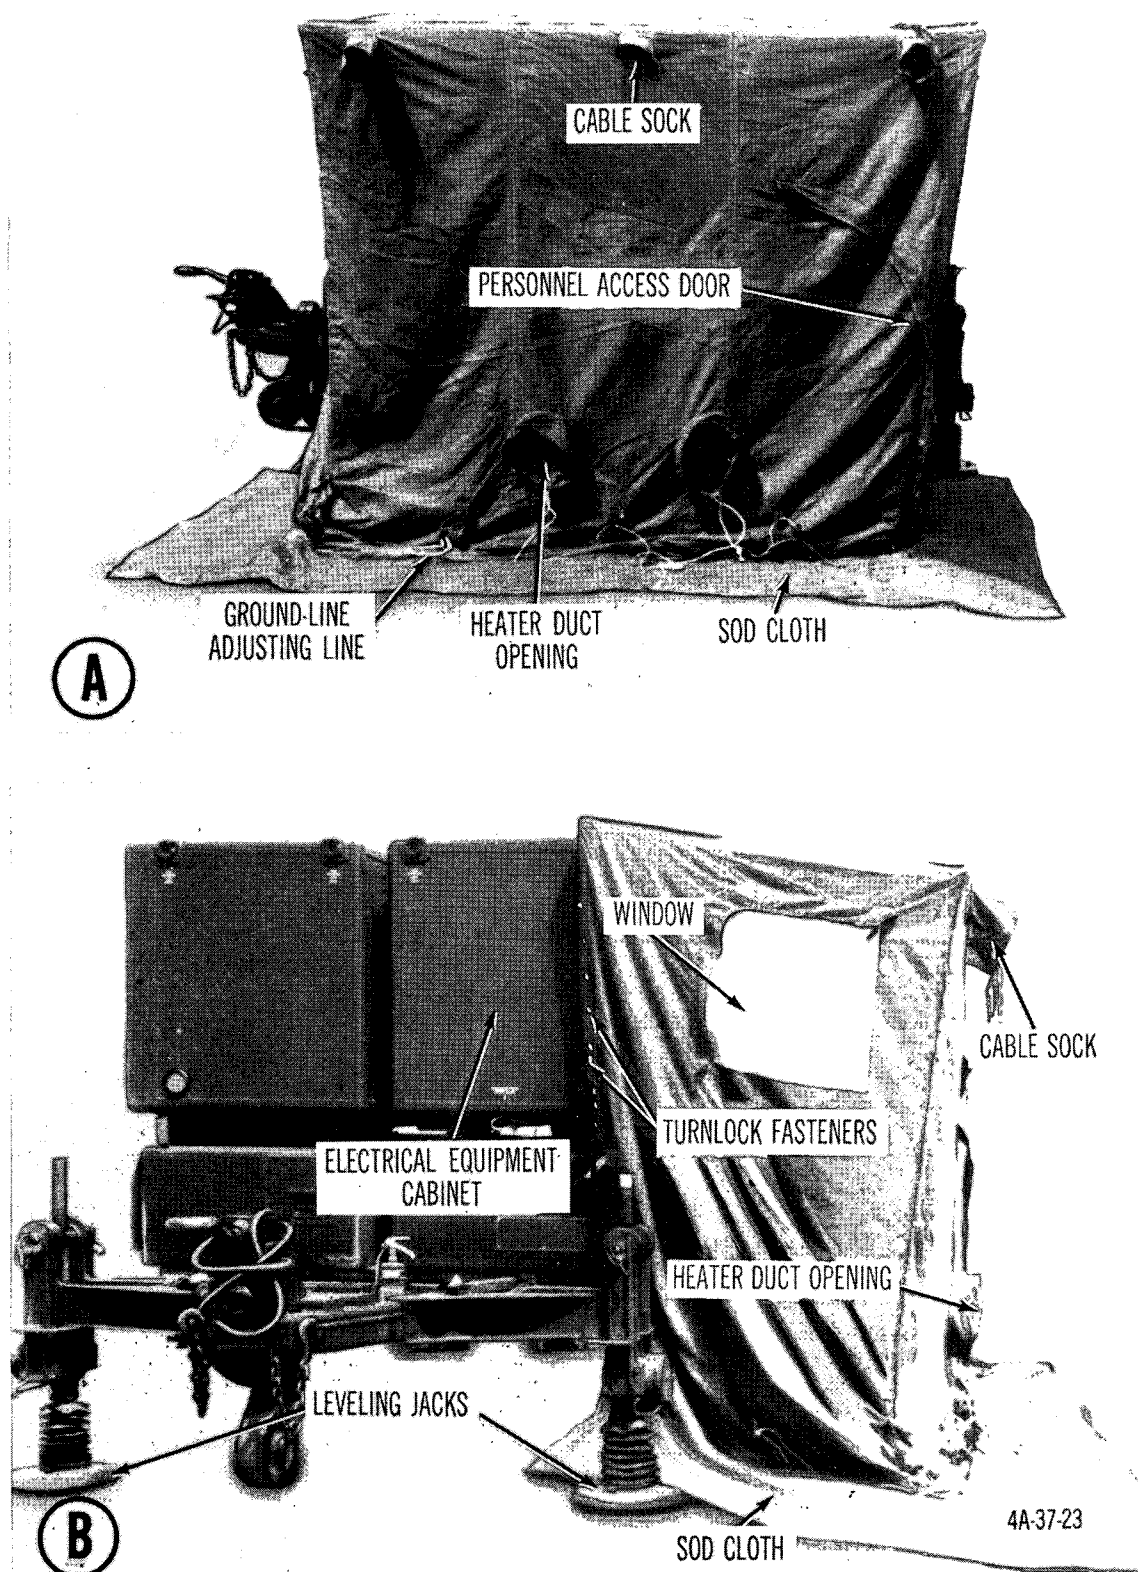

A. Rear view
B. Side view

Figure 87. Tent, maintenance, missile test shop, Hawk Missile system.

ternal heater. Heater duct sleeves are located in the rear of the tent to accommodate the heater ducts.

(6) *Cover.* A cover is provided for the tent and frame.

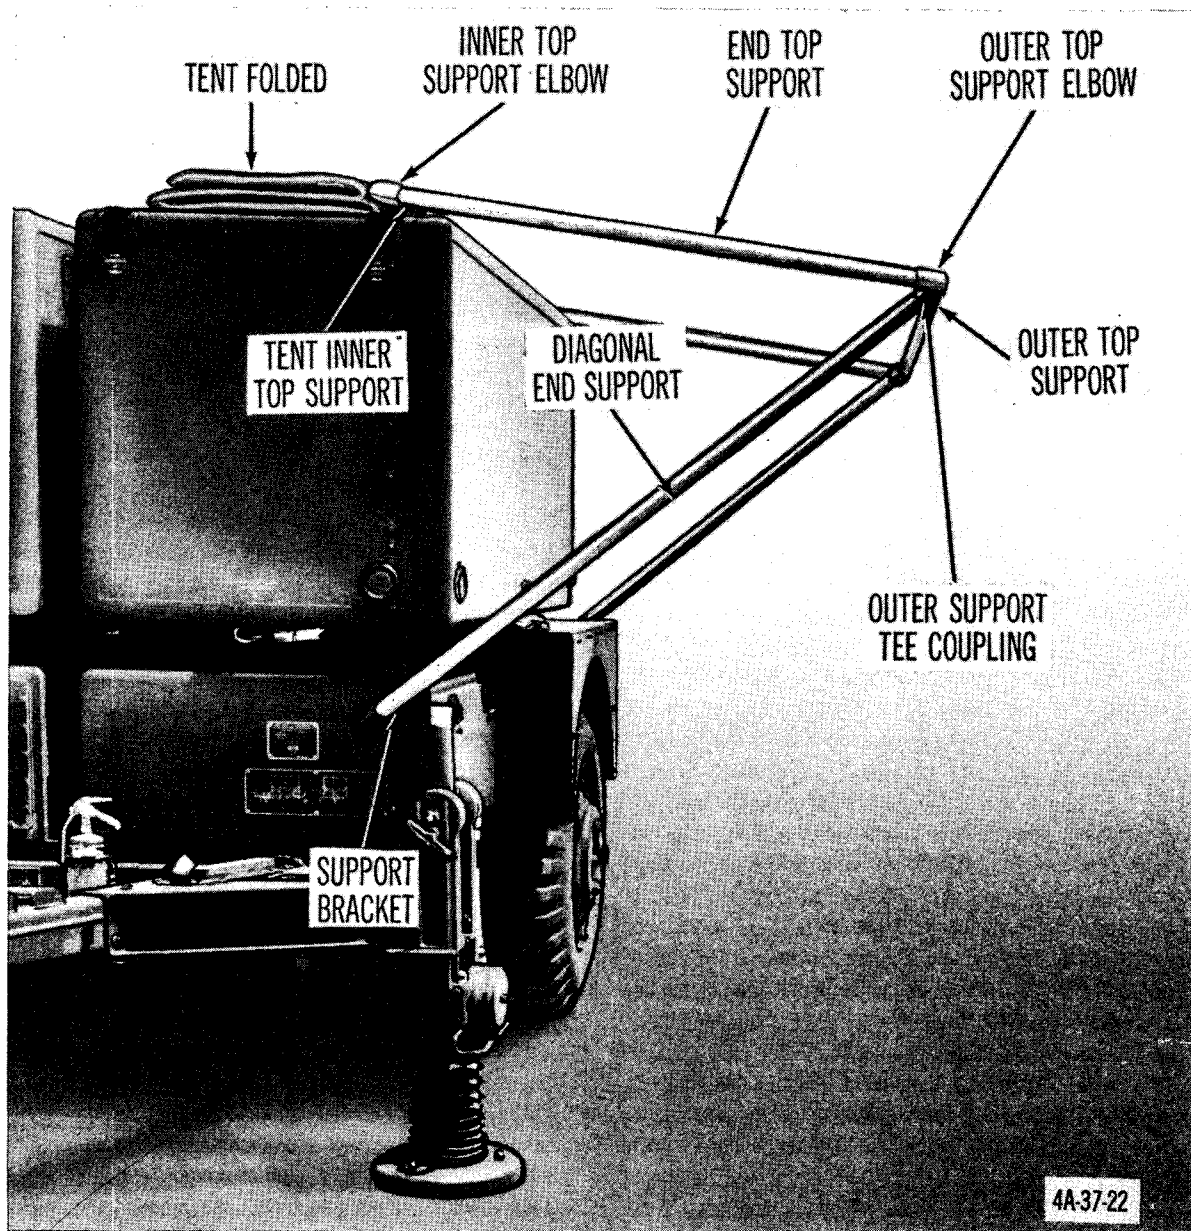


Figure 88. Attaching frame of tent, maintenance, missile test shop, to missile test shop cabinet.

c. Pitching. Before pitching the tent, level the radar trailer.

(1) *Attaching frame and tent to the radar and radar trailer.*

(a) Bolt tent inner top support to the top of the radar set group cabinet.

(b) Attach the outer top support to the

inside of the tent, using the tiedown tabs provided.

(c) Insert the diagonal side supports into the outer top support elbows and tighten the elbow screws.

(d) Insert the spindle end of each diagonal side support through the tent grommets and into the hole on each end of the rear U-channels of the pallet.

(e) Attach tent short wall to the pallet turnlock fasteners.

(f) Attach the tent sidewalls to the radar set group cabinet turnlock fasteners.

(2) *Securing tent to the ground.*

(a) Drive footstop tent pins into the ground directly under the frame outer supports and the front of the radar set group cabinet, and secure tent footstops to footstop pins.

(b) Pull sod cloth away from the tent, and weight the cloth down with rocks, dirt, snow, or other available material.

(c) When the radar set group doors are opened, the door slide-in pockets, located above each tent window, receive the door slide ends.

d. Striking. Before striking the tent, make sure the radar set group cabinet is closed.

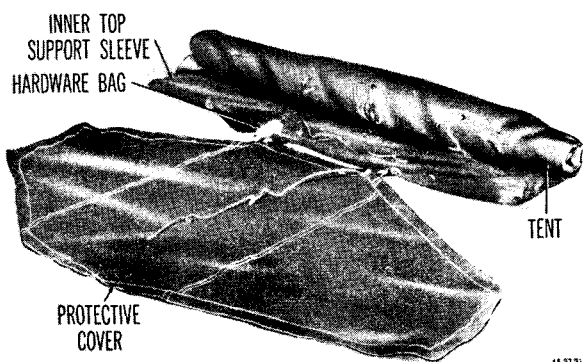


Figure 89. Folding tent, maintenance, missile test shop.

(1) Remove footstops from footstop pins, and remove the pins from the ground.

(2) Remove tent short wall and tent side-walls from turnlock fasteners.

(3) Remove diagonal side supports from U-channels of the pallet and from the tent outer top support.

(4) Unfasten tent tiedown tabs, and remove the top outer support from the tent.

(5) Remove the tent inner top support from the top of the radar set group cabinet, and remove the tent from the radar.

e. Folding (fig 89).

(1) Close personnel access door and lay tent out flat, inside up.

(2) Fold tent sides onto the tent, and roll tent toward inner top support. Insert a section of the frame with each roll. Insert the hardware bag before making the last roll of the tent.

(3) Place rolled tent on cover and secure cover with the provided ropes.

21. Console Tent, Hawk Missile System, Range Only Radar, CW Acquisition and CW Illuminator

a. Use. The console tent, Hawk Missile system, range only radar, CW acquisition and CW illuminator (fig 93), is designed to provide environmental protection to personnel during operations and maintenance of radar equipment related to the Hawk Missile system.

b. Description. The tent is supported by a lightweight aluminum tubular frame, which is attached to the trailer containing the electronic equipment. The tent is provided with two windows, a personnel access door, and two heater duct sleeves. Adjusting lines are provided on all sides of the tent to adjust the tent to suit ground conditions.

(1) Tabulated data.

Height: front height, 2 feet 5 inches;
rear height, 8 feet 3 inches.

Length: 6 feet 9 inches.

Width: 8 feet 3 inches.

Weight: 60 pounds.

Cube: 4 cubic feet.

Floorspace: 55.7 square feet.

(2) *Material.* The tent fabric is made of 9-ounce olive green wind-resistant cotton sa-teen cloth, FMWWR treated.

(3) *Door.* The personnel access door is a curved slide fastener located on one side of the tent.

(4) *Windows.* A window assembly is located on each side of the tent.

(5) *Heating.* The tent is heated by an external heater. Heater duct sleeves are located in the rear of the tent to accommodate the heater ducts.

(6) *Cover.* A cover is provided for the tent and frame.

c. Pitching. Before pitching the tent, level the radar trailer.

(1) *Attaching frame to radar set group cabinet (fig 94).*

(a) Bolt inner top support on top of the radar set group cabinet.

(b) Fold the tent on top of the radar set group cabinet, insert the side top supports into the inner top support elbows, and tighten the elbow screws.

(c) Install tee coupling and elbows onto outer top support, and insert the free ends of the side top supports into the outer top support elbows. Tighten elbow screws.

(d) Insert the round end of the lunette support into the tee coupling of the outer top support, and tighten the tee coupling screw.

(e) Insert the flat end of the lunette support into the lunette bracket, and engage the slot of the lunette support over the pins of the lunette bracket.

(2) *Attaching tent to frame (fig 93).*

(a) Place the tent over the frame, and secure it to the frame with the tiedown straps located on the inside top edges of the tent.

(b) Attach the walls of the tent to the turnlock fasteners on the radar set group cabinet and trailer.

(c) Attach the short wall to the sidewall of the tent by means of the slide fastener.



(3) *Securing tent to the ground (fig 93).*

(a) Drive footstop tent pins into the ground directly under the frame outer supports and the front of the equipment cabinet.

(b) Secure the tent footstops to the footstop pins and adjust the groundline adjusting lines for existing ground conditions.

(c) Drive guy line tent pins into the ground, and attach and tighten guy lines to pins.

(d) Pull sod cloth away from the tent,

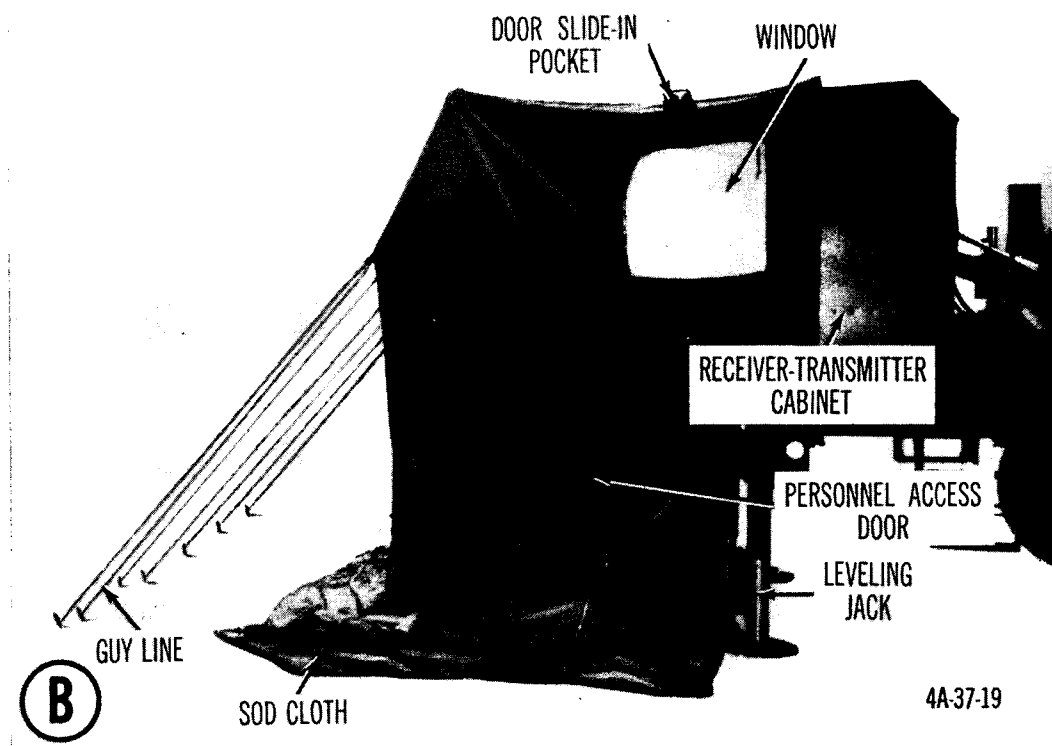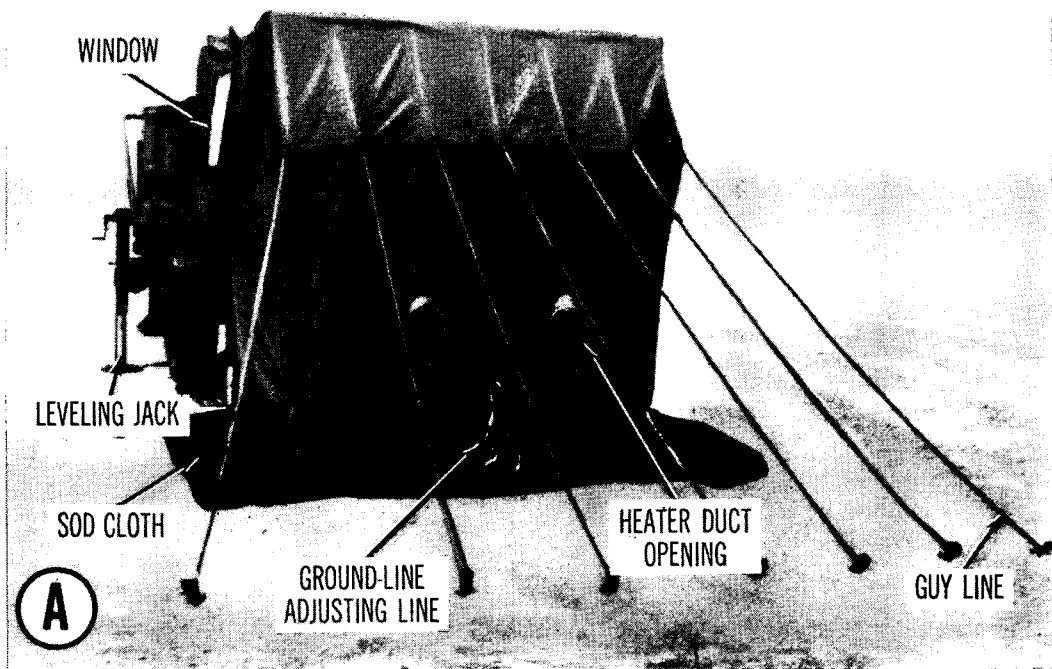

A. Rear view
B. Side view


Figure 90. Tent, pulse acquisition, radar, front, Hawk Missile system.

and weight the cloth down with rocks, dirt, snow, or other available material.

d. *Striking.* Before striking the tent, close the radar set group cabinet cover.

(1) Remove footstops and guy lines from tent pins, and remove all tent pins from the ground.

(2) Release the turnlock fasteners and

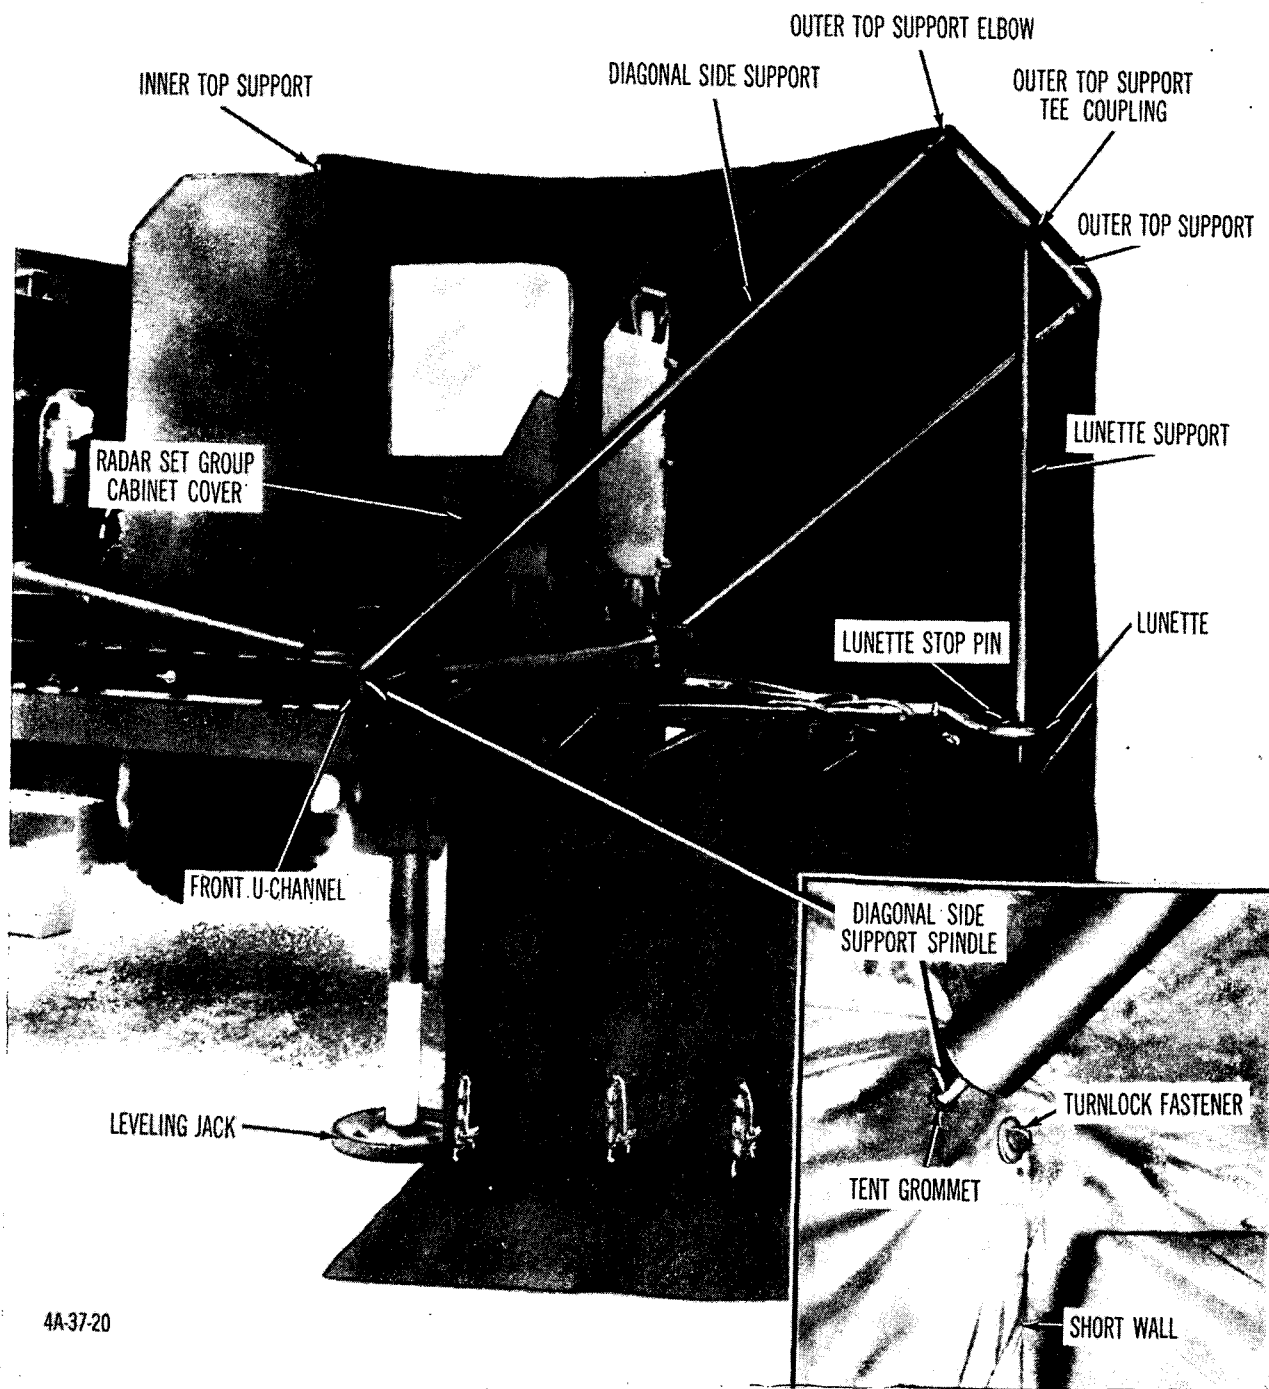

4A-37-20

A. Rear view
B. Side view

Figure 91. Pitching tent, pulse acquisition radar, front, Hawk Missile system.

slide fasteners, and remove the walls of the tent from the radar set group cabinet and trailer.

(3) Release the tiedown straps and remove the tent from the tent supports.

(4) Remove the lunette support from the lunette and outer top support.



(5) Remove the side top supports.

(6) Remove tent inner top support from the top of the radar set group cabinet, and remove the tent from the radar.

e. *Folding* (fig 89).



(1) Close all slide fasteners and lay tent out flat, inside up.

(2) Fold tent sides onto the tent, and roll the tent toward the inner top support. Insert

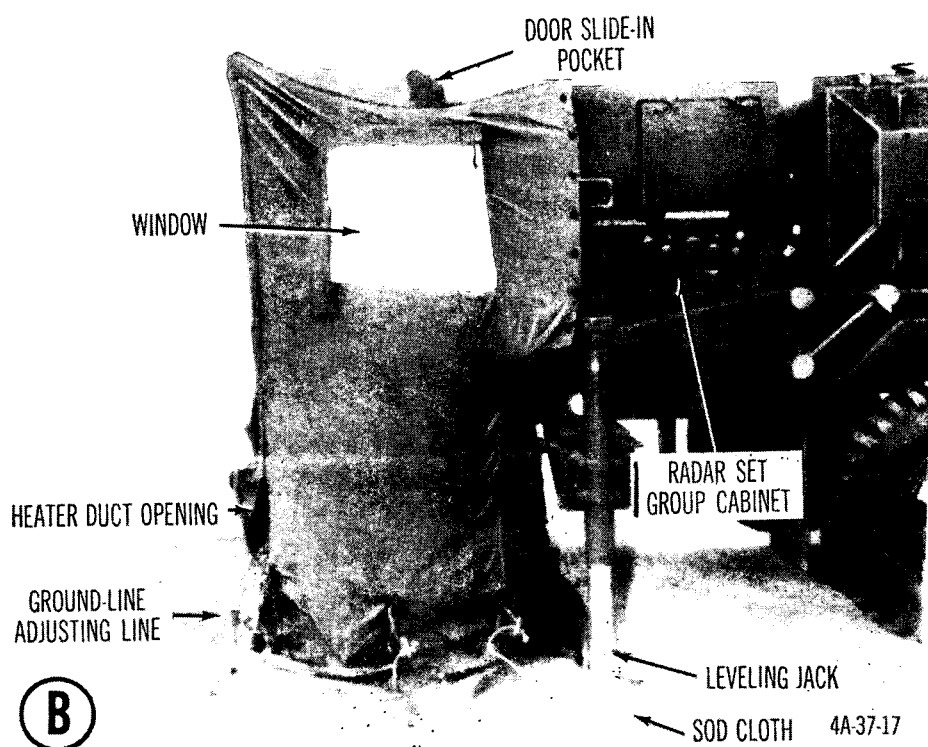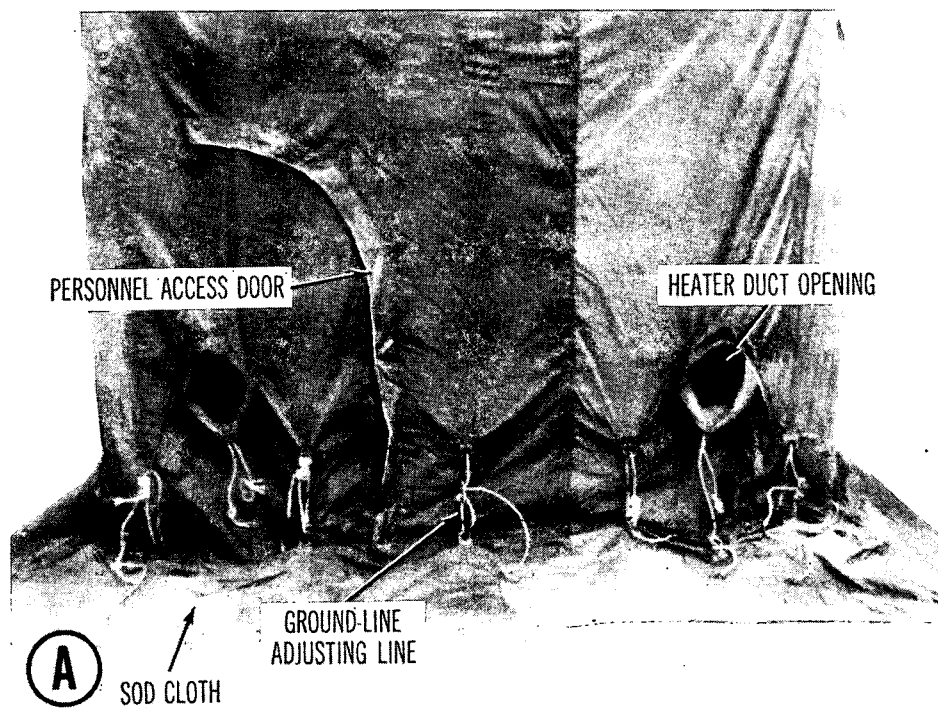

- A. Rear view
B. Side view

Figure 92. Tent, pulse acquisition radar, aft, Hawk Missile system.

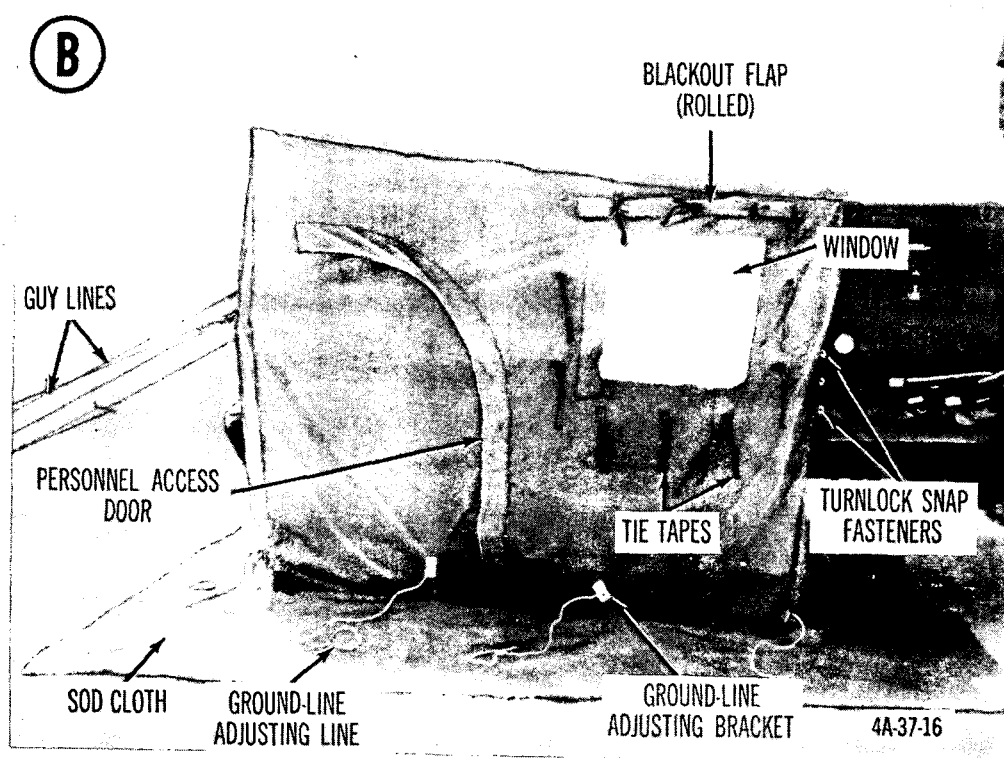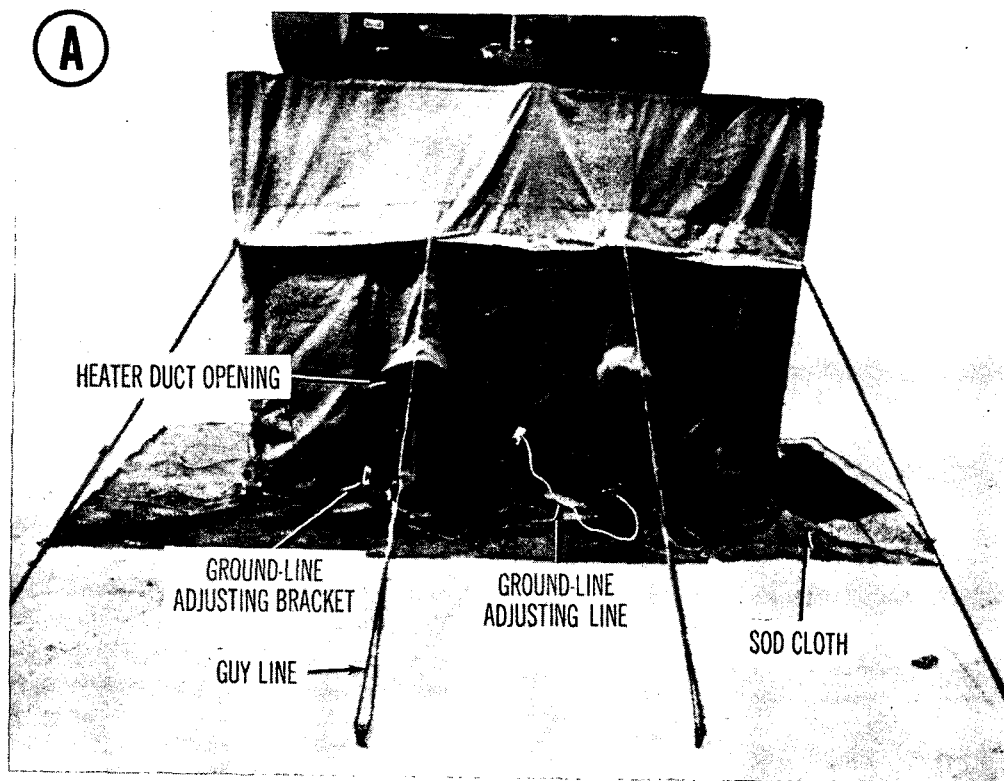


A. Rear view
B. Side view

Figure 93. Console tent, Hawk Missile system, range only radar, CW acquisition and CW illuminator.

a section of the frame with each roll; insert the hardware bag before the last roll of the tent.

(3) Place rolled tent on cover and secure cover with the provided ropes.

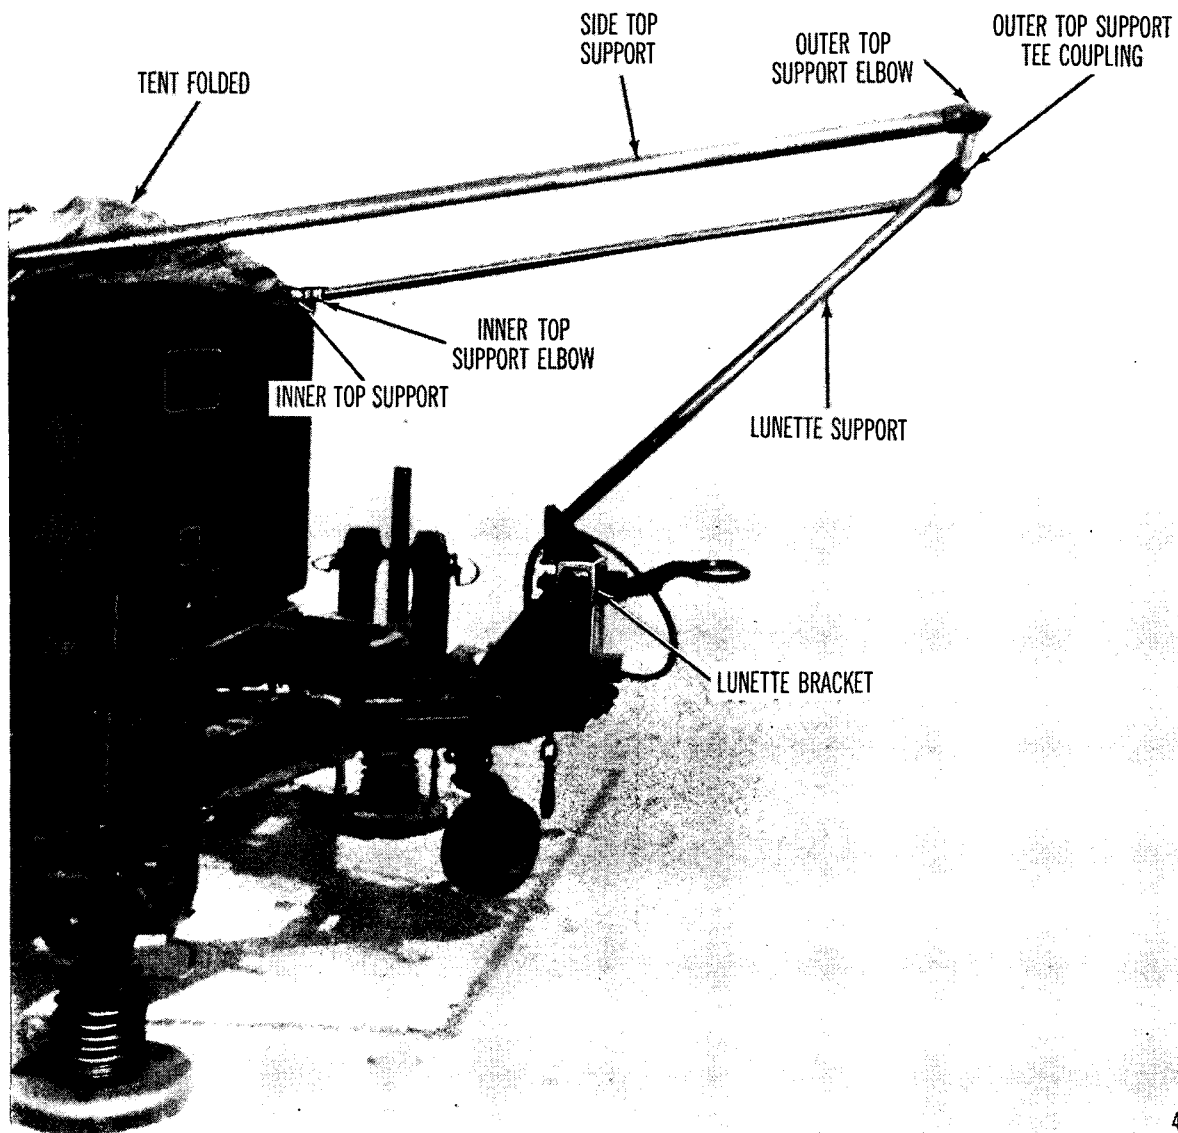

4A-37-15

Figure 94. Attaching frame of console tent, Hawk Missile system, range only radar, CW acquisition and CW illuminator, to radar set group cabinet.

CHAPTER 4

MARKERS AND SCREENS

22. Large Red Cross Marker

a. *Use.* The large Red Cross marker is used by the Medical Corps. It is designed to be spread flat on the ground to indicate a hospital area.

b. *Description.* The marker is composed of five 20-foot-wide sections made of 9.68-ounce vinyl-coated cotton duck. The marker weighs 1,225 pounds.

c. *Pitching.* Spread sections on ground in proper sequence: end section, intermediate section, center section, intermediate section, and end section. Fasten sections together by inserting pins through overlapping grommets of sections and through grommets around edge of marker so that a large red cross on a white field is formed.

d. *Striking.* Remove pins and separate sections.

e. *Folding.*

(1) Fold each of the five sections separately. Fold each section twice toward center along its long dimension. Then, in 2-1/2-foot folds, fold ends of each section toward center. Place each folded section on a cover.

(2) Place the 55 pins provided with each section in a pin roll and close roll securely, tying with tie tapes. Place each pin roll, with pins, on top of a folded section.

(3) Close flaps of each cover securely and tie tielines tightly through grommets, making sure that no part of marker is exposed.

23. Small Red Cross Marker

a. *Use.* The small Red Cross marker (fig 95) is used by the Medical Corps. It is designed to be lashed down over the ridge of an A-shaped tent (usually a general purpose tent) to indicate the use of that tent for medical purposes.

b. *Description.* The marker is made of 9.68-ounce vinyl-coated cotton duck bearing two red crosses on a white field. It is 8 feet 6 inches long and 19 feet 6 inches wide, weighs 25 pounds, and has a cubage in storage of 1.5 cubic feet. The marker is provided with center guy lines, corner guy lines, and tent slips so that it can be lashed down securely.

c. *Pitching.*

(1) Spread Red Cross marker over roof of tent on which it is to be displayed. Place center of marker over ridge of tent so that one of the Red Cross insignia is on each side of tent roof and one end of each guy line falls to each side of the tent.

(2) Spread each side of marker out smooth by adjusting the corner lines.

(3) Attach corner guy lines and center guy lines to pins staked out for tent lines. Tighten and adjust corner guy lines and center guy lines by adjusting tent slips.

d. *Folding.* Remove the two center guy lines and the eight corner guy lines from pins. Spread marker flat on ground and coil all lines except two of the corner guy lines at one end of marker. Fold marker twice toward center


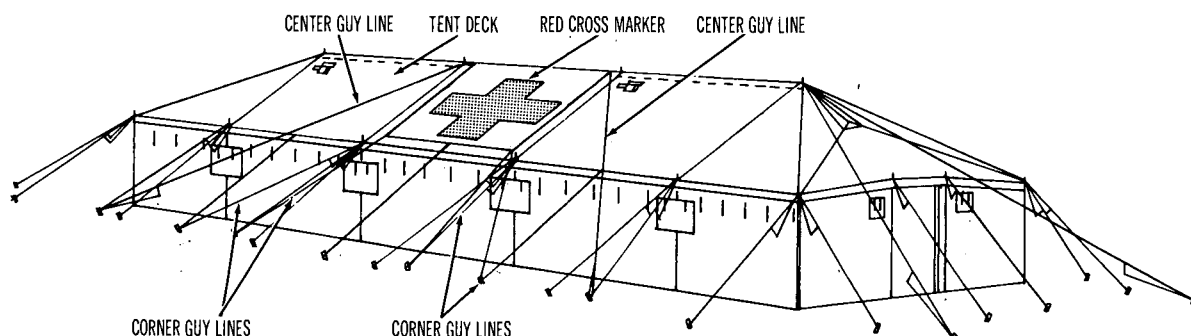


Figure 95. Small Red Cross marker attached to tent, general purpose, large.

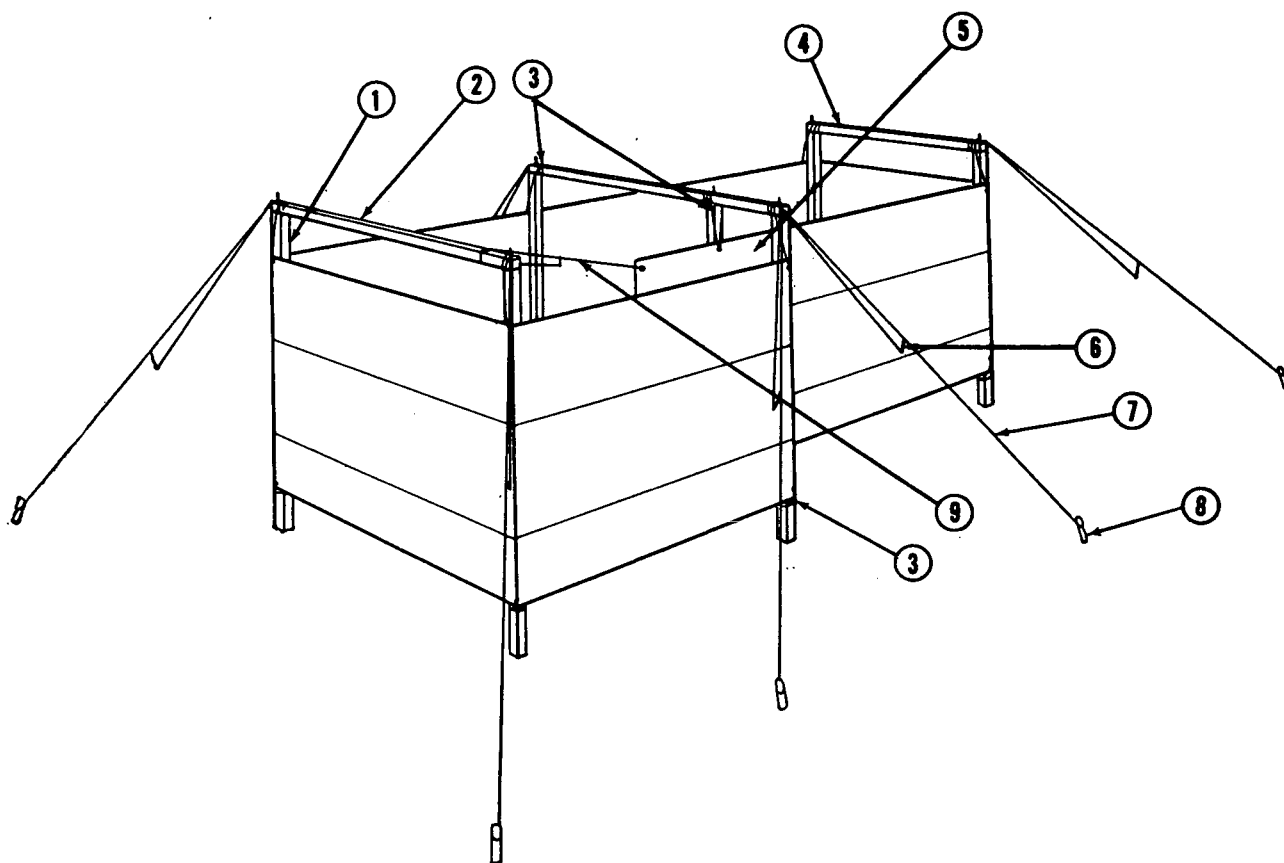

- | | | |
|---------------------|---------------------|-------------------------|
| 1 7-foot tentpole | 4 7-foot ridge pole | 7 Guy line |
| 2 9-foot ridge pole | 5 Entrance | 8 16-inch wood tent pin |
| 3 Tie line | 6 Tent slip | 9 Tie line |

Figure 96. Screen, latrine.

along its long dimension. Then, in 2-1/2-foot folds, fold ends toward center, and tie with the two corner guy lines.

24. Screen, Latrine

a. Use. The screen, latrine, FMWWR, complete with cover, pins, and poles (fig 96) is issued to units in the field for use as an outdoor latrine. It may also be used by graves registration personnel to conceal remains from view until identifications procedures and preparation of remains for burial have been completed.

b. Description.

(1) *Dimensions.* The screen is a canvas panel, 55 feet long and 5 feet 3 inches wide. When erected, the screen is rectangular, 18 feet long, 9 feet wide at one end, and 7 feet wide at the other end. The difference in width is for the purpose of forming a 2-foot entrance on one side of the screen. The entrance side consists of a 12-foot section and a 9-foot section, which overlap by approximately 3 feet to give depth to the entrance.

(2) *Floorspace.* The floorspace of the

screen, when erected, is approximately 144 square feet.

(3) *Material.* The screen is made of 9.68-ounce duck.

(4) *Cover.* The screen is provided with a cover for use when it is in storage or is being transported.

c. Ground Plan. Before pitching screen, study the ground plan carefully (fig 97).

d. Pitching. The screen can be pitched by six men in approximately 20 minutes.

(1) *Preliminary procedure* (1, fig 98).

(a) Unfold screen and lay it out on ground, following ground plan. Place end having both a long and a short tieline, as differing from the end having two short tielines, at inside corner of entrance.

(b) Drive a tent pin at inside corner of entrance, following ground plan. Attach short tie line on bottom of screen to this pin.

(2) *Connecting upright poles to ridge poles* (2, fig 98).

(a) Connect two upright entrance poles and one upright side pole to a 9-foot ridge pole.

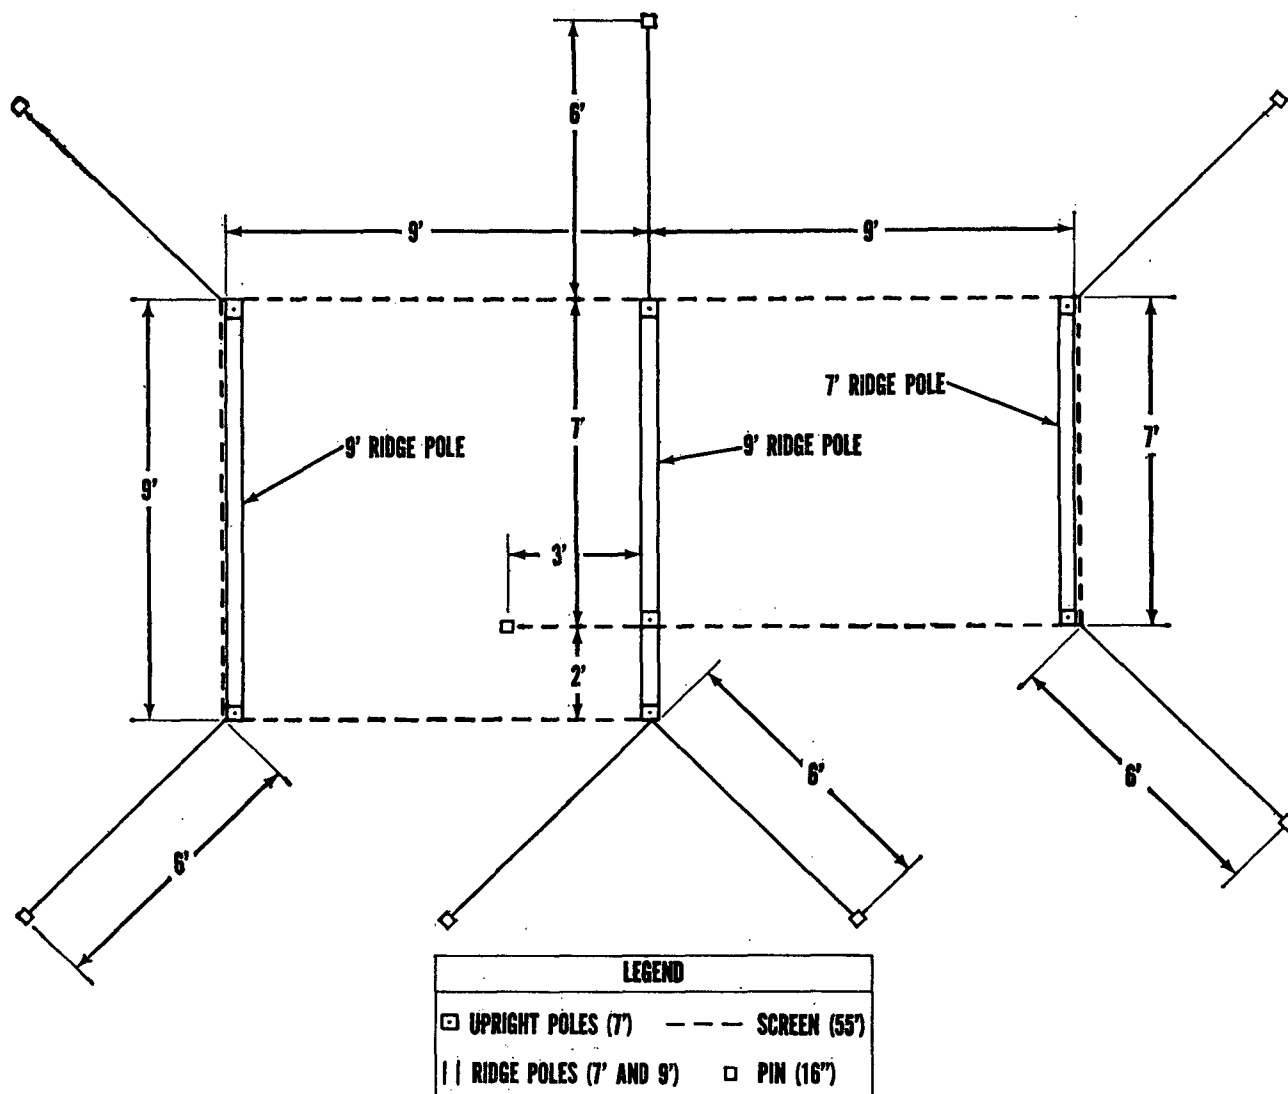


Figure 97. Ground plan of screen, latrine.

(b) Connect two upright side poles to one 7-foot ridge pole.

(c) Connect two upright side poles to one 9-foot ridge pole; before assembling, loop the 11-foot tieline over ridge pole.

(3) *Raising and securing center poles in position inside screen* (3, fig 98). Raise the three center upright poles connected to the 9-foot ridge pole to a vertical position on inside of screen near center. Hold upright poles in position and drive in two center guy line pins 6 feet from outside door upright pole, according to ground plan. Drive a third guy line pin 6 feet from upright pole on opposite side of screen and in line with the three upright poles. Place guy lines over these pins and over spindles of upright poles.

(4) *Raising screen at center* (4, fig 98). Raise screen at center and tie short tielines to center ridge pole so that screen is 6 inches off ground at bottom.

(5) *Raising end poles at narrow end of screen* (5, fig 98).

(a) At narrow end of screen, raise the two end upright poles, connected to the 7-foot ridge pole, to a vertical position.

(b) Hold upright poles in position and drive in an end guy line pin 6 feet from each upright pole, according to ground plan. Place guy lines over these pins and over spindles of upright poles.

(c) Raise screen at end and tie short tielines to ridge pole so that screen is 6 inches off ground at bottom.

(6) *Raising end poles at wide end of screen* (6, fig 98).

(a) At wide end of screen, raise two end upright poles connected to the 9-foot ridge pole to a vertical position.

(b) Hold upright poles in position and drive in an end guy line pin 6 feet from each upright pole, according to ground plan. Place

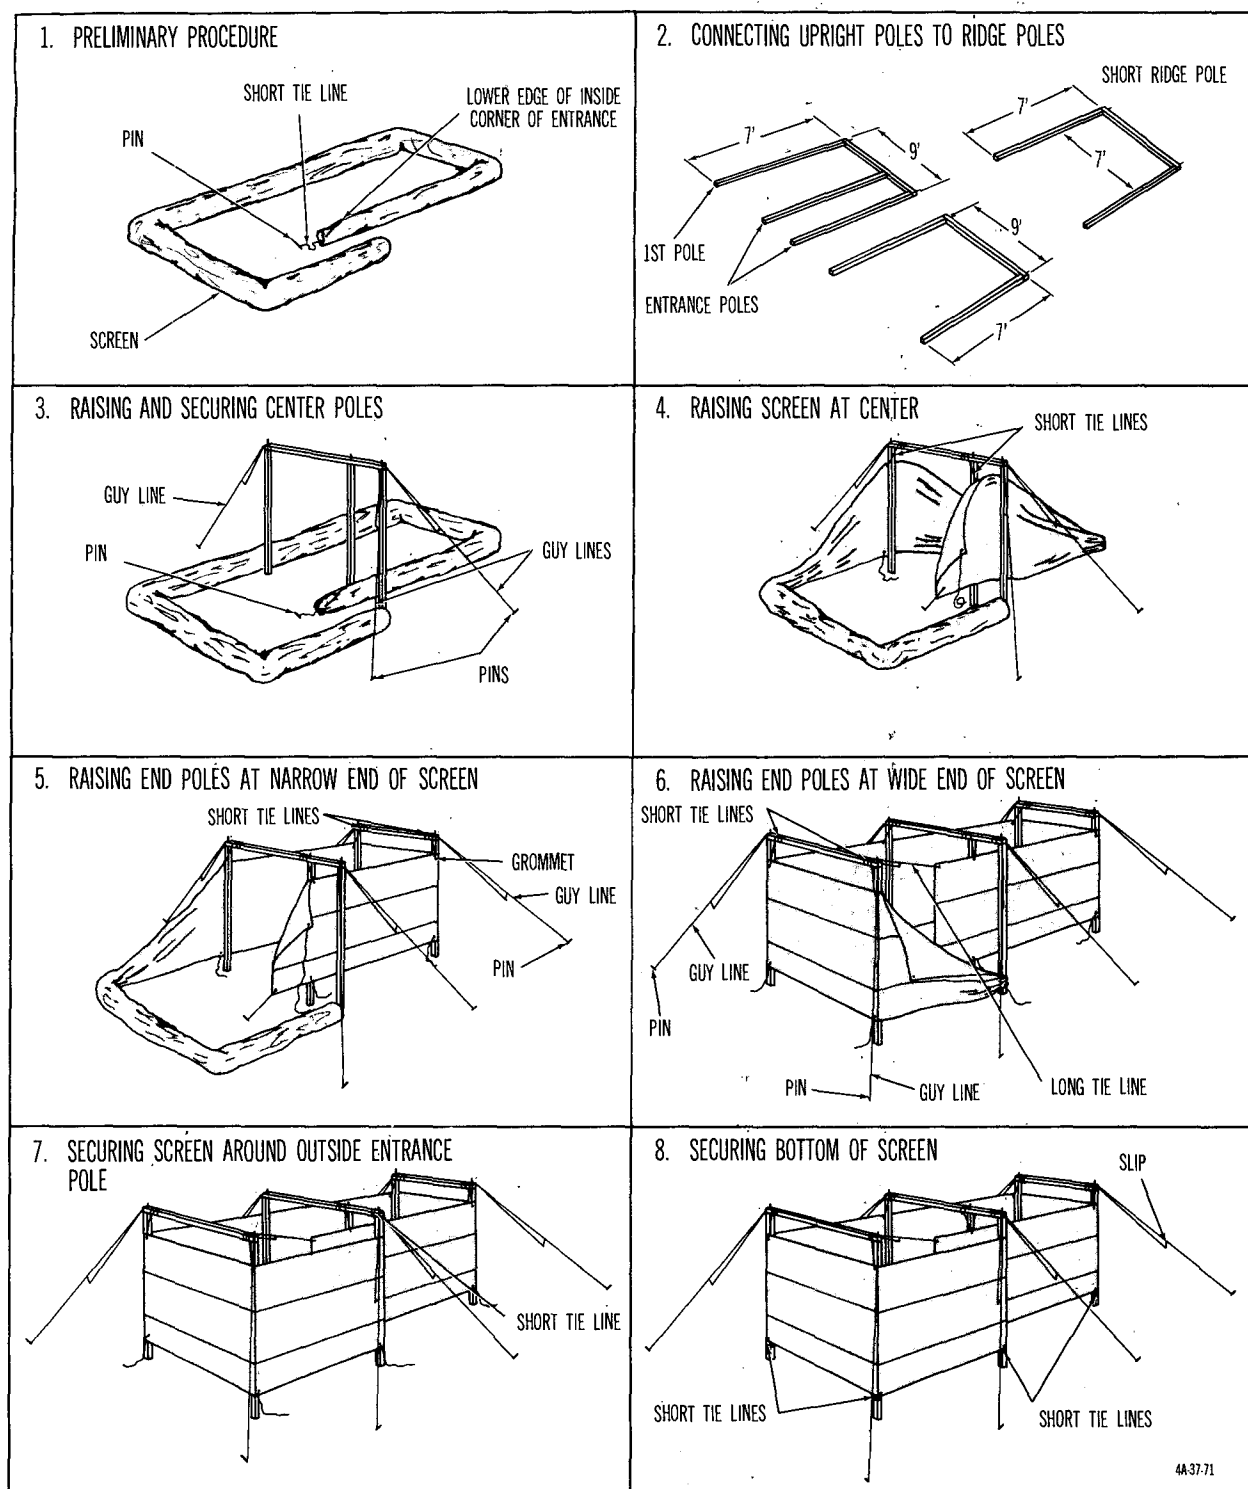


Figure 98. Steps in pitching screen, latrine.

guy lines over these pins and over spindles of upright poles.

(c) Raise screen at end and tie short tie-lines to ridge pole so that screen is 6 inches off ground at bottom. Adjust and tighten the long (11-foot) tieline from top of inside entrance of screen to the end 9-foot ridge pole so that screen is 6 inches off ground at bottom.

(7) *Securing screen around outside entrance pole* (7, fig 98). Place end of screen

around outside entrance upright pole and tie short tie line at end of screen to center ridge pole so that screen is 6 inches off ground at bottom.

(8) *Securing bottom of screen* (8, fig 98). Tie all short tie lines at lower edge of screen to upright poles. Adjust and tighten all guy lines.

e. Striking.

(1) Untie all tie lines on lower edge of screen from upright poles.

(2) Untie outside of entrance from center ridge pole.

(3) Untie screen at wide end and drop it to the ground. Detach guy lines at wide end, and disassemble ridge pole and two upright poles and place them in a pile to one side.

(4) Untie narrow end of screen. Detach guy lines and place ridge pole and upright poles with poles previously placed to one side.

(5) Follow same procedure with center ridge pole. Collect the eight tent pins and seven guy lines and place them near ridge poles and upright poles.

f. Folding.

(1) Place screen flat on ground and smooth it out.

(2) Make two folds. To make the first fold,

pull one end over the other. Repeat this step, placing folded edge even with the two ends of the screen. Be sure to smooth out canvas after each fold. The screen can be controlled better if the first two folds are made into the wind.

(3) Continue folding. Fold either top or bottom edge over one-third of width of screen. Then fold other edge completely over first fold. Put tielines and guy lines inside folds at one end of screen.

(4) Form final bundle by making a 2-foot fold from each end of screen toward center. Repeat this step twice, leaving the two folded sections 2 or 3 inches apart. Place one folded section over the other. Place bundle on cover, folding edges of cover in. Tie with cover tielines.

CHAPTER 5

TENT SUPPORT

25. Types of Tent Frames

The types of tent frames described in this manual are the A-shaped frame, the arch-shaped frame, and those frames that are attached to vehicles or trailers.

a. A-shaped tent frames discussed in the manual are made of either steel or aluminum. This type frame is hinged at the peak and at the eaves of the arches or truss and wall assemblies. Braces or headers secure the roof trusses or segments in position when the tent is being erected. Purlins, eave strut assemblies, and/or ridge assemblies, connected between arch assemblies or truss and wall assemblies, extend the tent frame to the proper length.

b. Arch-shaped tent frames are made of either metal or wood.

(1) The wood frame arches are hinged so that arch segments can be folded for transport. Wood purlins, connected between arches, extend the tent frame to the proper tent length.

(2) The metal frame arch segments are assembled by inserting one segment end into another segment end and fastening the two arch segments together with locking pins, bolts, or purlins. Metal purlins, connected between arches, extend the tent frame to the proper tent length.

c. The tent frames that are attached to vehicles or trailers are made of aluminum tubing or pipe, and are box-shaped. These frames are held together by tee couplings, elbows, and bolts.

26. Tentpoles

a. *Types of Tentpoles.* Tentpoles (fig 99) are of two types: upright and ridge. A ridge pole is usually fastened to two upright center poles by placing the spindles of the upright poles through holes at the ends of the ridge pole.

b. *Description.*

(1) Poles are made of wood except the magnesium adjustable telescopic pole used in the 10-man arctic tent, small general purpose

tent, and the 5-man lightweight hexagonal tent.

(2) Poles may be made of one piece or they may be made in sections which can be joined.

(3) Each pole or pole section is marked to show type, length, and section component; for example, "Upright— male section for 12 ft. 3 in. pole." This marking is important and should be taken into consideration in all cases to make sure that each tent pole is in its proper place.

(4) When tents are being pitched, the upright poles are usually sunk from 2 to 4 inches into the ground.

27. Tent Lines

a. *Types of Tent Lines.* Tent lines may be made of manila, polyester, or metal. They will also vary in length from a 19-inch-long foot-stop to a 64-foot-long guy line.

(1) *Manila lines.* Exterior lines of most tents are manila lines. Guy lines of this type will shrink when wet and, as a result, should be loosened during rainy weather so that when they shrink they will not become tight enough to tear the tent.

(2) *Nylon lines.* Nylon lines are normally found on the interior of tents or on tent liners.

(3) *Metal lines.* The metal guy line assemblies are used with arrowhead-type ground anchors. These assemblies are approximately 11 feet long and consist of a metal cable, metal adjusting beads, a toggle bar, an S-hook, and a locking toggle. Adjustment of the guy line is made by sliding the adjusting beads through the locking toggle and then locking the toggle in position.

b. *Knots.* Four knots commonly used in tent pitching are the clove hitch, the round turn and two half hitches, the square knot, and the rolling hitch (fig 100).

(1) *Clove hitch.* The clove hitch is used to fasten a line to an anchorage. It will tighten as tension is applied, no matter which end of the hitch is pulled.

(2) *Round turn and two half hitches.* The round turn and two half hitches is used to fas-

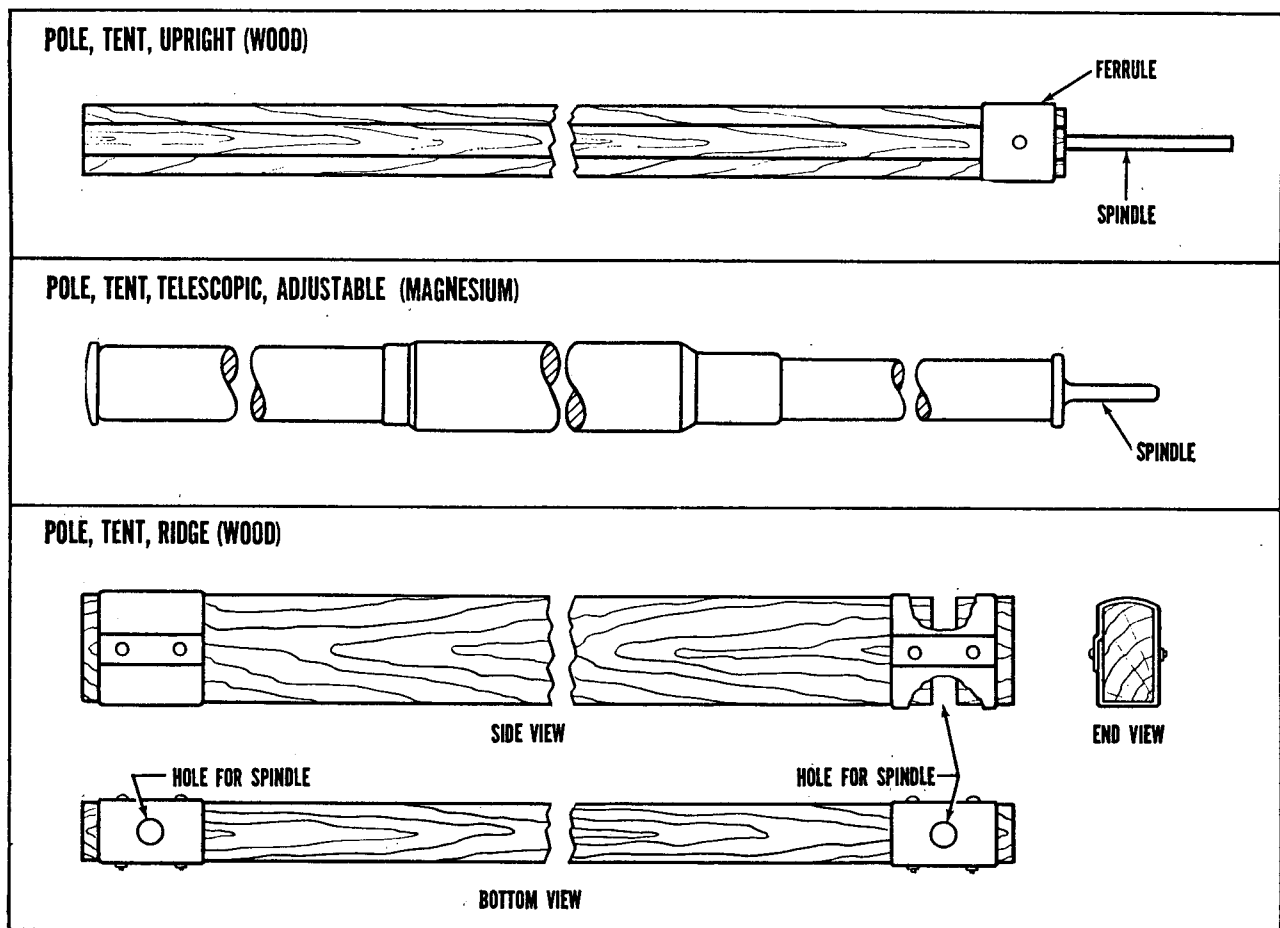


Figure 99. Tentpoles.

ten a line to an anchorage. For permanency, the running end should be seized to the standing part.

(3) *Square knot.* The square knot is used to join two lines of equal size.

(4) *Rolling hitch.* The rolling hitch is used to fasten one line to another, especially a small line to a larger one.

28. Anchoring Systems

a. Tent Pins.

(1) *Types of pins.* The types of pins (fig 101) used with tents described in this manual are the 16-inch, the 24-inch, and the 36-inch wood pins, the 9-inch aluminum pins, and the 12-inch steel pins. Ordinarily, the 16-inch wood pins are used for footstops and the 24-inch wood pins are used for ridge and guy lines. The 9-inch aluminum pins and the 12-inch steel pins are used under cold weather conditions and under hard ground conditions.

(2) *Method of driving pins.*

(a) All pins except the 24-inch guy line pins, 24-inch eave line pins, and the 16-inch latrine screen pins are driven vertically into the ground. The 24-inch guy line pins, 24-inch eave line pins, and the 16-inch latrine screen pins are driven into the ground at a 60 degree angle, with the top of the pins leaning toward the tent.

(b) Wood pins are driven with the notches away from the tent.

(c) Steel pins are driven with the rope retainer portion of the pin away from the tent.

(d) Aluminum pins are driven with the convex side of the pin away from the tent.

b. Arrowhead Ground Anchors.

(1) *Description.* Arrowhead ground anchors are issued in a kit which also includes a driving rod and a driving rod holder (fig 102).

(2) *Method of driving anchors.* The arrowhead ground anchors are driven vertically into the ground for at least 2 feet and not more than 2-1/2 feet. After the anchor has been driven into the ground, the anchor wire should be given a vigorous tug to upset the anchor


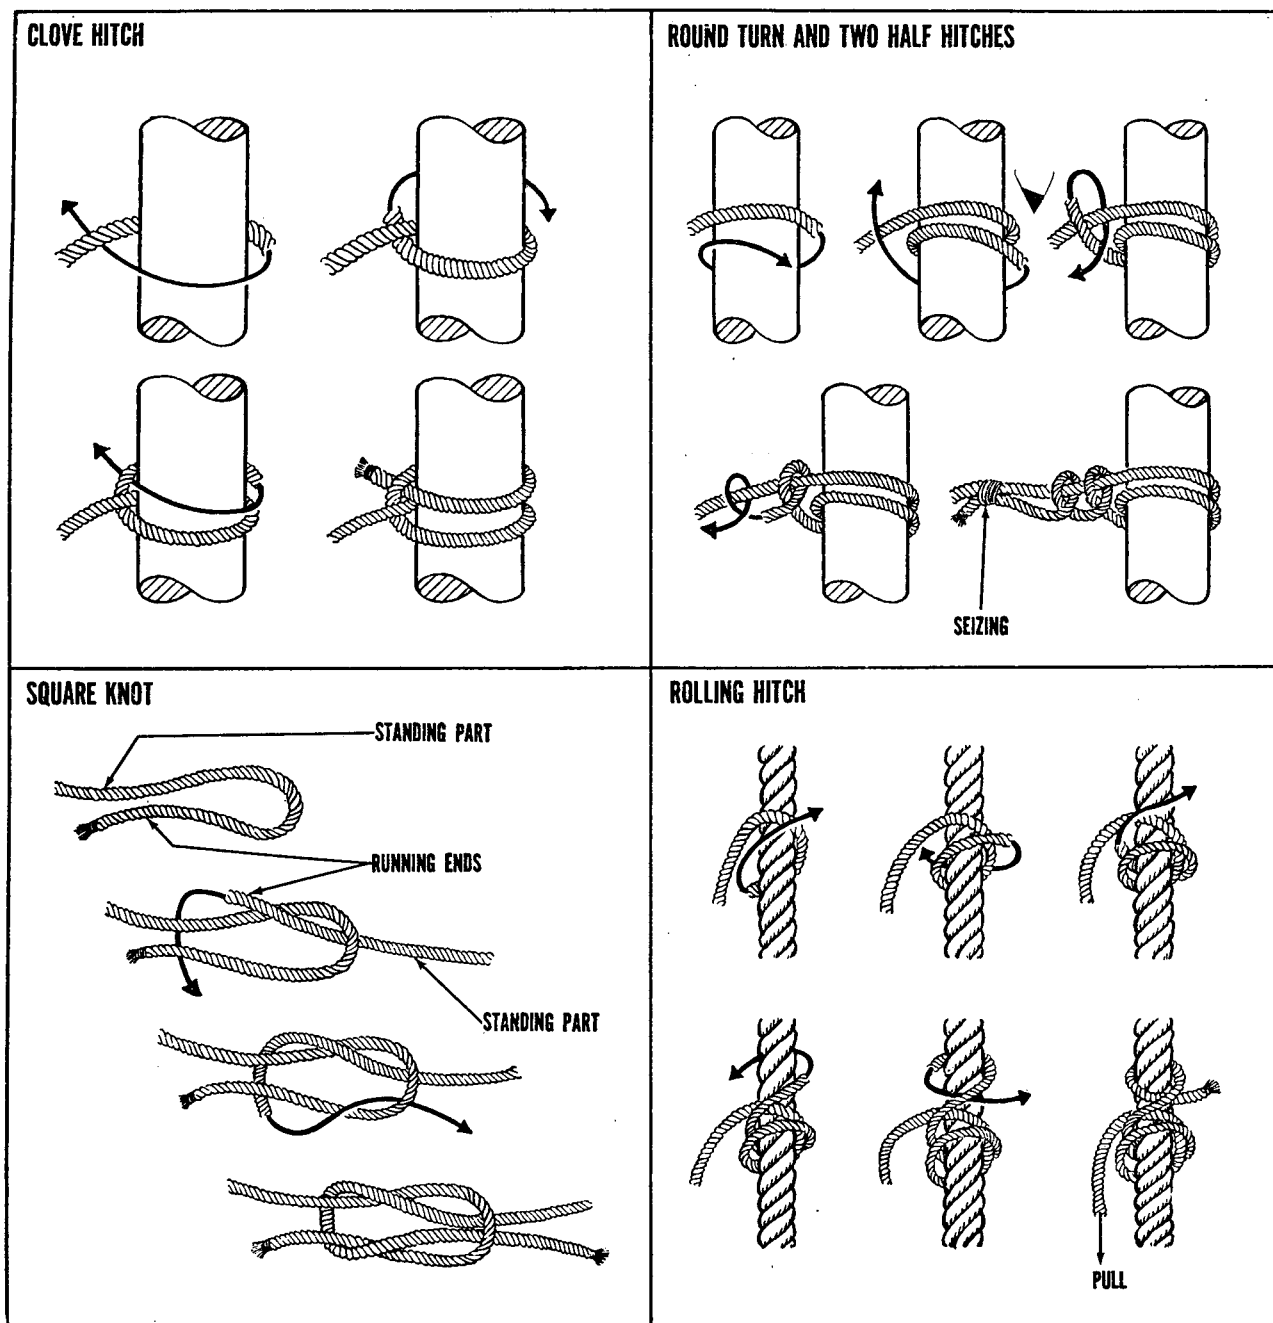


Figure 100. Knots used in tent pitching.

in the ground. This action will insure stability of the ground anchor. In arctic regions, steel

tent pins are used in lieu of arrowhead ground anchors.




PIN, TENT, WOOD, 36-INCH




PIN, TENT, WOOD, 24-INCH



PIN, TENT, WOOD, 16-INCH




PIN, TENT, ALUMINUM, 9-INCH



PIN, TENT, STEEL, 12-INCH

4A-37-80

Figure 101. Tent pins.

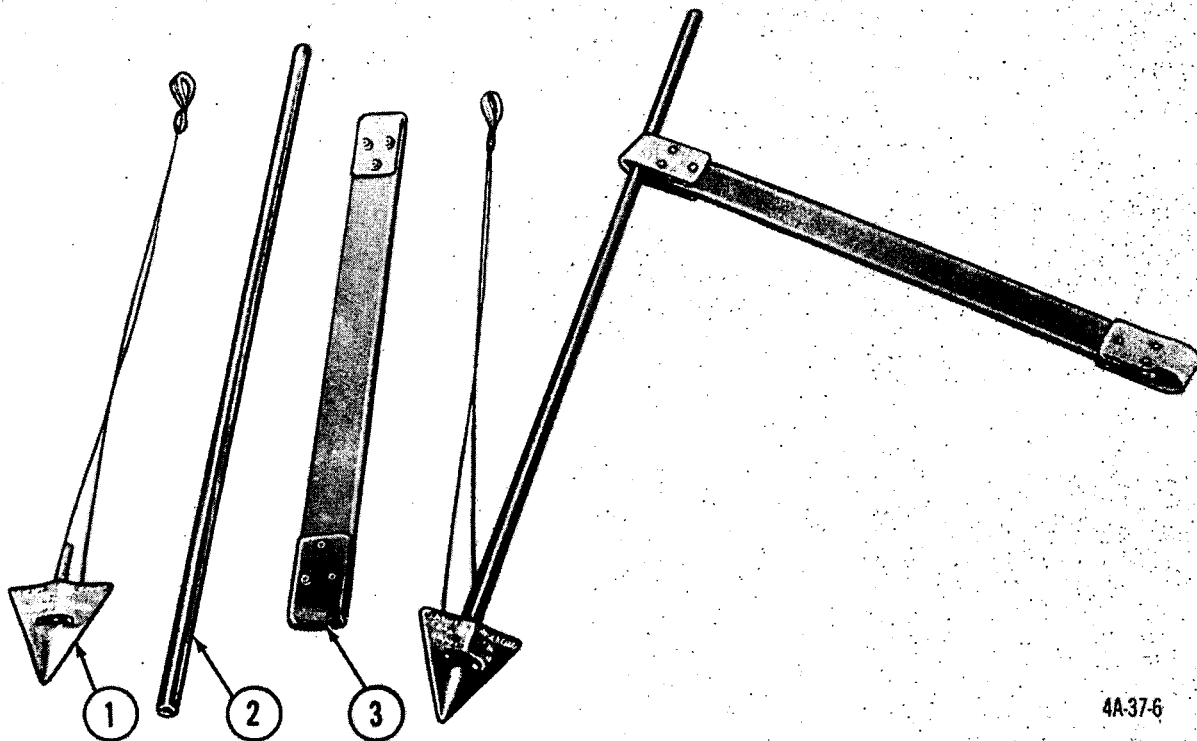

4A-37-6

- 1 Arrowhead ground anchor
- 2 Driving rod
- 3 Driving rod holder

Figure 102. Ground anchor with driving rod and driving rod holder.

CHAPTER 6

SITE SELECTION, HEATING, AND VENTILATION

29. Choosing Tent Site

The following points should be considered in choosing a tent site:

a. The ground should be level and free from projecting tree roots and rocks. When such a spot is not available, a place can often be leveled and cleared. In the woods, moss and rocks can be used to level the ground.

b. The ground should be high enough for drainage. Drainage can be improved by trenching around tents and digging an outlet ditch to divert water in the desired direction..

c. The tent should be protected from wind and storm.

d. An area having tough grass turf is desirable.

e. In woods, the location should be away from dead trees or trees with large dead branches.

f. In hot weather, a shady area free from underbrush is desirable.

g. The tent should be placed far enough from a river, lake, or other body of water to be above the high-water mark.

h. In mountainous country, the tent should never be placed in a canyon or next to a dry creek bed. Such places have been known to fill up with rushing torrents in a remarkably short time. The tent should never be placed at the base of a cliff or steep mountainside, where there may be danger from avalanches and falling rocks.

30. Pitching Tent in Snow

a. Before selecting a campsite on snow-covered ground, prod surface with an ice or ski pole to see whether snow conceals any crevices. It may be impossible to find an area entirely without crevices, but it is possible to avoid accidents by knowing where they are.

b. When an adequate site on snow has been found, pack snow hard by stamping on it with skis or snowshoes, or better still, shovel top snow off until firm snow is found below.

c. Pitch tent so that entrance is not directly downwind. If the tent is pitched on snow with

the entrance directly downwind, the entrance may become blocked, since snow tends to pile up in the lee of any object.

d. If site is not temporary, dig tent into snow. This will provide better protection from the wind. In open terrain with a strong wind, it may be necessary to build a snow wall on the windward side of the tent to protect it from the wind; thus the tent is easier to heat and is less likely to blow down. Leave some space between sides of tent and snow wall to have room to shovel out snow that may drift into tent.

e. When a tent is pitched on a slope, a horizontal platform should be formed. The snow which is removed may be packed around the outer edge of the platform to widen the space for the tent.

f. High winds, common in cold weather regions, require that tents be anchored securely. Tent pins may not provide sufficient anchorage. Arctic tents have snow cloths sewed along the bottom edge of tent walls. When an arctic tent is set up, snow, cloths should be flat on the ground outside the tent. Place snow, snow or ice blocks, stones, logs, or other heavy objects on the cloths to help anchor the tent.

g. Do not attempt to drive tent pins into hard, frozen ground if the force required is excessive. Instead, chop small holes into the ground, insert tent pins into holes, and fill holes with slush or water; in a short time the tent pins will be firmly anchored. When removing pins from frozen ground, always chop them out; never hammer them sideways to break them loose.

h. Snow carried into a tent will melt and wet sleeping bags and clothing. The following precautions should be taken to keep snow out of tents:

(1) Each man must take care to brush all snow from his clothing and boots before entering a tent.

(2) One man should enter the tent first and take the sleeping bags, packs, and other articles from the other man after the items have been brushed off completely.

31. Trenching Tent

a. A safe rule to follow is to always trench a tent. When the tent is pitched on heavy soil, clay, or a flat rocky surface, a trench should always be dug. When the tent is set up on a very sandy soil, which absorbs water as fast as it falls, or when it is located on a mound which slopes off in all directions, a trench may not be necessary.

b. Dig trench all around the tent (fig 103 and 104). Cut straight down just outside footstop pins; do not dig in a V-shape. Slope the side away from the tent.

c. Throw dirt from trench away from the

tent; never throw it against the tent, for it will quickly rot the canvas.

d. In most cases, do not dig trench more than 4 or 5 inches deep and in the shallowest place not over 3 inches. There should be enough slope in the trench so that the water will flow freely toward the outlet and not back up.

e. To carry the water off, dig an outlet ditch (fig 104) at the lowest point of the area and connect it to the trench which has been dug around the tent.

f. When there is a possibility that water may flow in from higher ground, dig a ditch to divert the water before it can reach the tent.

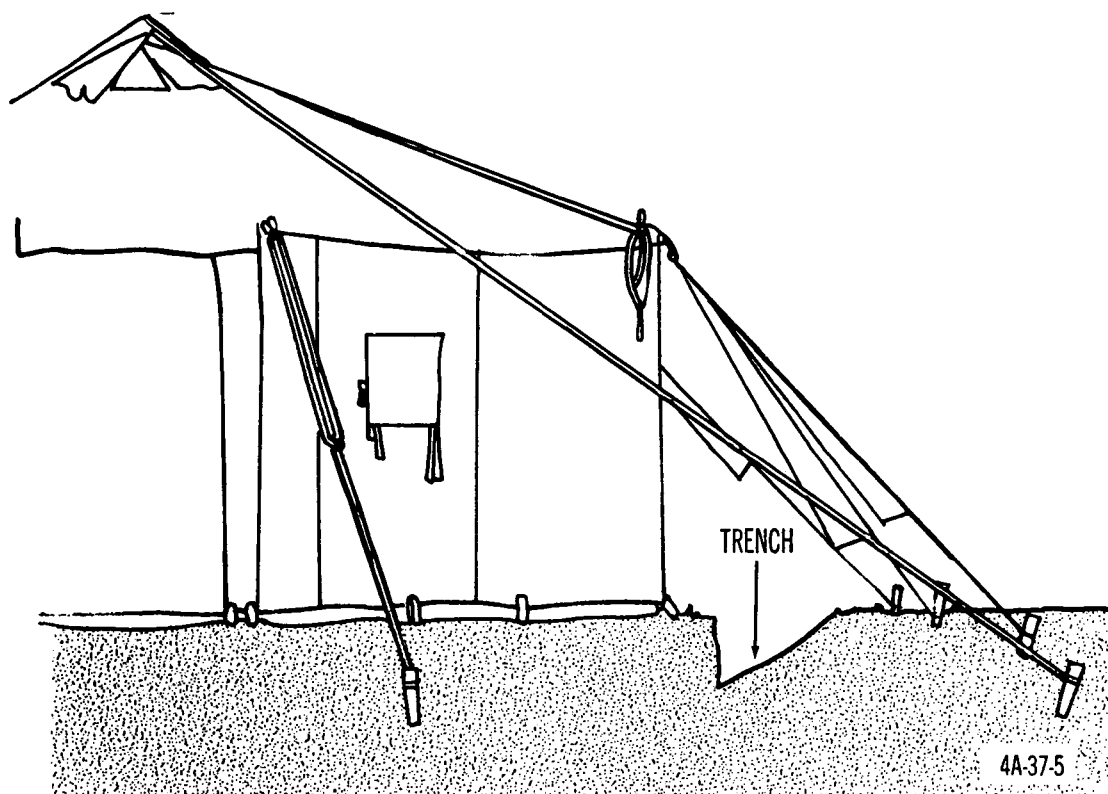


Figure 103. Cross-section view of tent trench.

32. Heating


a. *Stoves and Heaters.* Information on the types, quantity required, and operation of stoves and/or heaters authorized for use with tents can be found in appropriate technical manuals.

b. *Stovepipe Openings.* Stovepipe openings are built into most tents. Some openings are reinforced and the tent protected against the head of the stack; others are not protected. Metal shields, which are available, should be placed in the stovepipe openings of tents where there is no reinforcement or heat protection for tent material. Stovepipe openings have canvas flaps attached, which may be

closed for protection against the weather and left open for ventilation when stoves are not in operation.

c. *Heating Individual Shelters.* Normally, there is no provision for heating the 2-man mountain tent. However, when men are forced to stay in it for long periods of time or when the men are wet and need to dry off, one or more of the following expedient measures can be used.

(1) A brush fire can be built over the area on which the tent is to be pitched and kept going for an hour or two. Then, the area should be cleared of all coals and sparks and the tent set up. The ground will remain warm

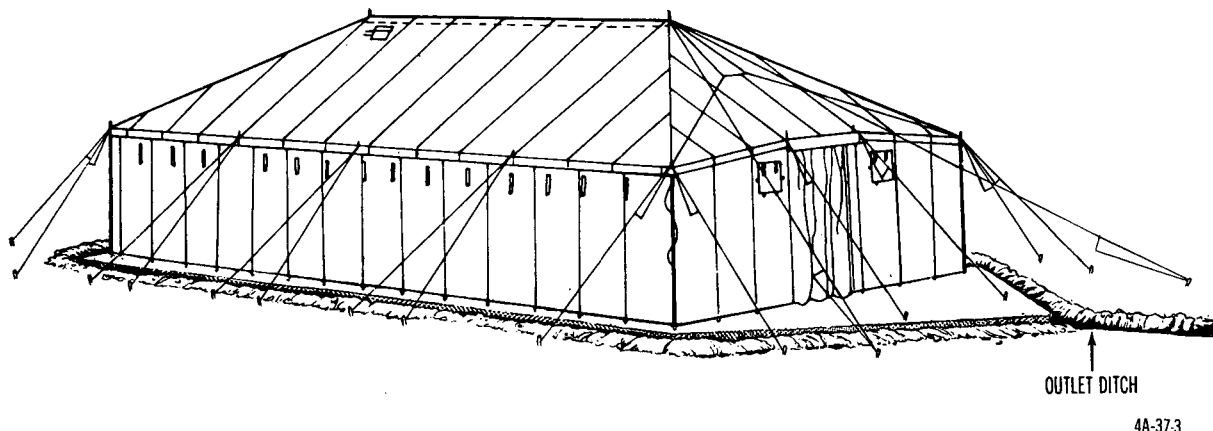

4A-373

Figure 104. Trenching a tent.

for several hours, and the earth will be dry to sleep on.

(2) Stones 5 or 6 inches in diameter can be put in a hot fire for 2 or 3 hours, and then rolled or lifted with forked sticks into the tent. If a bucket or other metal container is handy, it can be used to hold the rocks or it can be placed upside down over them. The rocks will continue to give off heat for several hours. If there is not sufficient room to pile hot rocks in the tent safely, dig a hole and fill it with hot rocks even with, or slightly below, the surface of the ground.

(3) Although the one-burner cooking stoves issued are intended for cooking purposes, their heat will also take the chill off the inside of individual shelters. However, be extremely careful of this method of heating the two-man mountain shelter because of the danger of carbon monoxide.

(4) A gasoline lantern is an excellent heat-

er, and even candle lanterns will take off the chill.

33. Ventilation

It is extremely important that a tent used for housing personnel or for sheltering working parties be ventilated properly. Most tents have built-in ventilators of various types. When stoves are not being used, stovepipe openings can be used for additional ventilation. In hot weather, the doors can be opened, and on most tents the sidewalls can be rolled up, or the windows opened, to give free circulation of air. The air coming in around the bottom of the tent should never be depended upon for ventilation. If the sod cloth or snow cloth is properly weighted down, very little air will enter. The bottom edge of the tent is the least desirable from which to get ventilation. It is like trying to ventilate a house through the cracks in the floor.

CHAPTER 7

INSPECTION, CLEANING AND CARE

Section I. TENTAGE

34. General

Probably the greatest amount of damage to tentage is caused by carelessness, such as forgetting to loosen the lines when it starts to rain, not bothering to use spark arresters or draft diverters, adjusting lines carelessly, driving pins in a slipshod manner, or dragging tents over rough ground. To prolong the life and usefulness of tentage, observe the following rules:

a. Pitch, strike, and fold tentage in the manner described in this manual. Do not try to take shortcuts unless you are sure no damage will be done. To protect the top of the tent during handling and in storage, fold the tent so that the sidewalls rather than the top of the tent will be exposed.

b. Observe the utmost care when pitching and striking tents, making sure the material does not tear on protruding pins, overhanging branches, or other objects.

c. Never drag a tent along the ground or floor.

d. Use all the necessary parts and accessories for each tent and use them for their intended purpose.

e. Pack tents carefully for shipment. Some tents are issued complete with bag or cover. In this case, carry tent in bag or cover. When no bag or cover is issued, the tent is usually received wrapped in osnaburg or burlap. Save this material for rewinding when the tent has to be moved again. Normally, a tent should never be transported without a covering of some kind. make sure that it is in serviceable condition.

f. Pack pins and poles separately from the tent itself except when tent instructions require them to be packed with the tent.

g. Inspect tentage at frequent intervals to be sure that it is in serviceable condition. Particular attention should be given to seams, bindings, lines, and all places where strain is exerted. Be constantly on the lookout for—

(1) Any evidence of mildew.

(2) Any foreign matter which may have collected on the tent.

(3) Small rips and holes, splitting of seams, grommets which have become loose, lines which are beginning to rot, or anything else which does not appear to be in normal condition.

35. Protection Against Rain

a. Most tents are water repellent. However, rain causes tent canvas and lines to shrink, the shrinkage often becoming sufficient to tear the tent. Tents have been torn completely in two under such circumstances.

b. Before tent lines become water soaked, loosen them sufficiently so that when they shrink they will not become tight enough to tear the tent. To compensate for shrinkage, eave and corner lines should have a free swing of approximately 18 inches at the middle of the line.

36. Protection Against Wind

In a strong wind, tighten all lines immediately. Close door entrances, secure walls to foot-stop pins, and close all corners.

37. Protection Against Fire

a. Most tents are fire resistant. This does not mean that they will not burn; they usually do not burst into flame, but smolder and char.

b. When using a stove in a tent, every precaution must be taken to avoid fires. Spark arresters or draft diverters must be installed and shields placed around stovepipe openings. All personnel should be well trained in building and maintaining stove fires and should be familiar with all fire regulations.

c. Whenever possible, fire extinguishers containing water should be kept in the tent area.

38. Protection Against Mildew

a. Most tents are mildew resistant. This does not mean that they are not subject to mildew. Under warm and damp conditions, especially in tropical and jungle areas, tents

may be ruined by mildew in a few days, if proper care is not taken.

b. To prevent mildew, follow these rules:

(1) Never fold or roll a tent when wet. Even if it is only damp from dew, it will mildew when stored. Make doubly sure that the seams and edges of the tent, especially the bottom edge and the sod cloth, are dry.

(2) When storing or transporting, keep pins and poles separate from tents, except when tent instructions require them to be packed with the tent. In the case of the latter, make sure the pins and poles are cleaned and dried before being placed with the tent.

(3) Keep tents clean at all times. If a tent is pitched under trees, inspect the tent roof frequently to see if it is being harmed by drippings from branches or leaves. The growth of fungi and mold is caused to some extent by tree drippings, oils, greases, and starches, which accumulate on tentage.

(4) Before storing, dry a tent by hanging it up off the ground in bright sunlight. A tent dried on the ground or left hanging outdoors after sundown might absorb enough dampness for mildew to start. When necessary, a tent can be dried indoors. When drying indoors, hang the tent in a well-ventilated place, high enough to permit the tent to be suspended off the floor.

(5) Do not drag tentage along the ground or permit it to come in contact with the ground while in storage.

(6) When storing tents, stack them on dunnage supported by 2- by 4-inch lumber.

(a) If the floor is hard surfaced or wooden, the tentage should be at least 4 inches from the floor.

(b) If the floor is earthen, the tentage should be at least 8 inches from the ground.

(c) Only lumber that has been thoroughly cured should be used for dunnage, since the

moisture contained in green lumber will promote the growth of mildew.

(d) When dampness in the atmosphere is prevalent, dunnage should be used between each course to permit circulation of air between the blocks. The blocks should be separated and reduced to a minimum number of courses to permit passage of air on all four sides.

(7) When tents are to be stacked near ventilators or openings that may admit moisture, protect tents by packing them in bags or waterproof coverings.

(8) Do not place tentage received from the field in bags until tents are thoroughly dried and all dirt removed by stiff brushes. If any visible signs of mildew are present, hang tents in open air, preferably in the sun.

(9) Give priority of issue to tentage that has been in storage the longest. To prevent issue of newly stored tentage before older stocks are exhausted, blocks should be marked in accordance with length of time tentage has been in storage.

(10) When tentage is stored in open sheds or in tents it should be stacked well away from the sides and ends of shelter (preferably about 2 feet), and items not affected by moisture should be stacked between tentage and outer edges of shelter.

(11) Withdraw from storage tentage found to be infected with mildew. Brush with a stiff brush, allow to dry thoroughly, and issue immediately to installations where driest atmospheric conditions prevail. If there is no opportunity for immediate issue, segregate infected tentage from sound tentage to prevent contamination. Tents which have become unserviceable should be turned in to a salvage installation for classification, repair, and return to stock, or for destruction.

Section II. FRAMES

39. Wood Frames

a. Care should be taken in handling wood frames to see that they are not broken or otherwise damaged. In determining the serviceability of frame arches and purlins, look for cracks, breaks, and loose, damaged, or missing hardware.

b. Keep frame components clean and free from dirt, mud, rust, and other foreign matter. Remove all damaged paint, and repaint frame surfaces with paint authorized for the tent.

c. When preparing wood frames for shipment, pack components as described in this manual. Care should be taken to prevent drop-

ping or otherwise mishandling of packaged frame components.

40. Metal Frames

a. *Steel Frames.* In determining the serviceability of steel frames, look for cracked, bent, broken, or misshapen frame components. Keep frame clean and free from dirt, mud, snow, rust, and other foreign matter. Pack frame components so that undue strain will not be placed on any one piece. Care should be taken to prevent dropping or otherwise mishandling packaged frame components.

b. Aluminum Frames. Inspect all components of the frame for broken welds, bends, breaks, cracks, loose or missing rivets, missing items, corrosion, and other visible damage of any nature. Wipe metal surfaces clean, or if necessary, wash frame with soapy water, rinse with clean water and dry thoroughly. Keep dirt or other foreign matter out of joints and open ends of frame components. Pack frame components as described in this manual. Do not drop or mishandle the frame.

c. Magnesium Frames. In determining the serviceability of magnesium frames, look for broken welds, bends, cracks, breaks, missing items, stripped threads on bolts, corrosion, and other visible damage. Clean frame components with soapy water, rinse with clear water, and dry thoroughly. When assembling or disassembling the frame, keep dirt or other foreign matter out of open ends of frame components. Do not drop or otherwise mishandle frame pieces when transporting tent.

Section III. PINS, POLES, AND LINES

41. Pins

All wooden tent pins currently issued receive a wood-preservative treatment. Care should be taken in handling pins to see that they are not broken or otherwise damaged. In determining the serviceability of pins, look for cracks, splits, distorted ends, and broken or flattened points.

42. Poles

Care should be taken in handling tent poles to see that they are not broken or otherwise damaged. In determining the serviceability of poles, look for cracks, splits, condition of metal joiners, and missing or bent spindles.

43. Lines

Lines should be inspected frequently. The stability and safety of the tent may depend on the condition of the various lines used. Deterioration in tent lines is of two kinds: physical and chemical. Physical damage is caused by surface wear or from internal friction between the fibers. Chemical damage is caused by exposure to weather conditions and acids. To prevent damage to tent lines, observe the following rules:

a. Store lines properly in a dry, unheated building or in a room with free air circulation. Place lines in loose coils off the floor on wooden grating, or hang them on wooden pegs. It is best to hang small lines in loose coils and to coil large sizes loosely on a grating or platform raised from the floor to insure necessary circulation of air. Never store lines in a small confined space without air circulation. Clean thoroughly before storing. Continuous exposure to sunlight is injurious to lines. Improper storage conditions frequently cause dry rot.

b. Dry lines properly after exposure to dampness. Lines are best dried when hung loosely between two trees or other objects so that they do not come in contact with the ground.

c. Keep lines clean. If lines become dirty, they should be washed in clean water and thoroughly dried. Grit from sand, mud, or other materials, if allowed to remain and work into lines, will grind and wear the fibers.

d. Protect lines from chemicals. Keep lines away from chemicals or their fumes, especially acids or alkalis. Drying oils, such as linseed oil, and paint will also damage lines.

e. Slack off guy lines. When guy lines or other supports are exposed to the weather, slack them off to prevent overstrain because of shortening from wetting.

f. Reverse lines, end for end, periodically, so that all sections of the lines will receive equal wear. When wear is localized in a short section, periodical shortenings will present a new wearing surface.

g. If a line becomes damaged, cut and splice. A good splice is safer than a damaged section.

h. Whip ends of lines to prevent raveling.

APPENDIX A

REFERENCES

1. Army Regulations (AR)

- 310-50 Authorized Abbreviations and Brevity Codes.
- 310-25 Dictionary of United States Army Terms.
- 700-58 Report of Packaging and Handling Deficiencies.
- 750-5 Organization, Policies, and Responsibilities for Maintenance Operations.

2. Department of the Army Pamphlets (DA Pam)

- 108-1 Index of Army Motion Pictures and Related Audio-Visual Aids.
- 310-series Military Publications Indexes (as applicable).

3. Field Manuals (FM)

- 20-16 Air-Supported Tentage.
- 21-5 Military Training Management.
- 21-6 Techniques of Military Instruction.
- 21-15 Care and Use of Individual Clothing and Equipment.

4. Common Tables of Allowances (CTA)

- 50-901 Clothing and Equipment (Peace).
- 50-915 Allowances for Non-Heraldic Flags, Tentage, Sewing Machines, and Equipment for Civilian Guards.

5. Army Subject Schedules (ASubjScd)

- 8-7 Tent Pitching.
- 10-461 MOS Technical Training of Textile Repairman—MOS 461.1—Textile Repairman, Clothing Repairman, and Tailor.

6. Technical Manuals (TM)

- 10-267 General Repair for Clothing and Textiles.
- 10-269 General Repair for Canvas and Webbing.
- 10-270 Repair of Quartermaster Items of General Equipment.
- 10-4500-200-13 Operator, Organizational and Direct Support Maintenance Manual Including Repair Parts and Special Tool Lists: Heaters, Space: Radiant Type, Portable (Type I, Model M1941, Solid Fuel) FSN 4520-277-4877 (Type II, Model M1941, Liquid Fuel) FSN 4520-927-4214 (Yukon Model M1950, Solid or Liquid Fuel) FSN 4520-287-3353; Heaters, Immersion: Liquid Fuel Fired For Corrugated Cans (All Makes and Models) FSN 4540-266-6835 (Preway Model 447-2EX) FSN 4540-453-9146 For Tank Trailer, (All Makes and Models) FSN 4540-266-8834.
- 10-8340-203-10 Operator's Manual: Tentage For HAWK Missile Equipment: Tent, Frame Type, Maintenance, 40-ft. by 20-ft. (FSN 8340-753-6227); Tent, Maintenance Missile Test Shop (FSN 8340-753-6255); Tent, Pulse Acquisition Radar, Aft (FSN 8340-753-6260); Tent, Pulse Acquisition

- Radar, Front (FSN 8340-753-6259); Tent, Range Only Radar, CW Acquisition and CW Illuminator (FSN 8340-823-6965); Tent, CW Acquisition and Illuminator (FSN 8340-753-6254); Cover, HAWK Missile (FSN 8340-064-5050).
- 10-8340-203-23 Organizational and Direct Support Maintenance Manual: Tentage for HAWK Missile Equipment; Tent, Frame Type, Maintenance, 40 ft. by 20 ft. (FSN 8340-753-6227); Tent, Maintenance Missile Test Shop (FSN 8340-753-6255); Tent, Pulse Acquisition Radar, Aft (FSN 8340-753-6260); Tent, Pulse Acquisition Radar, Front (FSN 8340-753-6259); Tent, Range Only Radar, CW Acquisition CW Illuminator (FSN 8340-823-6965); Tent, CW Acquisition and Illuminator (FSN 8340-753-6254); Cover, HAWK Missile (FSN 8340-064-5050).
- 10-8340-203-24P Organizational and Field Maintenance Repair Parts and Special Tool Lists; Tentage for HAWK Missile Equipment: Tent, Frame Type, Maintenance, 40 ft by 20 ft (FSN 8340-753-6227); Tent, Maintenance Missile Test Shop (FSN 8340-753-6255); Tent, Pulse Acquisition Radar, Aft (FSN 8340-753-6260); Tent, Pulse Acquisition Radar, Front (FSN 8340-753-6259); Tent Range Only Radar, CW Acquisition and CW Illuminator (FSN 8340-823-6965); Tent, CW Acquisition and Illuminator (FSN 8340-753-6254); Cover, HAWK Missile (FSN 8340-064-5050).
- 10-8340-205-13 Operator, Organizational and Direct Support Maintenance Manual, Tent, Kitchen; Flyproof; Without Floor, Floor Area Dim., 18 ft lg, 12 ft w (Model M1948) FSN 8340-262-3687.
- 10-8340-208-13 Operator, Organizational, and Field (Third Echelon) Maintenance Manual: Tent, Vehicle, Maintenance, With Cover, Pins and Support (FSN 8340-889-3686).

7. Supply Bulletin (SB)

- 700-20 Army Adopted Items of Materiel and List of Reportable Items.

APPENDIX B

SHORT FEDERAL STOCK NUMBER NOMENCLATURE

The following table lists the short Federal stock number nomenclature* for identification purposes only. The items are listed alphabetically with Federal stock number, line item number, and text paragraph references and figure references, when appropriate.

Nomenclature	FSN	LIN	Paragraph and Figure References
PANEL MARKER: Red Cross Cotton Duck Vinyl-Coated			
Center Section	8345-174-0804		para 22
Intermediate Section	8345-174-0802		para 22
End Section	8345-174-0803		para 22
PANEL MARKER: Red Cross Cotton Duck Vinyl-Coated	8345-174-6864	NOV57568	para 23, figure 95
SCREEN LATRINE: Fire Mildew Water Weather Resistance w/Pins Poles	8340-237-8752	S58674	para 24, figure 96
TENT: Arctic 10-Man FMWWR w/Cover	8340-262-3685	V47071	para 4, figure 1
TENT: Assembly M-1942 FMWWR w/Covers	8340-262-2877	V47345	para 5, figure 6
TENT: Command Post M-1945	8340-269-1370	V47619	para 6, figure 13
TENT: Frame-Type Insulated Sectional M-1948	8340-262-2399	V48030	para 14, figure 63
TENT: Frame-Type Maintenance With Components	8340-951-6419	V48441	para 13, figure 48
TENT: Frame-Type Wall Lightweight Expandable OG 107 FMWWR w/Components	8340-782-3232	V48510	para 16, figure 75
TENT: General Purpose Large FMWWR OD w/Cover Pins and Poles	8340-285-5599	V48578	para 7, figure 19
TENT: General Purpose Medium Without Windows	8340-543-7788	V48989	para 8, figure 25
TENT: General Purpose Small With Cover Pins and Poles	8340-753-6571	V49126	para 9, figure 31
TENT: Hexagonal Lightweight M-1950	8340-269-1374	V49537	para 10, figure 35
TENT: Kitchen Flyproof M-1948 With Cover Pins and Poles	8340-262-3687	V49948	para 11, figure 39
TENT: Maintenance Shelter With Components	8340-257-2557	V50222	para 15, figure 73
TENT MISSILE SYSTEM EQUIPMENT CONSOLE: Maintenance Test Shop	8340-753-6255	V52414	para 18, figure 87
TENT MISSILE SYSTEM EQUIPMENT CONSOLE: Pulse Acq Radar Front	8340-753-6259	V52551	para 19, figure 90
TENT MISSILE SYSTEM EQUIPMENT CONSOLE: Pulse Radar Aft	8340-753-6260	V52688	para 20, figure 92
TENT MISSILE SYSTEM EQUIPMENT CONSOLE: Range Radar	8340-823-6965	V52825	para 21, figure 93
TENT: Mountain 2-Man FMWWR Olive Drab w/Cloth Flooring Material	8340-254-5348	V50496	para 12, figure 45
TENT VEHICLE MAINTENANCE: MRWR With Cover Pin Support	8340-889-3686	V53921	para 17, figure 79

*SB 700-20 Army Adopted Items of Materiel and List of Reportable Items.

By Order of the Secretary of the Army:

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

W. C. WESTMORELAND,
General, United States Army,
Chief of Staff.

DISTRIBUTION:

To be distributed in accordance with DA Form 12-11 requirements for Tentage.